

By: George Poulos

*NOTICE you must have NVR Firmware V4.61.000 Build 230607 installed for this function to work correctly.

NVR Models Supported – LTN86**P* Series NVR FW- Download Link IP Camera Model:

CMIP3D82W-M28 G5 - 5.7.1 Build 230330 or above

CMIP3C8PW-SDL - 5.7.1 build 220902 or above

CMIP3C42W-28SDL - V5.7.1 build 220506 or above

STEP 1: (NVR) – Upgrade NVR Firmware to V4.61.000 Build 230607 & Full Factory Reset

Platinum	Live	View	Playback	File	Appli	cation	Cor	figuration
🖵 Local		Upgi	rade & Maintenan	ce Or	line Upgra	de	Log	Diagnose
System	^		Reboot					
System Settings			1	Reboot the d	evice.	Reboot		
Maintenance								
Security			Default					
User Managemer	nt	F	Reset all the parar	meters, exce	pt t	Restore		
Camera Manager	nent	F	Restore all parame	eters to defai	ult s	Default		
Live View Setting	s		Export					



STEP 2: Configure IP Camera via Web browser login

STEP 2a: Make sure Notify Surveillance Center & Audio Light Alarm are disabled

- Setup Intrusion or Line cross VCA

Platinum Live View F	layback Picture Application	Configuration	Platinum	Live View Playba	ck Picture Ap	oplication Configuration	Download
Platinum Live View F Local Camera System Scene Change Detect Image Exent Enable Intrusion Image Event Region Storage Vehicle Detection Region Vehicle Detection Vo VCA Image Capture Image Introduction Image Capture Image Image Capture Image Capture Image Image Capture Image Capture Image Image Capture Image	tayback Picture Application 3 [D5] 8MP AI G5 on Intrusion Detection Line Crossing Detection Detection Arming Schedule Linkage Method 1 Image: Schedule Image: Schedule Linkage Method Image: Schedule Linkage Method	Configuration Dr 1 Region Entrance Detection Region Entrance Detection Region Exiting Detection Min Size: - Setup the minimum size of the human object, to be larger than the "Min" Size. Objects smaller than the "Min" wont trigger Max Size: - Set Max size corresponding to the largest a human object can be in the field of view Threshold: - Coresponds to the dwell time of an object can stay in the yellow area before triggering an alarm.	Platinum Local System Network Image Image Event Basic Event Storage Vehicle Detection Volicio Detection Volicio Detection Validation Validation	Live View Playbar Camera 3 Scene Change Detection C Enable Intrusion Detection Area Settings Armine Normal Linkage Audible Warning Send Email Notify Surveillance Ce Full Screen Monitoring	ck Picture Ap	g Detection Region Entrance Detection g Detection Region Entrance Detection Audio and Light Alarm Link. 192.168.0.241:8000->Sound these are d on	Trigger Recording D1 D2 D4 D5 D6 D7 D8
Detection Target	6 Human Vehicle	an alarm.					
Threshold(s) Sensitivity	[®] 7	Vende Savere to Backer Providence Vender Autor Savere Vender Vender Autor Vender Vende		🖹 Save	8		



STEP 3: Enable Virtual host (NVR)

👪 Target Capture

STEP 4: Login to IP Camera

Platinum	Live View Playback Picture Application Co	Platinum Platinum	Live View	Playback	Picture	Applica	tion Config	uration		Down	lload Plug-in
	SNMP Email PT Cloud Network Service 802.1x Otther Integratio	n Protocol Smor	PoE Channel	Camera 3							
Svstem	Alarm Host IP 4	System	IP Camera			Add	Modify D	elete Quick	Add Custom F	rotocol	Activation
Ra Network	Alarm Host Port 0	System Settings	Channel No.	Camera Name	IP Address	Channel No.	Management Port	Security	Status	Protocol	Connect
	Multicast Address	Maintenance	D1	8MP	192.168.188.18	1	8000	N/A	Online	LTS	http://192.16
Basic Settings		Security 2	D2	4MP	192.168.188.13	1	8000	N/A	Online	ITO	http://102.16
Advanced Settings	Video Download Bandwidth 262144 Kbps	Camera Management	D3	8MP Bullet	192.168.188.4	1	8000	Logi	n to IP	Can	nera ^s
Video/Audio 🤰	Enable Virtual Host	User Management	D4	6MP	192.168.188.19	1	8000				
	Enable IP Camera Occupation Detection	Live View Settings	D5	8MP AI G5	192.168.0.241	1	8000	Weak	Online	LTS	http://192.16
intage		Network	D6	Black C247	192.168.0.213	1	8000	Weak	Online	LTS	http:/
Event		Video/Audio	D7	C247 ext	192.168.0.214	1	8000	Weak	Online	LTS	http:/ 4
🖺 Storage	Save 6	-0									
C Vehicle Detection											
CA VCA											

STEP 5: Set Target Validity to "Highest" (IP Camera)

STEP 6: Set up event recording – if both Motion/Event record is required (NVR)



STEP 7: After Registering an account on LTS Connect APP:

On the NVR - Configuration -> Network -> Advanced Configuration -> PT Cloud

Activate Flashing Light &

Audio Warning in LTS

Connect.

- 1. Enable PT Cloud
- 2. Scan the QR Code to register the NVR to your APP
- 3. Test to see cameras are online

(shut down & restart app if cameras come up offline)

STEP 8: Enabling Active Guard on LTS Connect



LTS Connect – Active Guard Setup



≣ ⊙ Q + Device Favorites 6 ... Active Guard 0 00 Share Settings Add t \bigcirc Ì. Settings Active Guard NVR-8-A-AU Area Linked Camera 8 Notification Enable Storage Status V4.61.000 build 230607 **Device Version** No new version available. < 10 Enabled Area 1 Enabled Area 2 Area 3 Disabled Area 4 Disabled Area 1 < Enable Area 1 Linked Camera 3D82,Colour247,camera 4... Area Name Area 1 ON 11 Auto Arm 09:00 (Optional) Auto Arm Time 12 Auto Disarm 11:00 > Auto Disarm Time OFF Weekend Exception



≡ ⊙ Q	(†	≣ ⊙ Q
Favorites Device		Favorites Device
Active Guard	□ …	Active Guard
	2023 06-19 15:27-53	3D2
O	<u>а</u> 1	(
Active Guard	< 0	<
		Area
Area	Camera	Linked Camera
Area 1 Disarm	rea 2 sarm	Notification
	(1)	Storage Status
<u> </u>	~	Device Version
•	2	×
		Area 1
Setup additional	l Areas	Area 2

(Different zones)



Ð

Adding Cameras to Different Areas (Zones) you can add specific cameras you want to activate separately. Such as "Rear Shed" Or "Front Entry" to isolate certain cameras and setup specific Arming & Disarming for those zones.

