


IMPORTANT!

1. Make sure your Router supports 2.4GHZ & WPA/WPA2 Security
2. Password must be 8 digit numerical password only
3. The LTS doorbell only supports 8 digit numerical passwords
4. If your router does not support this then you will have to hardwire to your network

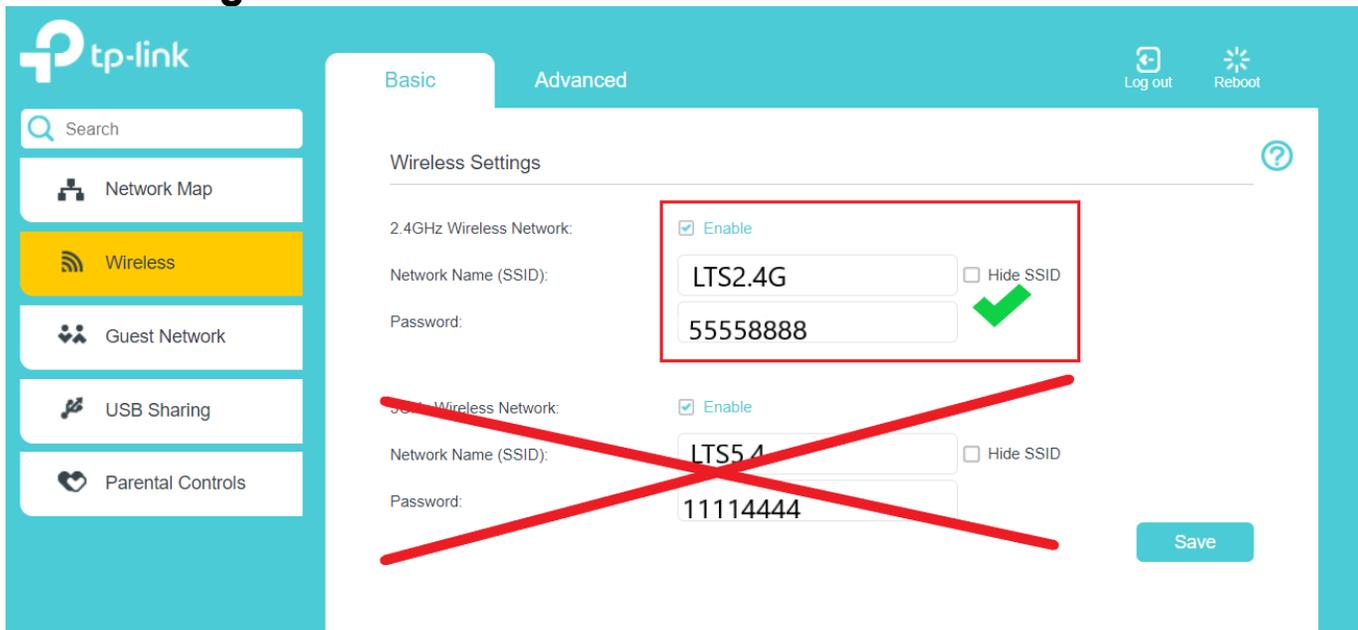



Connecting Commercial Doorbell via WiFi



Step 1.

Activate the Doorbell with LTS Platinum IP Portal

- <http://www.ltsecurityinc.com/downloads>
- Initially you can connect the device via POE to Activate it and give it an IP
Eg. 192.168.2.110

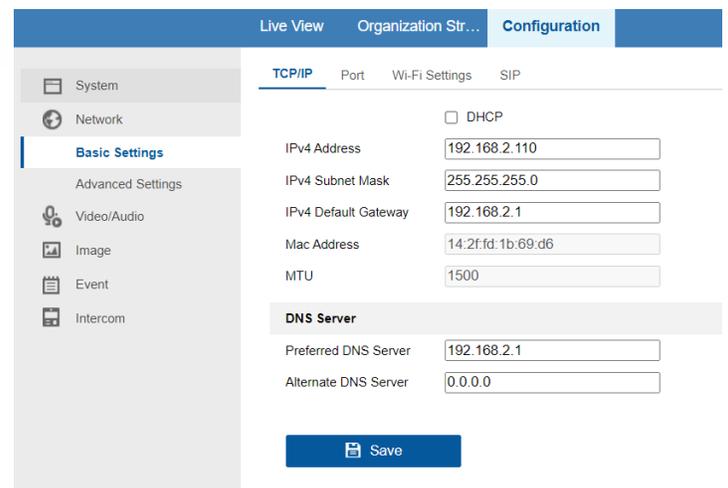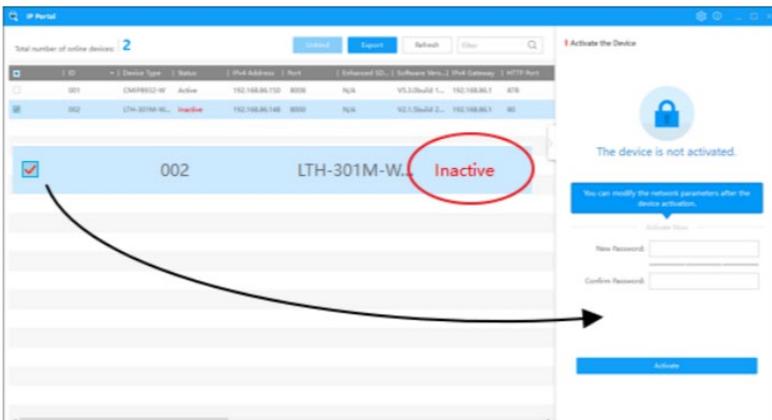

Step 2.


- Configure the WiFi Parameters
- Make sure the SSID is 100% identical to what is in your router
- Set Password and set Security Mode
- Press Connect and wait (you should get a notice saying connecting)

The screenshot shows the 'Configuration' page with the 'Wi-Fi Settings' tab selected. The settings are as follows:

Parameter	Value
SSID	LTS2.4G
Password	55558888
Security Mode	WPA/WPA2-personal

A 'Connect' button is visible below the settings. The left sidebar shows navigation options: System, Network, Basic Settings (selected), Advanced Settings, Video/Audio, Image, Event, and Intercom.

Terminal Wire Diagram:

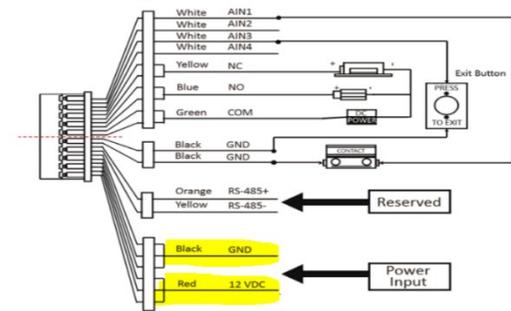

Step 3.

- After setting up the Device IP we recommend you disconnect the POE cable and connect by 12V plug pack (very important)
- This will reboot the device.
- You cannot use the WiFi function with POE injector or LAN cable connected.
- Once Device turns back on, the device should say "wifi connected" If this does not happen please revert back to Step 2.
- Once you get the wifi connected you can use the LTS 7" intercom monitor to add the device through the search method.
- You may need to restart the monitor after adding for them to work correctly.

***NOTE The IP address though WiFi will be different to the IP address through LAN connection. Do not use the LAN IP when trying to connect via WiFi.**

Once the device is connected to the monitor, you will notice the 7" Monitors IP address in the Doorbell here

The screenshot shows the 'Configuration' page with the 'Other' tab selected. The settings are as follows:

Parameter	Value
Device Type	Main Villa Door Station
Master Station IP	192.168.2.125
SIP Server IP Address	0.0.0.0
Center IP Address	0.0.0.0
Center Port No.	0

A 'Save' button is visible below the settings. The left sidebar shows navigation options: System, Network, Basic Settings, Advanced Settings (selected), Video/Audio, Image, Event, and Intercom.