

1. On the LTH-DCU set the dip switch to 1
2. Connect Wires from 4 pin connector supplied from the Camera module to the Secure door module RS-485
 - Yellow -> Blue
 - Orange -> Yellow
 - Red -> Red
 - Black -> Black

Setup of Secure Door Module:


Step 1:

Connect Camera Module to NVMS V3

- Make sure you are running latest version NVMS V3 version **NVMS_V3_V3.4.0.65_20210331**
- [Download](#)
- Make sure Camera module Firmware is upgraded to **V2.0.8_200115**
- [Download](#)

Step 2:

- Go to Remote setup
- IO input / Output
- Select Door 2
- Set output to SecureModule
- Save

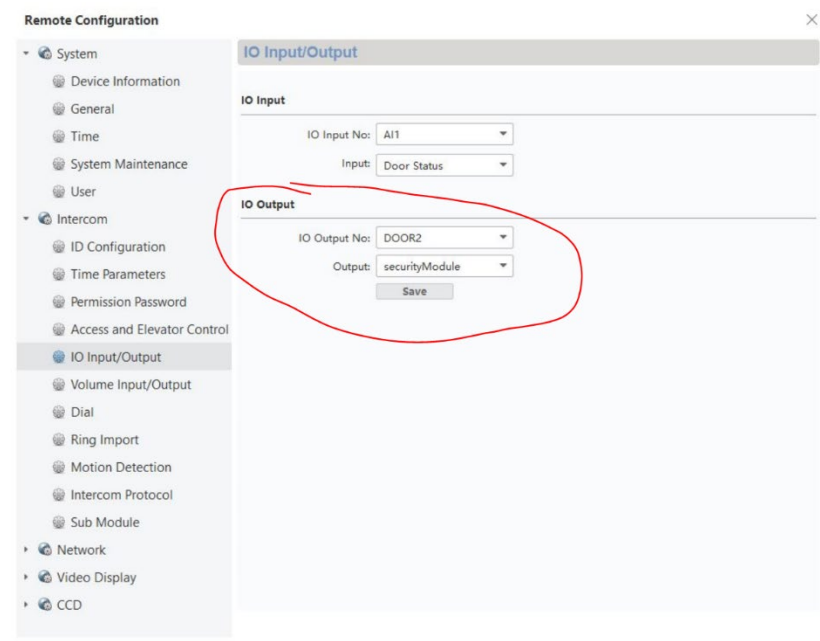

Notes:

To setup the relay open time – Go to "access and elevator control "