

Due to the increased security of our devices, when adding LTS cameras to 3<sup>rd</sup> Party NVR's its required to login to the IP Camera and enable ONVIF and setup a username / password accordingly.

1. Login to the IP camera via iexplorer (not edge)
2. Navigate to Configuration.
3. Advanced Settings
4. Integration Protocol
5. Enable Onvif
6. Press "Add"
7. Set user name e.g admin
8. Set level top administrator
9. Set password 8-16 characters -> e.g LTs888\$!

## Enabling Onvif & configuring Username / Password

- System
- Network
- Basic Settings
- Advanced Settings**
- Video/Audio
- Image
- Event
- Storage

SNMP   FTP   Email   Platform Access   HTTPS   QoS   802.1x   **Integration Protocol**   Network Service   Security Control Panel Configuration

Enable ONVIF

ONVIF Version

User List			Add	Modify	Delete
No.	User Name	Level			

Save