


Menu -> Configuration -> Live View -> View

1. Select what output you want to configure for spot monitor output / Live view



2. Select what cameras you want displayed & in what layout (Quad/ 9 split etc) You can move them around as you like.

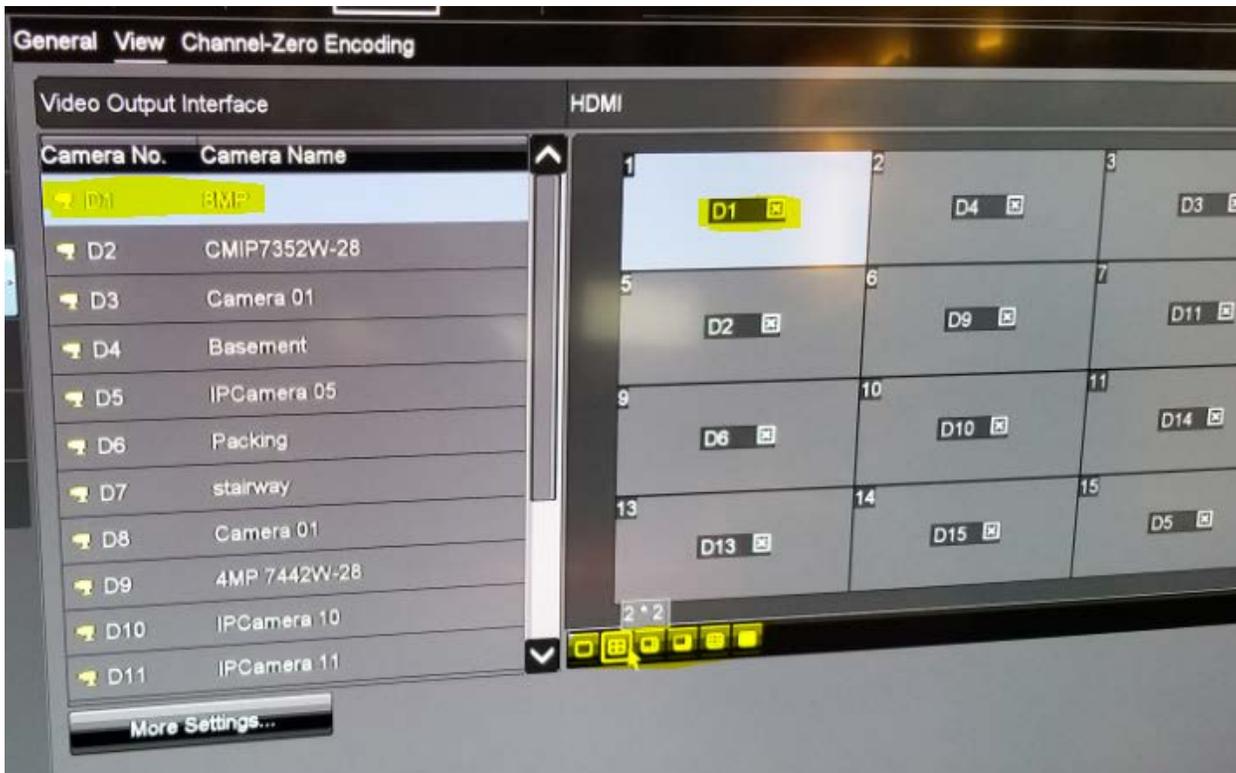

3. After configuring your layout for the Outputs. Go back to "General Tab"

4. Select the Output under "Video Output Interface" & Press Apply



5. Select the "Live view mode" you want displayed e.g for Quad select 2*2 or 9 split 3*3 & Press Apply

