Network Video Recorder

User Manual

User Manual

About this Manual

This Manual is applicable to Network Video Recorder (NVR).

The Manual includes instructions for using and managing the product. Pictures, charts, images and all other information hereinafter are for description and explanation only. The information contained in the Manual is subject to change, without notice, due to firmware updates or other reasons. Please find the latest version in the company website.

Please use this user manual under the guidance of professionals.

Legal Disclaimer

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, THE PRODUCT DESCRIBED, WITH ITS HARDWARE, SOFTWARE AND FIRMWARE, IS PROVIDED "AS IS", WITH ALL FAULTS AND ERRORS, AND OUR COMPANY MAKES NO WARRANTIES, EXPRESS OR IMPLIED, INCLUDING WITHOUT LIMITATION, MERCHANTABILITY, SATISFACTORY QUALITY, FITNESS FOR A PARTICULAR PURPOSE, AND NON-INFRINGEMENT OF THIRD PARTY. IN NO EVENT WILL OUR COMPANY, ITS DIRECTORS, OFFICERS, EMPLOYEES, OR AGENTS BE LIABLE TO YOU FOR ANY SPECIAL, CONSEQUENTIAL, INCIDENTAL, OR INDIRECT DAMAGES, INCLUDING, AMONG OTHERS, DAMAGES FOR LOSS OF BUSINESS PROFITS, BUSINESS INTERRUPTION, OR LOSS OF DATA OR DOCUMENTATION, IN CONNECTION WITH THE USE OF THIS PRODUCT, EVEN IF OUR COMPANY HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

REGARDING TO THE PRODUCT WITH INTERNET ACCESS, THE USE OF PRODUCT SHALL BE WHOLLY AT YOUR OWN RISKS. OUR COMPANY SHALL NOT TAKE ANY RESPONSIBILITES FOR ABNORMAL OPERATION, PRIVACY LEAKAGE OR OTHER DAMAGES RESULTING FROM CYBER ATTACK, HACKER ATTACK, VIRUS INSPECTION, OR OTHER INTERNET SECURITY RISKS; HOWEVER, OUR COMPANY WILL PROVIDE TIMELY TECHNICAL SUPPORT IF REQUIRED.

SURVEILLANCE LAWS VARY BY JURISDICTION. PLEASE CHECK ALL RELEVANT LAWS IN YOUR JURISDICTION BEFORE USING THIS PRODUCT IN ORDER TO ENSURE THAT YOUR USE CONFORMS THE APPLICABLE LAW. OUR COMPANY SHALL NOT BE LIABLE IN THE EVENT THAT THIS PRODUCT IS USED WITH ILLEGITIMATE PURPOSES.

IN THE EVENT OF ANY CONFLICTS BETWEEN THIS MANUAL AND THE APPLICABLE LAW, THE LATER PREVAILS.

Regulatory Information

FCC Information

Please take attention that changes or modification not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC compliance: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

FCC Conditions

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.

2. This device must accept any interference received, including interference that may cause undesired operation.

EU Conformity Statement

CE This product and - if applicable - the supplied accessories too are marked with "CE" and comply therefore with the applicable harmonized European standards listed under the EMC Directive 2014/30/EU, the LVD Directive 2014/35/EU, the RoHS Directive 2011/65/EU.



2012/19/EU (WEEE directive): Products marked with this symbol cannot be disposed of as unsorted municipal waste in the European Union. For proper recycling, return this product to your local supplier upon the purchase of equivalent new equipment, or

dispose of it at designated collection points. For more information see: www.recyclethis.info



2006/66/EC (battery directive): This product contains a battery that cannot be disposed of as unsorted municipal waste in the European Union. See the product documentation for specific battery information. The battery is marked with this symbol, which may include

lettering to indicate cadmium (Cd), lead (Pb), or mercury (Hg). For proper recycling, return the battery to your supplier or to a designated collection point. For more information see: www.recyclethis.info

Industry Canada ICES-003 Compliance

This device meets the CAN ICES-3 (A)/NMB-3(A) standards requirements.

Applicable Models

This manual is applicable to the models listed in the following table.

Series	Model
LTN86xx	LTN8608-P8
	LTN8616-P16
LTN86xxD	LTN8608D-P8
	LTN8616D-P16
	LTN8916
LTN89xx	LTN8916-P16
	LTN8932
	LTN8932-P16
	LTN8916H
	LTN8916H-P16
LTN89xxH	LTN8932H
	LTN8932H-P16
	LTN8932H-P24
LTN89xx-R	LTN8932-R
LINOYXX-N	LTN8964-R

Symbol Conventions

The symbols that may be found in this document are defined as follows.

Symbol	Description		
	Provides additional information to emphasize or supplement important points of the main text.		
WARNING Indicates a potentially hazardous situation, which if not avoide could result in equipment damage, data loss, performant degradation, or unexpected results.			
DANGER Indicates a hazard with a high level of risk, which if not avoided, result in death or serious injury.			

Safety Instructions

- Proper configuration of all passwords and other security settings is the responsibility of the installer and/or end-user.
- In the use of the product, you must be in strict compliance with the electrical safety regulations of the nation and region. Please refer to technical specifications for detailed information.
- Input voltage should meet both the SELV (Safety Extra Low Voltage) and the Limited Power Source with 100~240 VAC, 48 VDC or 12 VDC according to the IEC60950-1 standard. Please refer to technical specifications for detailed information.
- Do not connect several devices to one power adapter as adapter overload may cause over-heating or a fire hazard.
- Please make sure that the plug is firmly connected to the power socket.
- If smoke, odor or noise rise from the device, turn off the power at once and unplug the power cable, and then please contact the service center.

Preventive and Cautionary Tips

Before connecting and operating your device, please be advised of the following tips:

- Ensure unit is installed in a well-ventilated, dust-free environment.
- Unit is designed for indoor use only.
- Keep all liquids away from the device.
- Ensure environmental conditions meet factory specifications.
- Ensure unit is properly secured to a rack or shelf. Major shocks or jolts to the unit as a result of dropping it may cause damage to the sensitive electronics within the unit.
- Use the device in conjunction with an UPS if possible.
- Power down the unit before connecting and disconnecting accessories and peripherals.
- A factory recommended HDD should be used for this device.
- Improper use or replacement of the battery may result in hazard of explosion. Replace with the same or equivalent type only. Dispose of used batteries according to the instructions provided by the battery manufacturer.

Product Key Features

General

- Connectable to network cameras, network dome and encoders
- Connectable to the third-party network cameras like Acti, Arecont, Axis, Bosch, Brickcom, Canon, Panasonic, Pelco, Samsung, Sanyo. Sony, Vivotek and Zavio, and cameras that adopt ONVIF or PSIA protocol
- Connectable to smart IP cameras
- H.265+/H.265/ H.264+/H.264/MPEG4 video formats
- PAL/NTSC adaptive video inputs
- Each channel supports dual-stream
- Up to 8/16/32/64 network cameras can be added according to model
- Independent configuration for each channel, including resolution, frame rate, bit rate, image quality, etc.
- The quality of the input and output record is configurable

Local Monitoring

- HDMI/VGA1 and HDMI2/VGA2 outputs provided
- HDMI video output at up to 4K resolution
- Multi-screen display in live view is supported, and the display sequence of channels is adjustable
- Live view screen can be switched in groups. Manual switch and auto-switch are provided and the auto-switch interval is configurable
- Custom window-division live view layout configuration
- 3D positioning in live view
- Configurable main stream and sub-stream for the live view
- Quick setting menu is provided for live view
- POS information overlay on live view
- Motion detection, video tampering, video exception alert and video loss alert functions
- Privacy mask
- Multiple PTZ protocols supported; PTZ preset, patrol and pattern
- Zooming in by clicking the mouse and PTZ tracing by dragging mouse

HDD Management

- Up to 16 SATA hard disks and 1 eSATA disk can be connected for I16 models, and up to 8 SATA hard disks and 1 eSATA disk can be connected for I8 and K8 models
- Up to 8 TB storage capacity for each disk supported

- 8 network disks (NAS/IP SAN disk)
- S.M.A.R.T. and bad sector detection
- HDD group management
- Supports HDD standby function
- HDD property: redundancy, read-only, read/write (R/W)
- HDD quota management; different capacities can be assigned to different channels
- RAID 0, RAID 1, RAID 5, RAID 6 and RAID 10 are supported
- Hot-swappable RAID storage scheme can be enabled and disabled upon demand. 16 arrays can be configured
- Disk clone to the eSATA disk
- HDD health monitoring

Recording, Capture and Playback

- Holiday recording schedule configuration
- Continuous and event video recording parameters
- Multiple recording types: manual, continuous, alarm, motion, motion | alarm, motion & alarm VCA, and POS
- Eight recording time periods with separated recording types
- POS information overlay on image
- Pre-record and post-record for alarm, motion detection for recording, and pre-record time for schedule and manual recording
- Searching record files and captured pictures by events (alarm input/motion detection)
- Tag adding for record files, searching and playing back by tags
- Locking and unlocking record files
- Local redundant recording and capture
- Normal/Smart/custom video playback mode
- Playback by video synopsis
- Searching and playing back record files by channel number, recording type, start time, end time, etc.
- Supports playback by main stream or sub stream
- Smart search for the selected area in the video
- Zooming in when playback
- Reverse playback of multi-channel
- Supports pause, play reverse, speed up, speed down, skip forward, and skip backward when playback, and locating by dragging the mouse
- Supports thumbnails view and fast view during playback
- Up to 16-ch synchronous playback at 1080p real time

- Supports playback by transcoded stream
- Manual capture, continuous capture of video images and playback of captured pictures
- Supports enabling H.264+ to ensure high video quality with lowered bitrate

Files Management

- Search and export vehicle detection files and human appearance files
- Export video data by USB, SATA or eSATA device
- Export video clips when playback
- Either Normal or Hot Spare working mode is configurable to constitute an N+1 hot spare system

Alarm and Exception

- Configurable arming time of alarm input/output
- Alarm for video loss, motion detection, tampering, abnormal signal, video input/output standard mismatch, illegal login, network disconnected, IP confliction, abnormal record/capture, HDD error, and HDD full, etc.
- POS triggered alarm
- VCA detection alarm is supported
- Smart analysis for people counting and heat map
- Connectable to the thermal network camera
- Alarm triggers full screen monitoring, audio alarm, notifying surveillance center, sending e-mail and alarm output
- Automatic restore when system is abnormal

Other Local Functions

- Operable by front panel, mouse, remote control, or control keyboard
- Three-level user management; admin user is allowed to create many operating accounts and define their operating permission, which includes the limit to access any channel
- Admin password resetting by exporting/importing a GUID file
- Operation, alarm, exceptions, and log recording and searching
- Manually triggering and clearing alarms
- Import and export device configuration information

Network Function

- Two self-adaptive 10M/100M/1000 Mbps network interfaces
- IPv6 is supported
- TCP/IP protocol, DHCP, DNS, DDNS, NTP, IP PORTAL, SMTP, NFS, and iSCSI are supported
- TCP, UDP and RTP for unicast
- Auto/Manual port mapping by UPnPTM

- Support access by PT cloud
- Remote Web browser access by HTTPS ensures high security
- ANR (Automatic Network Replenishment) function is supported, which enables the IP camera to save the recording files in the local storage when the network is disconnected, and synchronizes the files to the device when the network is resumed
- Remote reverse playback via RTSP
- Supports accessing the platform via ONVIF
- Remote search, playback, download, locking and unlocking of the record files, and supports downloading files upon broken transfer resume
- Remote parameters setup; remote import/export of device parameters
- Remote viewing of the device status, system logs and alarm status
- Remote keyboard operation
- Remote HDD formatting and program upgrading
- Remote system restart and shutdown
- RS-232, RS-485 transparent channel transmission
- Alarm and exception information can be sent to the remote host
- Remotely start/stop recording
- Remotely start/stop alarm output
- Remote PTZ control
- Remote JPEG capture
- Virtual host function to access and manage the IP camera directly
- Two-way audio and voice broadcasting
- Embedded Web server

Development Scalability

- SDK for Windows system
- Source code of application software for demo
- Development support and training for application system

TABLE OF CONTENTS

Chapter 1 Introduction
1.1 Front Panel17
1.1.1 LTN89xx-R Series17
1.1.2 LTN89xx(H) Series21
1.1.3 LTN86xx(D) Series26
1.2 IR Remote Control Operations29
1.3 USB Mouse Operation35
1.4 Rear Panel
1.4.1 LTN89xx-R Series36
1.4.2 LTN86xx(D) Series37
1.4.3 LTN89xx(H) Series39
Chapter 2 Getting Started
2.1 Start up the Device41
2.2 Activate the Device41
2.3 Configure Login Unlock Pattern43
2.4 Login to the Device44
2.4.1 Log in via Unlock Pattern44
2.4.2 Log in via a Password44
2.5 Start Setup Wizard45
2.6 Enter Main Menu49
2.7 System Operation50
2.7.1 Log out50
2.7.2 Shut Down the Device50
2.7.3 Reboot the Device50
Chapter 3 Camera Management
3.1 Add IP Cameras51
3.1.1 Add IP Cameras Manually51
3.1.2 Add the Automatically Searched Online IP Cameras
3.2 Manage Cameras for PoE Device52
3.2.1 Add PoE Cameras53
3.2.2 Add Non-PoE IP Cameras53
3.2.3 Configure PoE Interface53

3.3 Enable the H.265 Stream Access	55
3.4 Upgrade the IP Camera	55
3.5 Configure the Customized Protocols	55
Chapter 4 Camera Settings	57
4.1 Configure OSD Settings	
4.2 Configure Privacy Mask	58
4.3 Configure the Image Parameters	59
4.4 Configure the Day/Night Switch	59
4.5 Configure Other Camera Parameters	59
Chapter 5 Live View	61
5.1 Start Live View	61
5.1.1 Digital Zoom	61
5.1.2 Fisheye View	61
5.1.3 3D Positioning	62
5.1.4 Live View Strategy	63
5.2 Target Detection	63
5.3 Configure Live View Settings	64
5.4 Configure Live View Layout	64
5.4.1 Configure Custom Live View Layout	64
5.4.2 Configure Live View Mode	65
5.5 Configure Camera Auto-Switch	66
5.6 Configure Channel-Zero Encoding	66
Chapter 6 PTZ Control	68
6.1 PTZ Control Wizard	68
6.2 ConfigurePTZ Parameters	68
6.3 Set PTZ Presets, Patrols, and Patterns	69
6.3.1 Set Presets	69
6.3.2 Call Presets	70
6.3.3 Set Patrols	71
6.3.4 Call a Patrol	72
6.3.5 Set a Pattern	73
6.3.6 Call a Pattern	73
6.3.7 Set Linear Scan Limits	74
6.3.8 Call Linear Scan	75
6.3.9 One-Touch Park	75

6.4 Auxiliary Functions	75
Chapter 7 Storage	77
7.1 Storage Device Management	77
7.1.1 Install the HDD	77
7.1.2 Add the Network Disks	77
7.1.3 Configure eSATA for Data Storage	79
7.2 Storage Mode	80
7.2.1 Configure HDD Groups	80
7.2.2 Configure HDD Quota	82
7.3 Recording Parameters	83
7.3.1 Main Stream	83
7.3.2 Sub-Stream	83
7.3.3 Picture	84
7.3.4 ANR	84
7.3.5 Configure Advanced Recording Settings	84
7.4 Configure Recording Schedule	85
7.5 Configure Continuous Recording	87
7.6 Configure Motion Detection Triggered Recording	87
7.7 Configure Event Triggered Recording	88
7.8 Configure Alarm Triggered Recording	88
7.9 Configure POS Event Triggered Recording	89
7.10 Configure Picture Capture	89
7.11 Configure Holiday Recording and Capture	89
7.12 Configure Redundant Recording and Capture	91
Chapter 8 Disk Array (RAID)	93
8.1 Create a Disk Array	93
8.1.1 Enable a RAID	93
8.1.2 One-Touch Creation	94
8.1.3 Manual Creation	94
8.2 Rebuild an Array	96
8.2.1 Configure a Hot Spare Disk	96
8.2.2 Automatically Rebuild an Array	96
8.2.3 Manually Rebuild an Array	97
8.3 Delete an Array	98
8.4 Check and Edit Firmware	99

Chapter 9 File Management	
9.1 Search and Export All Files	
9.1.1 Search Files	
9.1.2 Export Files	
9.2 Search and Export Human Files	
9.2.1 Search Human Files	
9.2.2 Export Human Files	
9.3 Search and Export Vehicle Files	
9.3.1 Search Vehicle Files	
9.3.2 Export Vehicle Files	
9.4 Search History Operation	
9.4.1 Save Search Conditions	
9.4.2 Call Search History	
Chapter 10 Playback	
10.1 Play Video Files	
10.1.1 Instant Playback	
10.1.2 Play Normal Video	
10.1.3 Play Smart Searched Video	
10.1.4 Play Custom Searched Files	
10.1.5 Play Tag Files	
10.1.6 Play Event Files	
10.1.7 Play Video Synopsis	111
10.1.8 Play by Sub-periods	
10.1.9 Play Log Files	
10.1.10 Play External Files	
10.2 Playback Operations	
10.2.1 Set Play Strategy in Smart/Custom Mode	113
10.2.2 Edit Video Clips	114
10.2.3 Switch between Main Stream and Sub-Stream	114
10.2.4 Thumbnails View	115
10.2.5 Fisheye View	115
10.2.6 Fast View	116
10.2.7 Digital Zoom	116
10.2.8 POS Information Overlay	116
Chapter 11 Event and Alarm Settings	

11.1 Configure Arming Schedule	117
11.2 Configure Alarm Linkage Actions	117
11.3 Configure Motion Detection Alarms	119
11.4 Configure Video Loss Alarms	121
11.5 Configure Video Tampering Alarms	122
11.6 Configure Sensor Alarms	123
11.6.1 Configure Alarm Inputs	123
11.6.2 Configure One-Key Disarming	123
11.6.3 Configure Alarm Outputs	124
11.7 Configure Exceptions Alarms	126
11.8 Setting Alarm Linkage Actions	128
11.8.1 Configure Auto-Switch Full Screen Monitoring	128
11.8.2 Configure Audio Warning	128
11.8.3 Notify Surveillance Center	129
11.8.4 Configure E-mail Linkage	129
11.8.5 Trigger Alarm Outputs	129
11.8.6 Configure PTZ Linkage	129
11.9 Trigger or Clear Alarm Output Manually	130
Chapter 12 VCA Event Alarm	
12.1 Face Detection	132
12.2 Vehicle Detection	133
12.3 Line Crossing Detection	134
12.4 Intrusion Detection	135
12.5 Region Entrance Detection	137
12.6 Region Exiting Detection	138
12.7 Unattended Baggage Detection	139
12.8 Object Removal Detection	140
12.9 Audio Exception Detection	141
12.10 Sudden Scene Change Detection	142
12.11 Defocus Detection	143
12.12 PIR Alarm	144
12.13 Thermal Camera Detection	146
Chapter 13 Smart Analysis	147
13.1 People Counting	
13.2 Heat Map	147


Chapter 14 POS Configuration	
14.1 Configure POS Settings	149
14.1.1 Configure POS Connection	
14.1.2 Configure POS Text Overlay	153
14.2 Configure POS Alarm	
Chapter 15 Network Settings	
15.1 Configure TCP/IP Settings	155
15.1.1 Device with Dual Network Interface	155
15.1.2 Device with a Single Network Interface	156
15.2 Configure PT cloud	
15.3 Configure DDNS	158
15.4 Configure PPPoE	159
15.5 Configure NTP	159
15.6 Configure SNMP	
15.7 Configure Email	
15.8 Configure Ports	
Chapter 16 Hot Spare Device Backup	
16.2 Set Hot Spare Device	
16.3 Set Working Device	
16.4 Manage Hot Spare System	
Chapter 17 User Management and Security	
17.1 Manage User Accounts	
17.1.1 Add a User	
17.1.2 Edit the Admin User	
17.1.3 Edit an Operator/Guest User	
17.1.4 Delete a User	
17.2 Manage User Permissions	
17.2.1 Set User Permissions	
17.2.2 Set Local Live View Permission for Non-Admin Users	
17.2.3 Set Live View Permission on Lock Screen	
17.3 Configure Password Security	
17.3.1 Export GUID File	
17.3.2 Configure Security Questions	
17.4 Reset Password	
17.4.1 Reset Password by GUID	

17.4.2 Reset Password by Security Questions	178
Chapter 18 System Service Maintenance	179
18.1 Storage Device Maintenance	
18.1.1 Configure Disk Clone	179
18.1.2 S.M.A.R.T. Detection	180
18.1.3 Bad Sector Detection	181
18.1.4 HDD Health Detection	182
18.2 Search and Export Log Files	183
18.2.1 Search the Log Files	183
18.2.2 Export the Log Files	184
18.3 Import/Export IP Camera Configuration Files	185
18.4 Import/Export Device Configuration Files	187
18.5 Configure System Services	
18.5.1 I-VIEW-NOW UPNP Reporting	187
18.6 Configure Stream Encryption	188
18.7 Upgrade the System	189
18.7.1 Upgrade with a Local Backup Device	189
18.7.2 Upgrade by FTP	189
18.8 Restore Default Settings	191
Chapter 19 General System Settings	192
19.1 Configure General Settings	192
19.2 Configure Date & Time	193
19.3 Configure DST Settings	194
Chapter 20 Appendix	195
20.1 Glossary	195
20.2 Troubleshooting	197
20.3 Summary of Changes	205
Version 4.1.50	205
Version 4.1.10	205
Version 4.1.0	205
Version 3.4.92	205
Version 3.4.91	205
Version 3.4.90	205
Version 3.4.80	206
Version 3.4.70	206

Chapter 1 Introduction

1.1 Front Panel

1.1.1 LTN89xx-R Series

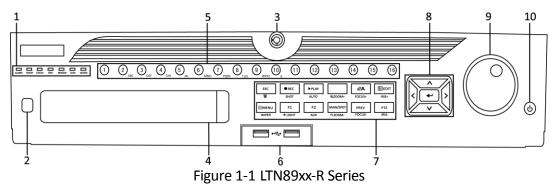

No.	Name		Function Description	
		ALARM	Turns red when a sensor alarm is detected.	
	READY properly. Turns blue when device is concentration STATUS Turns red when controlled by purple when IR remote and ket the same time.	READY	Turns blue when the device is functioning properly.	
			Turns blue when device is controlled by an IR remote.	
		Turns red when controlled by a keyboard and purple when IR remote and keyboard is used at the same time.		
1		HDD	Flickers red when data is being read from or written to HDD.	
	Indicators	MODEM	Reserved for future usage.	
		Tx/Rx	Flickers blue when network connection is functioning properly.	
			Turns blue when the device is in armed status; at this time, an alarm is enabled when an event is detected.	
		GUARD	Turns off when the device is unarmed. The arm/disarm status can be changed by pressing and holding on the ESC button for more than 3 seconds in live view mode.	
2	IR Receiver		Receiver for IR remote control.	
3	Front Panel	Lock	Locks or unlocks the panel by the key.	
4	DVD-R/W		Slot for DVD-R/W disk.	
			Switches to the corresponding channel in live view or PTZ control mode.	
		Inputs numbers and characters in edit mode.		
5	Alphanume	ric Buttons	Switches between different channels in playback mode.	
			Turns blue when the corresponding channel is recording; turns red when the channel is in network transmission status; turns pink when the channel is recording and transmitting.	

Table 1-1 Panel Description

No.	Name		Function Description
6	USB Interfaces		Universal Serial Bus (USB) ports for additional devices such as USB mouse and USB Hard Disk Drive (HDD).
		ESC	Returns to the previous menu.
			Presses for arming/disarming the device in live view mode.
			Enters the Manual Record settings menu.
		REC/SHOT	Presses this button followed by a numeric button to call a PTZ preset in PTZ control settings.
			Turns audio on/off in the playback mode.
			Enters the playback mode.
		PLAY/AUTO	Automatically scans in the PTZ control menu.
	Composite Keys	ZOOM+	Zooms in the PTZ camera in the PTZ control setting.
			Adjusts focus in the PTZ Control menu.
7		A/FOCUS+	Switches between input methods (upper and lower case alphabet, symbols and numeric input).
			Edits text fields. When editing text fields, it also deletes the character in front of the cursor.
			Checks the checkbox in the checkbox fields.
		EDIT/IRIS+	Adjusts the iris of the camera in PTZ control mode.
			Generates video clips for backup in playback mode.
	HDD. MAIN/SPOT/Z OOM- Switches between main and spot of Zooms out the image in PTZ control	Enters/exits the folder of USB device and eSATA HDD.	
			Switches between main and spot output.
			Zooms out the image in PTZ control mode.
		F1/ LIGHT	Selects all items on the list when used in a list field.

No.	Name		Function Description
			Turns on/off PTZ light (if applicable) in PTZ control mode.
			Switches between play and reverse play in playback mode.
			Cycles through tab pages.
		F2/ AUX	Switches between channels in synchronous playback mode.
			Returns to the Main menu (after successful login).
		MENU/WIPER	Presses and holds the button for five seconds to turn off audible key beep.
			Starts wiper (if applicable) in PTZ control mode.
			Shows/hides the control interface in playback mode.
			Switches between single screen and multi-screen mode.
		PREV/FOCUS-	Adjusts the focus in conjunction with the A/FOCUS+ button in PTZ control mode.
			Enters the PTZ Control mode.
		PTZ/IRIS-	Adjusts the iris of the PTZ camera in PTZ control mode.
			Navigates between different fields and items in menus.
9	DIRECT Control Buttons	DIRECTION	In the playback mode, use the Up and Down buttons to speed up and slow down recorded video. Use the Left and Right buttons to select the next and previous video files.
8		Buttons	Cycles through channels in live view mode.
			Controls the movement of the PTZ camera in PTZ control mode.
		ENTER	Confirms selection in any of the menu modes.
			Checks the checkbox fields.

No.	Name		Function Description
			Plays or pauses the video playing in playback mode.
			Advances the video by a single frame in single-frame playback mode.
			Stops/starts auto switch in auto-switch mode.
		Moves the active selection up and down in a menu.	
0		C Control	Cycles through different channels in live view mode.
9	JOG SHUTTL	E Control	Jumps 30s forward/backward in video files in the playback mode.
			Controls the movement of the PTZ camera in PTZ control mode.
10	POWER ON/	OFF	Long press the button for more than 3 seconds to turn on/off the device.

1.1.2 LTN89xx(H) Series



Figure 1-2 LTN89xx(H) Series

Table 1-2	Panel Description	I
-----------	-------------------	---

No.	Name		Function Description
		POWER	Turns green when NVR is powered up.
1	Status Indicators	READY	The LED is green when the device is running normally.
		STATUS	The light is green when the IR remote control is enabled;

No.	N	ame	Function Description
			The light is red when the function of the composite keys (SHIFT) are used;
			The light is out when none of the above condition is met.
		ALARM	The light is red when there is an alarm occurring.
		HDD	Blinks red when HDD is reading/writing.
		Tx/Rx	Blinks green when network connection is functioning normally.
2	DVI	D-R/W	Slot for DVD-R/W.
			In menu mode, the direction buttons are used to navigate between different fields and items and select setting parameters. In playback mode, the Up and Down buttons are used to speed up and slow down record playing, and the Left and Right buttons are used to move the recording 30s forwards or backwards. In the image setting interface, the up and down button can adjust the level har of the image
		DIRECTION	
			In the image setting interface, the up and down button can adjust the level bar of the image parameters.
3	Control Buttons		In live view mode, these buttons can be used to switch channels.
			The Enter button is used to confirm selection in menu mode; or used to check checkbox fields and ON/OFF switch.
		ENTER	In playback mode, it can be used to play or pause the video.
			In single-frame play mode, pressing the Enter button will play the video by a single frame.
			In auto sequence view mode, the buttons can be used to pause or resume auto sequence.

No.	Na	ame	Function Description
		SHIFT	Switch between the numeric or letter input and functions of the composite keys. (Input letter or numbers when the light is out; Realize functions when the light is red.)
		1/MENU	Enter numeral "1";
		J WENO	Access the main menu interface.
			Enter numeral "2";
			Enter letters "ABC";
		2/ABC/F1	The F1 button when used in a list field will select all items in the list.
			In PTZ Control mode, it will turn on/off PTZ light and when the image is zoomed in, the key is used to zoom out.
4	Composite Keys		Enter numeral "3";
		2/055/52	Enter letters "DEF";
		3/DEF/F2	The F2 button is used to change the tab pages.
			In PTZ control mode, it zooms in the image.
			 all items in the list. In PTZ Control mode, it will turn on/off PTZ light and when the image is zoomed in, the key is used to zoom out. Enter numeral "3"; Enter letters "DEF"; The F2 button is used to change the tab pages.
		4/GHI/ESC	Enter letters "GHI";
			Exit and back to the previous menu.
			Enter numeral "5";
		5/JKL/EDIT	Enter letters "JKL";
			Delete characters before cursor;
			Check the checkbox and select the ON/OFF

No.	N	ame	Function Description	
			switch;	
			Start/stop record clipping in playback.	
			Enter numeral "6";	
		6/MNO/PLAY	Enter letters "MNO";	
			Playback, for direct access to playback interface.	
			Enter numeral "7";	
		7/PQRS/REC	Enter letters "PQRS";	
			Open the manual record interface.	
			Enter numeral "8";	
		8/TUV/PTZ	Enter letters "TUV";	
			Access PTZ control interface.	
		9/WXYZ/P REV	Enter numeral "9";	
			Enter letters "WXYZ";	
			Multi-channel display in live view.	
			Enter numeral "0";	
	0	0/A	Shift the input methods in the editing text field. (Upper and lowercase, alphabet, symbols or numeric input).	
			Double press the button to switch the main and auxiliary output.	
5	JOG SHUTTLE Control		Move the active selection in a menu. It will move the selection up and down.	
			In Live View mode, it can be used to cycle	

No.	Name	Function Description
		through different channels.
		In the Playback mode, it can be used to jump 30s forward/backward in video files.
		In PTZ control mode, it can control the movement of the PTZ camera.
6	POWER ON/OFF	Power on/off switch.
7	USB Interfaces	Universal Serial Bus (USB) ports for additional devices such as USB mouse and USB Hard Disk Drive (HDD).
8	IR Receiver	IR receiver interface

1.1.3 LTN86xx(D) Series



Figure 1-3 LTN86xx(D) Series

No.	N	ame	Function Description
		POWER	Turns green when NVR is powered up.
		READY	The LED is green when the device is running normally.
			The light is green when the IR remote control is enabled;
1	Status	STATUS	The light is red when the function of the composite keys (SHIFT) are used;
-	Indicators		The light is out when none of the above condition is met.
		ALARM	M The light is red when there is an alarm occurring
		HDD	Blinks red when HDD is reading/writing.
		Tx/Rx	Blinks green when network connection is functioning normally.
2	IR Re	eceiver	IR receiver interface
3	USB Interfaces		Universal Serial Bus (USB) ports for additional devices such as USB mouse and USB Hard Disk Drive (HDD).
4	Control Buttons	DIRECTION	In menu mode, the direction buttons are used to navigate between different fields and items and select setting parameters.

Table 1-3 Panel Description

No.	N	ame	Function Description
			In playback mode, the Up and Down buttons are used to speed up and slow down record playing, and the Left and Right buttons are used to move the recording 30s forwards or backwards.
			In the image setting interface, the up and down button can adjust the level bar of the image parameters.
			In live view mode, these buttons can be used to switch channels.
			The Enter button is used to confirm selection in menu mode; or used to check checkbox fields and ON/OFF switch.
		ENTER	In playback mode, it can be used to play or pause the video.
			In single-frame play mode, pressing the Enter button will play the video by a single frame.
			In auto sequence view mode, the buttons can be used to pause or resume auto sequence.
	SHIFT	SHIFT	Switch between the numeric or letter input and functions of the composite keys. (Input letter or numbers when the light is out; Realize functions when the light is red.)
			Enter numeral "1";
5	Composite	1/MENU	Access the main menu interface.
5	Keys		Enter numeral "2";
			Enter letters "ABC";
		2/ABC/F1	The F1 button when used in a list field will select all items in the list.
			In PTZ Control mode, it will turn on/off PTZ light

No.	N	ame	Function Description
			and when the image is zoomed in, the key is used to zoom out.
			Enter numeral "3";
		3/DEF/F2	Enter letters "DEF";
		3/01/72	The F2 button is used to change the tab pages.
			In PTZ control mode, it zooms in the image.
			Enter numeral "4";
		4/GHI/ESC	Enter letters "GHI";
			Exit and back to the previous menu.
			Enter numeral "5";
			Enter letters "JKL";
	5/JKL/EDIT	Delete characters before cursor;	
			Check the checkbox and select the ON/OFF switch;
			Start/stop record clipping in playback.
			Enter numeral "6";
		6/MNO/PLAY	Enter letters "MNO";
			Playback, for direct access to playback interface.
			Enter numeral "7";
		7/PQRS/REC	Enter letters "PQRS";
			Open the manual record interface.
		8/TUV/PTZ	Enter numeral "8";

No.	N	ame	Function Description
			Enter letters "TUV";
			Access PTZ control interface.
			Enter numeral "9";
		9/WXYZ/P REV	Enter letters "WXYZ";
			Multi-channel display in live view.
	0/A		Enter numeral "0";
		Shift the input methods in the editing text field. (Upper and lowercase, alphabet, symbols or numeric input).	
			Double press the button to switch the main and auxiliary output.

1.2 IR Remote Control Operations

The device may also be controlled with the included IR remote control, shown in Figure 1-4.

Batteries (2×AAA) must be installed before operation.

The IR remote is set at the factory to control the device (using default Device ID# 255) without any additional steps. Device ID# 255 is the default universal device identification number shared by the devices. You may also pair an IR Remote to a specific device by changing the Device ID#, as follows:

Pairing (Enabling) the IR Remote to a Specific Device (optional)

You can pair an IR Remote to a specific device by creating a user-defined Device ID#. This feature is useful when using multiple IR Remotes and devices.

On the device:

Step 1 Go to System > General.

Step 2 Type a number (255 digits maximum) into the Device No. field.

On the IR Remote:

Step 3 Press the DEV button.

Step 4 Use the Number buttons to enter the Device ID# that was entered into the device.

Step 5 Press Enter button to accept the new Device ID#.

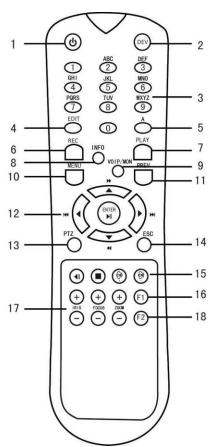


Figure 1-4 Remote Control

Unpairing (Disabling) an IR Remote from a Device

To unpair an IR Remote from a device so that the unit cannot control any device functions, proceed as follows:

Press the DEV key on the IR Remote. Any existing Device ID# will be erased from the unit's memory and it will no longer function with the device.

(Re)-enabling the IR Remote requires pairing to a device. See "Pairing the IR Remote to a Specific device (optional)," above.

The keys on the remote control closely resemble the ones on the front panel. See the table 1.4.

No.	Name	Table 1-4 IR Remote Functions Function Description		
		•To Turn Power On:		
		-If User Has Not Changed the Default device Device ID# (255):		
		1.Press Power On/Off button (1).		
		1.Press Power On/On Button (1).		
		-If User Has Changed the device Device ID#:		
		1.Press DEV button.		
		2.Press Number buttons to enter user-defined Device ID#.		
		3.Press Enter button.		
		4.Press Power button to start device.		
		•To Turn device Off:		
		-If User Is Logged On:		
		1.Hold Power On/Off button (1) down for five seconds to display the "Yes/No" verification prompt.		
		2.Use Up/Down Arrow buttons (12) to highlight desired selection.		
		3.Press Enter button (12) to accept selection.		
1	POWER ON/OFF	-If User Is <i>Not</i> Logged On:		
1		1.Hold Power On/Off button (1) down for five seconds to display the user name/password prompt.		
		2.Press the Enter button (12) to display the on-screen keyboard.		
		3.Input the user name.		
		4.Press the Enter button (12) to accept input and dismiss the on-screen keyboard.		
		5.Use the Down Arrow button (12) to move to the "Password" field.		
		6.Input password (use on-screen keyboard or numeric buttons (3) for numbers).		
		7.Press the Enter button (12) to accept input and dismiss the on-screen keyboard.		
		8.Press the OK button on the screen to accept input and display the Yes/No" verification prompt (use Up/Down Arrow buttons (12) to move between fields)		
		9.Press Enter button (12) to accept selection.		
		User name/password prompt depends on device is configuration.		

Table 1-4 IR Remote Functions

		See "System Configuration" section.
	DEV	Enable IR Remote: Press DEV button, enter device Device ID# with number keys, press Enter to pair unit with the device
2		Disable IR Remote: Press DEV button to clear Device ID#; unit will no longer be paired with the device
3	Numerals	Switch to the corresponding channel in Live View or PTZ Control mode
		Input numbers in Edit mode
	EDIT	Delete characters before cursor
4		Check the checkbox and select the ON/OFF switch
		Adjust focus in the PTZ Control menu
5	A	Switch on-screen keyboards (upper and lower case alphabet, symbols, and numerals)
		Enter Manual Record setting menu
6	REC	Call a PTZ preset by using the numeric buttons in PTZ control settings
		Turn audio on/off in Playback mode
	PLAY	Go to Playback mode
/		Auto scan in the PTZ Control menu
8	INFO	Reserved
9	VOIP Switches between main and spot output Zooms out the image in PTZ control mode	
		Return to Main menu (after successful login)
10	MENU	N/A
		Show/hide full screen in Playback mode
	DIRECTION	Navigate between fields and menu items
12		Use Up/Down buttons to speed up/slow down recorded video, and Left/Right buttons to advance/rewind 30 secs in Playback mode
		Cycle through channels in Live View mode
		Control PTZ camera movement in PTZ control mode

		Confirm selection in any menu mode	
	ENTER	Checks checkbox	
		Play or pause video in Playback mode	
		Advance video a single frame in single-frame Playback mode	
		Stop/start auto switch in auto-switch mode	
13	PTZ	Enter PTZ Control mode	
14	ESC	Go back to previous screen	
14		N/A	
15	RESERVED	SERVED Reserved	
	F1	Select all items on a list	
16		N/A	
		Switch between play and reverse play in Playback mode	
17	PTZ Control	Adjust PTZ camera iris, focus, and zoom	
18	F2	Cycle through tab pages	
10		Switch between channels in Synchronous Playback mode	

Troubleshooting Remote Control:

Make sure you have installed batteries properly in the remote control. And you have to aim the remote control at the IR receiver in the front panel.

If there is no response after you press any button on the remote, follow the procedure below to troubleshoot.

- Step 1 Go to **System > General** by operating the front control panel or the mouse.
- Step 2 Check and remember device ID#. The default ID# is 255. This ID# is valid for all the IR remote controls.
- Step 3 Press the DEV button on the remote control.
- Step 4 Enter the device ID# you set in step 2.
- Step 5 Press the ENTER button on the remote.

If the Status indicator on the front panel turns blue, the remote control is operating properly. If the Status indicator does not turn blue and there is still no response from the remote, please check the following:

- Batteries are installed correctly and the polarities of the batteries are not reversed.
- Batteries are fresh and not out of charge.
- IR receiver is not obstructed.
- No fluorescent lamp is used nearby

If the remote still can't function properly, please change a remote and try again, or contact the device provider.

1.3 USB Mouse Operation

A regular 3-button (Left/Right/Scroll-wheel) USB mouse can also be used with this device. To use a USB mouse:

- Step 1 Plug USB mouse into one of the USB interfaces on the front panel of the device.
- Step 2 The mouse should automatically be detected. If in a rare case that the mouse is not detected, the possible reason may be that the two devices are not compatible, please refer to the recommended the device list from your provider.

The operation of the mouse:

Name	Action	Description
	Single-Click	Live view: Select channel and show the quick set menu. Menu: Select and enter.
Left-Click	Double-Click	Live view: Switch between single-screen and multi-screen.
Leit-Click	Click and Drag	PTZ control: pan, tilt and zoom.Video tampering, privacy mask and motion detection:Select target area.Digital zoom-in: Drag and select target area.Live view: Drag channel/time bar.
Right-Click	Single-Click	Live view: Show menu. Menu: Exit current menu to upper level menu.
Scroll-Wheel	Scrolling up	Live view: Previous screen. Menu: Previous item.
	Scrolling down	Live view: Next screen. Menu: Next item.

Table 1-5 Description of the Mouse Control

1.4 Rear Panel

1.4.1 LTN89xx-R Series

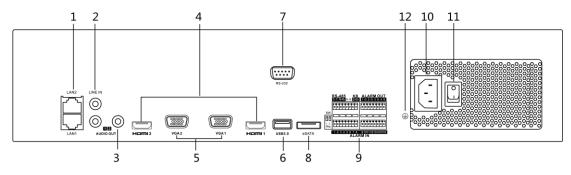


Figure 1-5 LTN89xx-R Series

No.	Name	Description
1	LAN1/LAN2 Interface	2 RJ-45 10/100/1000 Mbps self-adaptive Ethernet interfaces provided.
2	LINE IN	RCA connector for audio input.
3	AUDIO OUT	2 RCA connectors for audio output.
4	HDMI1/HDMI2	HDMI video output connector.
5	VGA1/VGA2	DB9 connector for VGA output. Display local video output and menu.
6	USB 3.0 interface	Universal Serial Bus (USB) ports for additional devices such as USB mouse and USB Hard Disk Drive (HDD).
7	RS-232 Interface	Connector for RS-232 devices.
8	eSATA	Connects external SATA HDD, CD/DVD-RM.
9	Controller Port	D+, D- pin connects to Ta, Tb pin of controller. For cascading devices, the first device's D+, D- pin should be connected with the D+, D- pin of the next device.
5	ALARM IN	Connector for alarm input.
	ALARM OUT	Connector for alarm output.
10	100 to 240 VAC	100 to 240 VAC power supply.
11	Power Switch	Switch for turning on/off the device.
12	GROUND	Ground (needs to be connected when device starts up).

Table 1-6 Panel Description

1.4.2 LTN86xx(D) Series




Figure 1-6 LTN86xx(D) Series

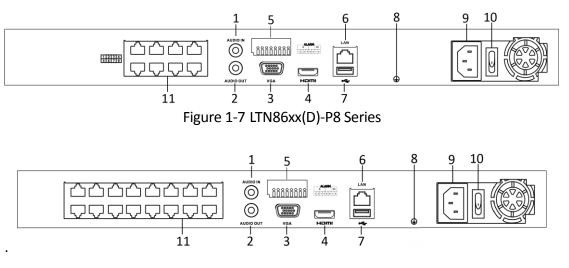


Figure 1-8 LTN86xx(D)-P16 Series

No.	Name	Description
1	Audio In	RCA connector for audio input.
2	Audio Out	RCA connector for audio output.
3	VGA Interface	DB9 connector for VGA output. Display local video output and menu.
4	HDMI Interface	HDMI video output connector.
5	ALARM IN	Connector for alarm input.
	ALARM OUT	Connector for alarm output.
6	LAN Network Interface	1 10/100/1000 Mbps self-adaptive Ethernet interface
7	USB Interface	Universal Serial Bus (USB 3.0) ports for additional devices such as USB mouse and USB Hard Disk Drive (HDD).
8	Ground	Ground (needs to be connected when device starts up).
9	Power Supply	12 VDC power supply for LTN86xx(D), and 100 to 240 VAC for LTN86xx(D)-P .
10	Power Switch	Switch for turning on/off the device.

Table 1-7 Panel Description

11	Network Interfaces with PoE function (for LTN86xx(D)-P)	Network interfaces for the cameras and to provide power over Ethernet.
----	---	--

1.4.3 LTN89xx(H) Series

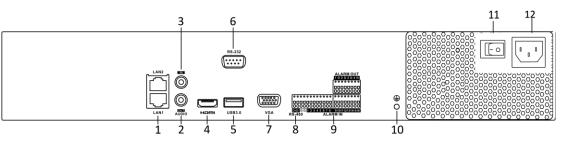


Figure 1-9 LTN89xx(H) Series

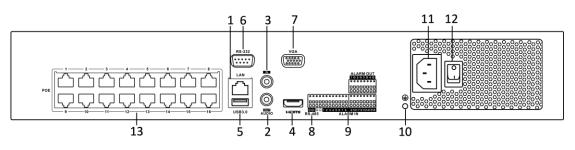


Figure 1-10 LTN89xx(H)-P Series

Table 1-8 Panel Description	Table 1-8	Panel	Description	
-----------------------------	-----------	-------	-------------	--

No.	Name	Description
1	LAN Interface	1 network interface provided for LTN89xx(H)-P, and 2 network interfaces for LTN89xx(H).
2	AUDIO OUT	RCA connector for audio output.
3	LINE IN	RCA connector for audio input.
4	HDMI	HDMI video output connector.
5	USB 3.0 interface	Universal Serial Bus (USB) ports for additional devices such as USB mouse and USB Hard Disk Drive (HDD).
6	RS-232 Interface	Connector for RS-232 devices.
7	VGA	DB9 connector for VGA output. Display local video output and menu.
8	RS-485 Interface	Half-duplex connector for RS-485 devices.
9	ALARM IN	Connector for alarm input.

	ALARM OUT	Connector for alarm output.
10	GROUND	Ground (needs to be connected when device starts up).
11	AC 100V ~ 240V	100V to 240VAC power supply.
12	Power Switch	Switch for turning on/off the device.
13	Network Interfaces with PoE function (for LTN89xx(H)-P)	Network interfaces for the cameras and to provide power over Ethernet.

Chapter 2 Getting Started

2.1 Start up the Device

Purpose:

Proper startup and shutdown procedures are crucial to expanding the life of the device.

Before you start:

Check that the voltage of the extra power supply is the same with the device's requirement, and the ground connection is working properly.

Start up the device:

- Step 1 Check the power supply is plugged into an electrical outlet. It is HIGHLY recommended that an Uninterruptible Power Supply (UPS) be used in conjunction with the device. The Power indicator LED on the front panel should be red, indicating the device gets the power supply.
- Step 2 Press the POWER button on the front panel. The Power indicator LED should turn blue indicating that the unit begins to start up.
- Step 3 After startup, the Power indicator LED remains blue. A splash screen with the status of the HDD appears on the monitor. The row of icons at the bottom of the screen shows the HDD status. 'X' means that the HDD is not installed or cannot be detected.

2.2 Activate the Device

Purpose:

For the first-time access, you need to activate the device by setting an admin password. No operation is allowed before activation. You can also activate the device via Web Browser, IP PORTAL or Client Software.

Step 1 Input the same password in the text field of Create New Password and Confirm New Password.

You can click 🔤 to show the characters input.

	Activation	
e la Merice Spiel es		- 166 - 162 Feb
	admin	
	Weak	
	net 🛞	
	Create Channel Default Password	
	Security Question C	
	Note: Valid password range [8-16]. You can use a combination of numbers, lowercase, uppercase and special character for your password with at least two	
	kinds of them contained.	*
	OK	

We highly recommend you create a strong password of your own choosing (Using a minimum of 8 characters, including at least three of the following categories: upper case letters, lower case letters, numbers, and special characters.) in order to increase the security of your product. And we recommend you reset your password regularly, especially in the high security system, resetting the password monthly or weekly can better protect your product.

- Step 2 In the **Create Channel Default Password** text field, create a default password of IP camera (s) connected to the device.
- Step 3 (Optional) Check Export GUID and Security Question Configuration.

Export GUID: export the GUID for future password resetting.

Security Question Configuration: configure the security questions which can be used for resetting the password.

Step 4 Click OK.

What to do next:

- When you have enabled the **Export GUID**, continue to export the GUID file to the USB flash driver for the future password resetting.
- When you have enabled the **Security Question Configuration**, continue to set the security questions for the future password resetting.

- After the device is activated, you should properly keep the password.
- You can duplicate the password to the IP cameras that are connected with default protocol.

2.3 Configure Login Unlock Pattern

You can configure a device login unlock pattern for the admin user.

- Step 1 After the device is activated, enter the following interface to configure the device unlock pattern.
- Step 2 Use the mouse to draw a pattern among the 9 dots on the screen. Release the mouse when the pattern is done.

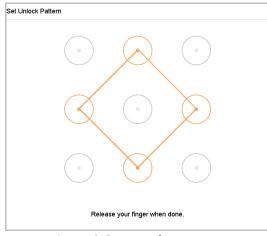


Figure 2-2 Draw the Pattern

- Connect at least 4 dots to draw the pattern.
- Each dot can be connected for once only.
- Step 3 Draw the same pattern again to confirm it. When the two patterns match, the pattern is configured successfully.



If the two patterns are different, you must set the pattern again.

2.4 Login to the Device

2.4.1 Log in via Unlock Pattern

Only the *admin* user has permission to unlock the device.

Before you Start

Configure the unlock pattern before unlocking. Refer to Chapter 2.3 Configure Login Unlock Pattern.

Step 1 Right click the mouse and select the menu to enter the interface.



Figure 2-3 Draw the Unlock Pattern

Step 2 Draw the pre-defined pattern to unlock and enter the menu operation.

- If you have forgotten your pattern, select Forgot My Pattern or Switch User to enter the normal login dialog box.
- If the pattern you draw is different from the pattern you configured, try again.
- If you draw the wrong pattern more than five times, the system will switch to the normal login mode automatically.

2.4.2 Log in via a Password

Purpose:

If the device has logged out, you must log in to the device before operating the menu and other functions.

Step 1 Select your User Name in the drop-down list.

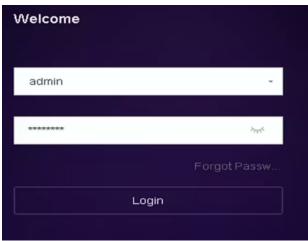


Figure 2-4 Login Interface

Step 2 Input password.

Step 3 Click Login to log in.

If you forget the admin password, click **Forgot Password** to reset the password.

In the Login dialog box, if you enter the wrong password 7 times, the current user account will be locked for 60 seconds.

2.5 Start Setup Wizard

The Setup Wizard walks you through some important basic device settings.

By default, the Setup Wizard starts once the device has loaded. If you don't want to use the Setup Wizard at that moment, click **Exit**.

Step 1 Set the date and time on the Date and Time Setup interface.

Date and Ti	me Setup					
Time Zone	(GMT+08:00) Beijing, U	Jrumc 👻				
Date Format	DD-MM-YYYY	-				
System Date	10-10-2017					
System Time	16:12:33	\oplus				
Enable Wizard	t			Previous	Next	Exit

Figure 2-5 Date and Time Settings

Step 2 Set the basic network parameters on the **Network Setup** interface.

Network Setup					
Working Mode	Net Fault-Tolerance	Enable DHCP			
Select NIC	bond0 ~	IPv4 Address	10 . 15 . 1 . 19		
NIC Type	10M/100M/1000M Self-adapi ~	IPv4 Subnet Mask	255 . 255 . 255 . 0		
Enable Obtain DNS Serv		IPv4 Default Gateway	10 . 15 . 1 . 254		
Preferred DNS Server					
Alternate DNS Server					
Main NIC	LAN1 -				
			Previous	Next	Exit

Figure 2-6 Network Settings

Step 3 Select a HDD and click Init to initialize it as demand on the Hard Disk interface.

Label	Capacity	Status	Property	Туре	Free Space
					-

Figure 2-7 HDD Management

Step 4 Add IP cameras on the **Camera Setup** interface.

- 1) Click **Search** to search online IP camera. Before adding a camera, make sure the IP camera to be added is in active status.
- 2) Click Add to add the camera.

If the camera is in inactive status, select the camera from the list and click Activate.

ID Address	Security	Amount	Device Model	Protocol	Management Port	Subnet Mask	Serial No.	MAC Addres
								00:00:00:00:
						_	_	
	IP Address 192168120							

Figure 2-8 Search for IP Cameras

Step 5 Enter **Platform Access** interface and configure the PT cloud settings.

Access Type	Enable PT Cloud	•	Enable Stream Encryption	
Enable			Verification Code/Encrypti	a1234567
Server Address	dev guardingvision.com	Custom		
			Status	Offline
			Scan the QR code via the P	T Cloud app to add the device.
			EC 32 E	

Figure 2-9 PT cloud Access

Step 6 Enter the Change Password interface to create a new admin password if required.

Change Password	
New Admin Password	
Admin Password	******
New Password	******
	Strong
Confirm	منابع المعندين المعند ا
Unlock Pattern	
	Note: Valid password range [8-16]. You can use a combination of numbers, lowercase, uppercase and special character for your password with at least two kinds of them contained.
	Previous OK Exit

Figure 2-10 Change Password

You can enter click the $\boxed{}$ to show the characters input.

- 1) Check the **New Admin Password** checkbox.
- 2) Enter the original password in the **Admin Password** text field.
- 3) Input the same password in the **New Password** and **Confirm** text fields.
- 4) Check the **Unlock Pattern checkbox** to enable the login via unlock pattern.



We highly recommend you create a strong password of your own choosing (Using a minimum of 8 characters, including at least three of the following categories: upper case letters, lower case letters, numbers, and special characters.) in order to increase the security of your product. And we recommend you reset your password regularly, especially in the high security system, resetting the password monthly or weekly can better protect your product.

Step 7 Click **OK** to complete the startup Setup Wizard.

2.6 Enter Main Menu

After you have completed the wizard, you can right click on the screen to enter the main menu bar. Refer to the following figure and table for the description of main menu and sub-menus.



Icon	Description
	Live View
	Playback
	File Management
\bigotimes	Smart Analysis
	Camera Management
	Storage Management
 	System Management

Figure 2-11 Main Menu Bar

Table 2-1 Description of Icons



System Maintenance:

2.7 System Operation

2.7.1 Log out

Purpose:

After logging out, the monitor turns to live view mode. To perform any operations, you need to log in again.

Step 1 Click On the menu bar.

Step 2 Click Logout.

After you log out of the system, menu operations on the screen are invalid. You must input a user name and password to unlock the system.

2.7.2 Shut Down the Device

Step 1 Click On the menu bar.

Step 2 Click **Shutdown**.

Step 3 Click Yes.

Do not press POWER again when the system is shutting down.

2.7.3 Reboot the Device

From the Shutdown menu, you can also reboot the device.

Step 1 Click On the menu bar.

Step 2 Click **Reboot** to reboot the device.

Chapter 3 Camera Management

3.1 Add IP Cameras

3.1.1 Add IP Cameras Manually

Purpose:

Before you can view live video or record video files, you must add the network cameras to the connection list of the device.

Before You Start:

Ensure the network connection is valid and the IP camera has been activated.

Step 1 Click

on the main menu bar to enter the Camera Management interface.

Step 2 Click the **Custom Add** tab on the title bar or click in the idle channel window to enter the Add IP Camera interface.

Step 3 Enter IP address, protocol, management port, and other information.

Step 4 Enter the login user name and password of the IP camera.

	IP Camera No.	Add IP Camera (Custom)					Camera Name	Protocol	Device
	D1						IPCamera 01	Default	
Ľ	D2	No. Stat See	urity	IP Address	Device Model	Proto	Camera 01	LTS	CMIP93
	D3	1 - 🥝	Active	192,168,1.20	IPC	ONV	Camera 01	LTS	CMIP80
I.	D4		1. Statistic		al an		IPCamera 04	Default	
1	D5						IPCamera 05	Default	
			_		Miles Manager	PROPERTY AND			
		IP Camera Address	192.	168.1.20					
		Protocol	ONV	IF	•				
		Management Port	80						
		Transfer Protocol	Auto						
		User Name	admi	n					
		Password							
		Use Channel Defaul							
				Search Con	tinue to Add Ad	Id			
			E	Search Con	tinue to Add Ad	Id			

Figure 3-1 Add IP Camera

Step 5 Click Add to finish adding the IP camera.

Step 6 (Optional) Click Continue to Add to continue to add other IP cameras.

3.1.2 Add the Automatically Searched Online IP Cameras

- Step 1 On the Camera Management interface, click the **Online Device** panel to expand the Online Device interface.
- Step 2 Select the automatically searched online device.

Step 3 Click Add to add the camera which has the same login password with the device.

+ Ad	d D	Refresh	P Activate					Enter	a keyword.	
1	No.	Status	Security	IP Address	Edit	Device Model	Protocol	Management	Serial No.	F
	4		Active	192.168.1.20	1	IRC	ONVIF	80		
				In the second						

Figure 3-2 Add IP Camera

If the IP camera to add has not been actiavated, you can activate it from the IP camera list on the camera management interface.

3.2 Manage Cameras for PoE Device

This chapter is only applicable for the following models: LTN86xx(D)-P and LTN89xx(H)-P series device.

Purpose:

The PoE interfaces enables the device system to pass electrical power safely, along with data, on Ethernet cabling to the connected PoE cameras. Supported PoE camera number varies with device model

If you disable the PoE interface, you can also connect to the online network cameras. And the PoE interface supports the Plug-and-Play function.

For example, for LTN8608-P8, if you want to connect 6 network cameras via PoE interfaces and 2 online cameras, you must disable 2 PoE interfaces in the Edit IP Camera menu.

Follow the steps to add network cameras for device supporting PoE function.

3.2.1 Add PoE Cameras

Step 1 Connect PoE cameras to device PoE ports with network cables.

Step 2 Go to Camera > Camera > IP Camera to view camera image and information.

3.2.2 Add Non-PoE IP Cameras

You can disable the PoE interface by selecting the manual while the current channel can be used as a normal channel and the parameters can also be edited.

Step 1 Go to Camera > Camera > IP Camera.

Step 2 Position the cursor on a window with no linked IP camera and click the button.

Edit IP Camera			
IP Camera No	D1		
Adding Method	Manual	•	
IP Camera Address	192.168.254.2		
Protocol		-	
Management Port	8000		
Channel Port	1	-	
Transfer Protocol	Auto	-	
User Name	admin		
Password			

Figure 3-3 Edit IP Camera

Step 3 Select Adding Method as Manual.

- **Plug-and-Play:** The camera is physically connected to the PoE interface. Its parameters cannot be edited. You can go to **System > Network > TCP/IP** to change IP address of PoE port. .
- Manual: Add IP camera without physical connection via network.

Step 4 Enter the IP address, the user name and password of administrator manually.

Step 5 Click **OK**.

3.2.3 Configure PoE Interface

Purpose:

When it requires long-distance PoE transmission (100 to 300 m), you can enable long distance mode for the PoE channel.

Step 1 Go to Camera > Camera > PoE Settings.

Step 2 Enable or disable long network cable mode by selecting **Long Distance** or **Short Distance** radio.

- Long Distance: Long-distance (100 to 300 meters) network transmissions via POE interface.
- **Short Distance**: Short-distance (< 100 meters) network transmission via POE interface.

Actual power: 0.0W.	Remaining power: 200.0W.	0%			(j)
Channel	OLong Distance	⊖Short Distance	Channel Status	Actual Power	
D1	۲		Disconnected	0.0W	
D2		۲	Disconnected	0.0W	
D5		۲	Disconnected	0.0W	
D6		۲	Disconnected	0.0W	
D7		۲	Disconnected	0.0W	
D8		۲	Disconnected	0.0W	
D9		۲	Disconnected	0.0W	
D10		۲	Disconnected	0.0W	
D11		۲	Disconnected	0.0W	
D12		۲	Disconnected	0.0W	
D13		۲	Disconnected	0.0W	
D14		۲	Disconnected	0.0W	
D15		۲	Disconnected	0.0W	
D16		۲	Disconnected	0.0W	
Apply					

Figure 3-4 PoE Settings

- The PoE ports are enabled with the short distance mode by default.
- The bandwidth of IP camera connected to the PoE via long network cable (100 to 300 meters) cannot exceed 6 MP.
- The allowed max. long network cable may be less than 300 meters depending on different IP camera models and cable materials.
- When the transmission distance reaches 100 to 250 meters, you must use the CAT5E or CAT6 network cable to connect with the PoE interface.
- When the transmission distance reaches 250 to 300 meters, you must use the CAT6 network cable to connect with the PoE interface.

Step 3 Click Apply.

3.3 Enable the H.265 Stream Access

The device can automatically switch to the H.265 stream of IP camera (which supports H.265 video format) for the initial access.

Step 1 Go to More Settings > H.265 Auto Switch Configuration at the top taskbar.

Step 2 Check the checkbox of Enable H.265 (For Initial Access).

```
Step 3 Click OK.
```

3.4 Upgrade the IP Camera

The IP camera can be remotely upgraded through the device.

Plug the U-flash drive with the IP camera's firmware upgrade file to the device.

Step 1 On the camera management interface, select a camera.

Step 2 Go to More Settings > Upgrade at the top taskbar.

Step 3 Select the firmware upgrade file from the U-flash drive.

Step 4 Click Upgrade.

Result:

The IP camera will reboot automatically after the upgrading completes.

3.5 Configure the Customized Protocols

Purpose

To connect the network cameras which are not configured with the standard protocols, you can configure the customized protocols for them. The system provides 16 customized protocols.

Step 1 Go to **More Settings > Protocol** at the top taskbar to enter the protocol management interface.

Protocol Management					\times
Custom Protocol	Custom Protocol	1		•	
Protocol Name	Custom 1				
Stream Type	✓ Main Stream		Sub Stree	am	
Туре	RTSP	•	RTSP	•	
Transfer Protocol	Auto	•	Auto	•	
Port	554		554		
Path					
	Example: [Type]://[lf rtsp://192.168.0.1:5				
			ок		Cancel

Figure 3-5 Protocol Management

Step 2 Select the protocol type of transmission and choose the transfer protocols.

- **Type:** The network camera adopting custom protocol must support getting stream through standard RTSP.
- **Path:** you have to contact the manufacturer of the network camera to consult the URL (uniform resource locator) for getting main stream and sub-stream.
- The format of the URL is: [Type]://[IP Address of the network camera]:[Port]/[Path].
- Example: rtsp://192.168.1.55:554/ch1/main/av_stream.

The protocol type and the transfer protocols must be supported by the connected IP camera.

Step 3 Click **OK** to save the settings.

Result:

After adding the customized protocols, you can see the protocol name is listed in the drop-down list.

Chapter 4 Camera Settings

4.1 Configure OSD Settings

Purpose

You can configure the OSD (On-screen Display) settings for the camera, including date/time, camera name, etc.

Step 1 Go to Camera >Display.

- Step 2 Select the camera from the drop-down list.
- Step 3 Edit the name in Camera Name.
- Step 4 Check **Display Name**, **Display Date** and **Display Week** to show the information on the image.
- Step 5 Set the date format, time format, and display mode.

Camera	[D2] IPdome -				
Camera Name	IPdome		OSD Settings		\sim
08-28-2017 Mon 1	16 : 32 : 45		 Display Name Display Date Display Week 		
Ê		and the second	Date Format	MM-DD-YYYY	-
			Time For	24-hour	*
Gr			Display M	Non-Transparent & No	•
			OSD Font	16x16	1
		Camera 01	Image Settings		>
			Exposure		>
			Day/Night Switch		>
			Backlight		>
			Image Enhancement		>
Apply					

Figure 4-1 OSD Configuration Interface

Step 6 Use the mouse to click and drag the text frame on the preview window to adjust the OSD position. Step 7 Click **Apply**.

4.2 Configure Privacy Mask

Purpose

The privacy mask protects personal privacy by concealing parts of the image from view or recording with a masked area.

Step 1 Go to Camera >Privacy Mask.

Step 2 Select the camera to set privacy mask.

Step 3 Click Enable to enable this feature.

Step 4 Use the mouse to draw a zone on the window. The zones will be marked by different frame colors.

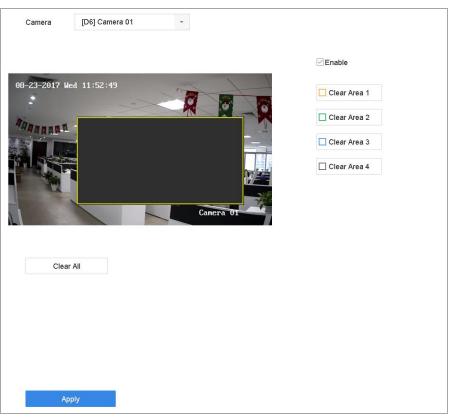


Figure 4-2 Privacy Mask Settings Interface

Up to 4 privacy masks zones can be configured and the size of each area can be adjusted.

Related Operation:

Clear the configured privacy mask zones on the window by clicking the corresponding Clear Zone1-4 icons on the right of the window, or click **Clear All** to clear all zones.

Step 5 Click Apply.

4.3 Configure the Image Parameters

Purpose

You can customize the image parameters including the brightness, contrast, and saturation for the Live View and recording effect.

Step 1 Go to Camera>Display > Image Settings.

- Step 2 Select a camera from the drop-down list.
- Step 3 Adjust the slider or click on the up/down arrow to set the value of the brightness, contrast, or saturation.
- Step 4 Click Apply.

4.4 Configure the Day/Night Switch

The camera can be set to day, night, or auto switch mode according to the surrounding illumination conditions.

Step 1 Go to Camera>Display > Day/Night Switch.

Step 2 Select the camera from the drop-down list.

Step 3 Set the day/night switch mode to Day, Night, Auto, or Auto-Switch.

Auto: The camera automatically switches between day mode and night mode according to the illumination.

The sensitivity ranges from 0 to 7, and higher sensitivity more easily triggers the mode switch.

The switch time refers to the interval time between the day/night switch. You can set it from 5 sec to 120 sec.

Auto-Switch: The camera switches the day mode and the night mode according to the start time and end time you set.

Step 4 Click the **Apply**.

4.5 Configure Other Camera Parameters

For a connected camera, you can configure the camera parameters including the exposure mode, backlight and image enhancement.

Step 1 Go to Camera>Display.

Step 2 Select a camera from the drop-down list.

Step 3 Configure the camera parameters.

• Exposure: Set the camera exposure time (1/10000 to 1 sec). A larger exposure value results in a brighter image.

• Backlight: Set the camera's wide dynamic range (0 to 100). When the surrounding illumination and the object have large differences in brightness, you should set the WDR value.

• Image Enhancement: For optimized image contrast enhancement.

Step 4 Click **Apply**.

Chapter 5 Live View

Live View displays the video image getting from each camera in real time.

5.1 Start Live View

on the main menu bar to enter the Live View. Click

Select a window and double click a camera from the list to play the video from the camera in the selected window.

Use the toolbar at the playing window bottom to realize the capture, instant playback, audio • on/off, digital zoom, live view strategy, show information and start/stop recording, etc.

5.1.1 Digital Zoom

Digital Zoom zooms into the live image in different magnifications (1x to 16x).

Step 1 In the Live View mode, click

 $\stackrel{\textcircled{}_{\scriptstyle{\scriptstyle{\oplus}}}}{=}$ from the toolbar to enter the digital zoom interface.

Step 2 Move the sliding bar or scroll the mouse wheel to zoom in/out the image to different magnifications (1x to 16x).



Figure 5-1 Digital Zoom

5.1.2 Fisheye View

The device supports the fisheye camera expansion in Live View or playback mode.

• The fisheye expansion view feature is supported only by the LTN86xx/ LTN89xx/ LTN89xx-R Series.

• The connected camera must support the fisheye view.

Step 1 In the Live View mode, click it o enter the fisheye expansion mode.

Step 2 Select the expansion view mode.

- **180° Panorama (**): Switch the Live View image to the 180° panorama view.
- **360° Panorama (**): Switch the Live View image to the 360° panorama view.

• **PTZ Expansion (**): The PTZ Expansion is the close-up view of some defined area in the fisheye view or panorama expansion. It supports the electronic PTZ function, also called e-PTZ.

• **Radial Expansion (**): In radial expansion mode, the whole wide-angle view of the fisheye camera is displayed. This view mode is called Fisheye View because it approximates the vision of a fish's convex eye. The lens produces curvilinear images of a large area, while distorting the perspective and angles of objects in the image.

5.1.3 3D Positioning

3D Positioning (for I series device) zooms in/out of a specific live image area.

Step 1 In Live View mode, click the **Step 1** to enter the 3D positioning mode.

Step 2 Zoom in/out of the image.

• Zoom In

Use the left mouse key to click on the desired position in the video image and drag a rectangle area in the lower right direction to zoom in.

Zoom Out

Use the left mouse key to drag a rectangle area in the upper left direction to move the position to the center and enable the rectangle area to zoom out.

5.1.4 Live View Strategy

Step 1 In Live View mode, click to enter the digital zoom operation interface in full screen mode.

Step 2 Select the Live View strategy to Real-time, Balanced or Fluency.

5.2 Target Detection

In Live View mode, the target detection function can detect a human motoion/face/vechicle/human body during the last 5 seconds and the following 10 seconds.

Step 1 In Live View mode, click **Target Detection** to enter the target detection interface.

Step 2 Check the checkbox to select different detection types: motion detection (), vehicle detection (), face detection (), and human body detection ().

Step 3 Select the historical analysis () or real-time analysis () to obtain the results.



Figure 5-2 Target Detection

Step 4 The smart analysis results of the detection are displayed in the list. Optionally, click a result in list to play the related video.

5.3 Configure Live View Settings

Live View settings can be customized. You can configure the output interface, dwell time for screen to be shown, mute or turning on the audio, the screen number for each channel, etc.

Step 1 Go to System > Live View > General.

Video Output Interface	VGA/HDMI	•	Event Output	VGA/HDMI	•
Live View Mode	2 * 2	•	Full Screen Monitoring Dwell Time	10s	•
Dwell Time	5s	•			
Enable Audio Output	\checkmark				
Volume	1	5			
Apply					

Figure 5-3 Live View-General

Step 2 Configure the Live View parameters.

- Video Output Interface: Select the video output to configure.
- Live View Mode: Select the display mode for Live View, e.g., 2*2, 1*5, etc.
- **Dwell Time:** The time in seconds to wait between switching of cameras when using auto-switch in Live View.
- Enable Audio Output: Enable/disable audio output for the selected video output.
- Volume: Adjust the Live View volume, playback and two-way audio for the selected output interface.
- Event Output: Select the output to show event video.
- Full Screen Monitoring Dwell Time: Set the time in seconds to show alarm event screen.

Step 3 Click OK.

5.4 Configure Live View Layout

5.4.1 Configure Custom Live View Layout


Step 1 Go to System > Live View > View.

Step 2 Click Set Custom Layout.

Step 3 Click 📩 on the Custom Layout Configuration interface.

Step 4 Edit the layout name.

Step 5 Select a window division mode from the toolbar.

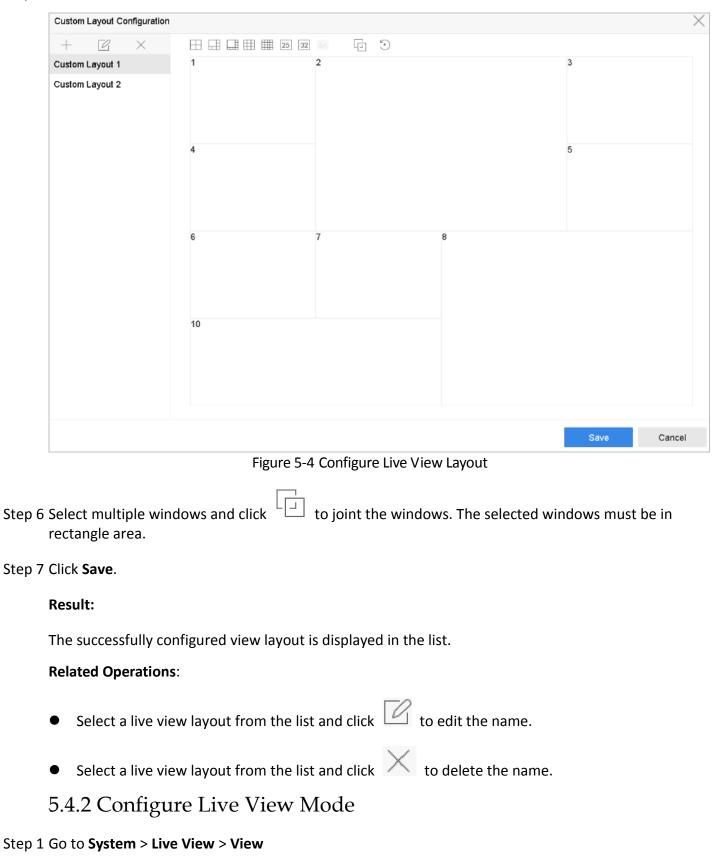

Step 2 Select the video output interface.

- Step 3 Select a constant window-division layout or custom layout from the toolbar.
- Step 4 Select a division window, and double-click on a camera in the list to link the camera to the window.

You can enter the number in the text field to quickly search the camera from the list.

You can also click-and-drag the camera to the desired window on the Live View interface to set the camera order.

Step 5 Click Apply.

Related Operations:

- Click to start Live View for all channels.
- Click to stop all Live View channels.

5.5 Configure Camera Auto-Switch

You can set the camera's auto-switch to play in different display modes.

Step 1 Go to System > Live View > General.

Step 2 Set the video output interface, Live View mode and dwell time.

- Video Output Interface: Select the video output interface.
- Live View Mode: Select the display mode for Live View, e.g., 2*2, 1*5, etc.
- **Dwell Time:** The time in seconds to wait between switching of cameras when in auto-switch. The range is from 5s to 300s.

Step 3 Go to View Settings to set the view layout.

Step 4 Click OK.

5.6 Configure Channel-Zero Encoding

Purpose

Enable the channel-zero encoding when you need to get a remote view of many channels in real time from a web browser or CMS (Client Management System) software, in order to decrease the bandwidth requirement without affecting the image quality.

- Step 1 Go to System>Live View>General.
- Step 2 Set the video output interface to Channel-Zero.
- Step 3 Go to System>Live View>Channel-Zero.
- Step 4 Check Enable Channel-Zero Encoding.

Enable Channel-Zero Encoding		
Frame Rate	Full Frame	•
Max. Bitrate Mode	General	-
Max. Bitrate(Kbps)	1792	-
Apply		
орриу		

Figure 5-5 Live View, Channel-Zero Encoding

Step 5 Configure the **Frame Rate**, **Max. Bitrate Mode**, and **Max. Bitrate**. The higher frame rate and bitrate settings result in higher bandwidth requirement.

Step 6 Click Apply.

Result:

You can view all of the channels on one screen using the CMS or a web browser.

Chapter 6 PTZ Control

6.1 PTZ Control Wizard

Before You Start

Make sure the connected IP camera supports the PTZ function and is properly connected.

Purpose

Follow the PTZ Control Wizard to guide you through the basic PTZ operation.

Step 1 Click $\stackrel{\checkmark}{\rightharpoonup}$ on the quick settings toolbar of the PTZ camera live view. The PTZ control wizard pops up as below.



Figure 6-1 PTZ Control Wizard

Step 2 Follow the PTZ Control Wizard to adjust the PTZ view, focus, and zoom in/out.

Step 3 (Optional) Check Do not show this prompt again.

Step 4 Click OK.

6.2 ConfigurePTZ Parameters

Purpose

Follow these procedures to set the PTZ parameters. The PTZ parameters configuration must be done before you can control the PTZ camera.

Step 1 Click A on the quick settings toolbar of the PTZ camera's Live View. The PTZ control panel displays on the right of the interface.

Step 2 Click **PTZ Parameters Settings** to set the PTZ parameters.

PTZ Parameter Set	tings			\times
Baud Rate	9600		v	
Data Bit	8		~	
Stop Bit	1		~	
Parity	None		-	
Flow Ctrl	None		-	
PTZ Protocol	PELCO-C		-	
Address	0			
Address range: 0~:	255			
		ОК	C	Cancel

Figure 6-2 PTZ Parameters Settings

Step 3 Edit the PTZ camera parameters.

All the parameters should be exactly match the PTZ camera parameters.

Step 4 Click **OK** to save the settings.

6.3 Set PTZ Presets, Patrols, and Patterns

Before You Start

Make sure that the presets, patrols, and patterns are supported by PTZ protocols.

6.3.1 Set Presets

Purpose

Follow these steps to set the preset location that you want the PTZ camera to point to when an event takes place.

Step 1 Click $\stackrel{{}_{\scriptstyle \ensuremath{\rightarrowtail}}}{\rightarrowtail}$ on the quick settings toolbar of the PTZ camera's live view.

Step 2 The PTZ control panel displays on the right of the interface.

Step 3 Use the directional buttons on the PTZ control panel to wheel the camera to the location where you want to set a preset, and the zoom and focus operations can be recorded in the preset as well.

Step 4 Click 🛄 in the lower right corner of Live View to set the preset.



Step 5 Select the preset No. (1 to 255) from the drop-down list.

Step 6 Enter the preset name in the text field.

Step 7 Click Apply to save the preset.

Step 8 Repeat steps 2-6 to save more presets.

Step 9 (Optional) Click **Cancel** to cancel the location information of the preset.

Step 10 (Optional) Click in the lower right corner of Live View to view the configured presets.



Figure 6-4 View the Configured Presets

6.3.2 Call Presets

Purpose

A presets enables the camera to point to a specified position such as a window when an event takes place.

Step 1 Click on the quick settings toolbar of the PTZ camera Live View.

Step 2 Click in the lower right corner of Live View.

Step 3 Select the preset No. from the drop-down list.

Step 4 Click **Call** to call it, or click in the lower right corner of Live View, and click the configured preset to call it.

1	+	Preset 1	Call	Apply	Cancel			
	Eiguro 6 E Call Drocot (1)							

Figure 6-5 Call Preset (1)



6.3.3 Set Patrols

Purpose

Patrols can be set to move the PTZ to key points and have it stay there for a set duration before moving on to the next key point. The key points are correspond to the presets.

Step 1 Click

) on the quick settings toolbar of the PTZ camera's Live View.

Step 2 The PTZ control panel displays on the right of the interface.

Step 3 Click **Patrol** to configure patrol.

Au	x Function	Patrol	Pattern
	Patrol1		
	🗱 Set	🕑 Call	Stop

Figure 6-7 Patrol Configuration

Step 4 Select the patrol No. in the text field.

Step 5 Click **Set** to enter the Patrol Settings interface.

No	Preset	Speed	Duration	Edit
1	Preset 1	1	15	Z
2	Preset2	1	15	

Figure 6-8 Patrol Settings

Step 6 Click I to add a key point to the patrol.

Network Video Recorder User Manual

KeyPoint		
Preset	Preset 1	-
Speed	1	-
Duration	15	•
	Apply	Cancel

Figure 6-9 Key Point Configuration

1) Configure key point parameters.

Preset: Determines the order the PTZ will follow while cycling through the patrol.

Speed: Defines the speed the PTZ will move from one key point to the next.

Duration: Refers to the duration to stay at the corresponding key point.

2) Click **Apply** to save the key points to the patrol.

Step 7 (Optional) Click \square to edit the added key point.

KeyPoint		
Preset	Preset 1	-
Speed	1	-
Duration	15	•
	Apply	Cancel

Figure 6-10 Edit Key Point

Step 8 (Optional) Select a key point and click \times to delete it.

Step 9 (Optional) Click 📍 or 🖊 to adjust the key point order.

Step 10 Click **Apply** to save the patrol settings.

Step 11 Repeat steps 3-9 to set more patrols.

6.3.4 Call a Patrol

Purpose

Calling a patrol makes the PTZ move according to the predefined patrol path.

The PTZ control panel displays on the right of the interface.

Step 2 Click Patrol on the PTZ control panel.

Aux Function	Patrol	Pattern
Patrol1		
🗱 Set	🕑 Call	Stop

Figure 6-11 Patrol Configuration

Step 3 Select a patrol in the text field.

Step 4 Click **Call** to start the patrol.

Step 5 (Optional) Click **Stop** to stop the patrol.

6.3.5 Set a Pattern

Purpose

Patterns can be set by recording the movement of the PTZ. You can call the pattern to make the PTZ move according to the predefined path.

Step 1 Click

on the quick settings toolbar of the PTZ camera's Live View.

The PTZ control panel displays on the right of the interface.

Step 2 Click Pattern to configure a pattern.

Au	x Function	Patrol	Pattern
	Pattern1		
	Record	d 🕞 Call	Stop

Figure 6-12 Pattern Configuration

Step 3 Select the pattern No. in the text field.

Step 4 Set the pattern.

- 1) Click **Record** to start recording.
- 2) Click corresponding buttons on the control panel to move the PTZ camera.
- 3) Click **Stop** to stop recording. The PTZ movement is recorded as the pattern.

Step 5 Repeat steps 3-4 to set more patterns.

6.3.6 Call a Pattern

Purpose

Follow the procedure to move the PTZ camera according to the predefined patterns.

Step 1 Click in on the quick settings toolbar of the PTZ camera's Live View.

Step 2 The PTZ control panel displays on the right of the interface.

Step 3 Click Pattern to configure pattern.

Au	x Function	Patrol	Pattern
	Pattern1		
	Record	d 🕞 Call	Stop

Figure 6-13 Pattern Configuration

Step 4 Select a pattern in the text field.

Step 5 Click Call to start the pattern.

Step 6 (Optional) Click **Stop** to stop the pattern.

6.3.7 Set Linear Scan Limits

Before You Start

Make sure the connected IP camera supports the PTZ function and is properly connected.

Purpose

Linear Scan trigger a scan in the horizontal direction in the predefined range.

This function is supported only by some certain models.



Click 📥 on the quick settings toolbar of the PTZ camera's Live View.

- Step 2 The PTZ control panel displays on the right of the interface.
- Step 3 Click the directional buttons to wheel the camera to the location of where you want to set the limit, and click Left Limit or Right Limit to link the location to the corresponding limit.

The speed dome linear scans from the left limit to the right limit, and you must set the left limit on the left side of the right limit. Also, the angle from the left limit to the right limit must be no more greater than 180°.

6.3.8 Call Linear Scan

Purpose

Follow the procedure to call the linear scan in the predefined scan range.

Step 1 Click On the quick settings toolbar of the PTZ camera's Live View.

Step 2 The PTZ control panel displays on the right of the interface.

Step 3 Click Linear Scan to start the linear scan and click it again to stop it.

Step 4 (Optional) Click **Restore** to clear the defined left limit and right limit data.

Reboot the camera to have the settings take effect.

6.3.9 One-Touch Park

Purpose

Certain speed dome models can be configured to start a predefined park action (scan, preset, patrol and etc.) automatically after a period of inactivity (park time).

Step 1 Click $\stackrel{\smile}{\rightharpoonup}$ on the quick settings toolbar of the PTZ camera's Live View.

The PTZ control panel displays on the right of the interface.

Step 2 Click Park (Quick Patrol), Park (Patrol 1), or Park (Preset 1) to activate the park action.

Park (Quick Patrol): The dome starts patrolling from the predefined preset 1 to preset 32 in order after the park time. Undefined presets will be skipped.

Park (Patrol 1): The dome starts moving according to the predefined patrol 1 path after the park time.

Park (Preset 1): The dome moves to the predefined preset 1 location after the park time.

The park time can be set only via the speed dome configuration interface. The default value is 5s by default.

Step 3 Click Stop Park (Quick Patrol), Stop Park (Patrol 1), or Stop Park (Preset 1) to inactivate it.

6.4 Auxiliary Functions

Before You Start

Make sure the connected IP camera supports the PTZ function and is properly connected.

Purpose

You can operate the auxiliary functions including light, wiper, 3D positioning, and center on the PTZ control panel.

Step 1 Click

on the quick settings toolbar of the PTZ camera's Live View.

Step 2 The PTZ control panel displays on the right of the interface.

Step 3 Click Aux Function.



Figure 6-14 Aux Function Configuration

Step 4 Click the icons to operate the aux functions. See the table for the icon descriptions.

Icon	Description
·•	Light on/off
	Wiper on/off
30	3D positioning
Ģ	Center

Table 6-1 Description of Aux Functions Icons

Chapter 7 Storage

7.1 Storage Device Management

7.1.1 Install the HDD

Before starting the device, install and connect an HDD to the device. Refer to the Quick Start Guide for the installation instructions.

7.1.2 Add the Network Disks

You can add the allocated NAS or IP SAN disk to the device, and use it as a network HDD. Up to 8 network disks can be added.

Adding a NAS

Step 1 Go to Storage > Storage Device.

Step 2 Click Add to enter the Custom Add interface.

Step 3 Select NetHDD from the drop-down list.

Step 4 Set the type to NAS.

Step 5 Enter the NetHDD IP address in the text field.

Step 6 Click Search to search the available NAS disks.

Custom Add			
NetHDD	NetHDD 1		-
Туре	NAS		-
NetHDD IP	120 . 36 . 2 . 39		
NetHDD Directory	/nas/device1/11		Search
		ОК	Cancel

Figure 7-1 Add NAS Disk

- Step 7 Select the NAS disk from the list shown below, or manually enter the directory in the NetHDD Directory text field.
- Step 8 Click the **OK** to complete the adding of the NAS disk.

Result:

After successfully adding the NAS disk, return to the HDD Information menu. The added NetHDD will be displayed in the list.

Adding an IP SAN

- Step 1 Go to Storage > Storage Device.
- Step 2 Click Add to enter the Custom Add interface.
- Step 3 Select NetHDD from the drop-down list.
- Step 4 Select the type to IP SAN.
- Step 5 Enter the NetHDD IP address in the text field.
- Step 6 Click **Search** to search the available IP SAN disks.
- Step 7 Select the IP SAN disk from the list.
- Step 8 Click **OK** to complete adding IP SAN disk.

A single IP SAN disk can be added.

Custom Add				
NetHDD	NetHDD 1		•	
Туре	IP SAN		•	
NetHDD IP	120 . 36 . 2 . 39			
NetHDD Directory	iqn.2008-06.storos.1-2		\otimes	Search
		ОК		Cancel

Figure 7-2 Add IP SAN Disk

Step 9 After having successfully added the IP SAN disk, return to the HDD Information menu. The added NetHDD will be displayed in the list.

If the installed HDD or NetHDD is uninitialized, select it and click **Init** for initialization.

7.1.3 Configure eSATA for Data Storage

When there is an external eSATA device connected to the device, you can configure eSATA for the data storage, and you can manage the eSATA in the device.

Step 1 Click Storage>Advanced.

Step 2 Select the eSATA type to Export or Record/Capture from **eSATA**.

Export: Use the eSATA for backup.

Record/Capture: Use the eSATA for record/capture. Refer to the following steps for operating instructions.

eSATA	eSATA1	•
Usage	Record/Capture	•

Figure 7-3 Set eSATA Mode

Step 3 When the eSATA type is set to Record/Capture, enter the storage device interface.

Step 4 Edit the property of the selected eSATA, or initialize it as required.

7.2 Storage Mode7.2.1 Configure HDD Groups

Purpose

Multiple HDDs can be managed in groups. Video from specified channels can be recorded onto a particular HDD group through HDD settings.

Step 1 Go to Storage > Storage Device.

Step 2 Check the checkbox to select the HDD to set the group.

Add	\bigcirc Init					Total Capa	city 1863.03GB	Free Space	1702.00GB
	Label	Capacity	Status	Property	Туре	Free Space	Group	Edit	Delete
 ✓ 	5	931.52GB	Normal	R/W	Local	871.00GB	2	Ľ	×
	7	931.52GB	Normal	R/W	Local	831.00GB	1	Ľ	×

Figure 7-4 Storage Device

Step 3 Click is to enter the Local HDD Settings interface.

Local HDD Settir	gs			
HDD №.	5			
HDD Property	●RW OR	ead-only	Redundan	l
Group	○1 ●2 ○3 ○4	○5 ○6	07 08	
	○9 ○10 ○11 ○12	2 () 13 () 14	015 016	
HDD Capacity	931.52GB			
			ок	Cancel

Figure 7-5 Local HDD Settings

Step 4 Select the Group number for the current HDD.

Step 5 Click OK.



Regroup the cameras for HDD if the HDD group number is changed.

Step 6 Go to Storage> Storage Mode.

Step 7 Check Group tab.

Step 8 Select the group No. from the list.

Step 9 Check the checkbox to select the IP camera(s) to record/capture on the HDD group.

Mode		Quo	ota	 Gr 	oup				
Record on HDD G	roup	2							•
□IP Camera	✓ D1	D2	✓ D3	✓ D4	✓ D5	✓ D6	✓ D7	✓ D8	
	D9	D10	☑ D11	 ∠D12	D13	D14	D15	D16	
	D17	D18	D19	D20	D21	D22	D23	D24	
	D25	D26	D27	D28	D29	D30	D31	D32	
	D33	D34	D35	D36	D37	D38	D39	D40	
	D41	D42	D43	D44	D45	D48	D47	D48	
Аррі									

Figure 7-6 Storage Mode-HDD Group

Step 10 Click Apply.



Reboot the device to activate the new storage mode settings.

7.2.2 Configure HDD Quota

Purpose

Each camera can be configured with an allocated quota for storing recorded files or captured pictures.

Step 1 Go to Storage> Storage Mode.

- Step 2 Check the checkbox of **Quota** tab.
- Step 3 Select a camera to set quota.
- Step 4 Enter the storage capacity in the text fields of Max. Record Capacity (GB) and Max. Picture Capacity (GB).

Mode	Quota Group
Camera	[D1] IPCamera 01
Used Record Capacity	18.00GB
Used Picture Capacity	2048.00MB
HDD Capacity (GB)	1863
Max. Record Capacity (GB)	1500
Max. Picture Capacity (GB)	50 🛞
🔺 Free Quota Space 313	GB
Copy to	Apply
000310	- Appy

Figure 7-7 Storage Mode-HDD Quota

Step 5 (Optional) You can click **Copy to** if you want to copy the quota settings of the current camera to other cameras.

Step 6 Click Apply.

When the quota capacity is set to 0, all cameras will use the total capacity of HDD for record and picture capture.

Reboot the device to activate the new storage mode settings.

7.3 Recording Parameters

7.3.1 Main Stream

The Main Stream refers to the primary stream that affects data recorded to the hard disk drive and will directly determine your recording quality and image size.

Comparing with the sub-stream, the main stream can provide a higher quality video with higher resolution and frame rate.

Frame Rate (FPS - Frames Per Second): refers to how many frames are captured each second. A higher frame rate is advantageous when there is movement in the video stream, as it maintains image quality throughout.

Resolution: Image resolution is a measure of how much detail a digital image can hold: the greater the resolution, the greater the level of detail. Resolution can be specified as the number of pixel-columns (width) by the number of pixel-rows (height), e.g.,1024×768.

Bitrate: The bit rate (in kbit/s or Mbit/s) is often referred to as speed, but actually defines the number of bits/time unit and not distance/time unit.

Enable H.264+ Mode: The H.264+ mode helps to ensure the high video quality with a lowered bitrate. It can effectively reduces the need of bandwith and HDD storage space.

A higher resolution, frame rate and bitrate setting will provide you the better video quality, but it will also require more internet bandwidth and use more storage space on the hard disk drive.

7.3.2 Sub-Stream

The Sub-stream is a second codec that runs alongside the mainstream. It allows you to reduce the outgoing internet bandwidth without sacrificing your direct recording quality.

The Sub-stream is often exclusively used by smartphone applications to view live video. Users with limited internet speeds may benefit most from this setting.

7.3.3 Picture

The picture refers to the live picture capture in continuous or event recording type. (Storage > Capture Schedule > Advanced)

Picture Quality: set the picture quality to low, medium or high. The higher picture quality results in more storage space requirement.

Interval: the interval of capturing live picture.

Capture Delay Time: the duration of capturing pictures.

7.3.4 ANR

ANR (Automatic Network Replenishment) function which enables the IP camera to save the recording files in the local storage when the network is disconnected, and when the network is resumed, it uploads the files to the device.

Enable the ANR (Automatic Network Replenishment) function via the web browser (Configuration > Storage > Schedule Settings > Advanced).

7.3.5 Configure Advanced Recording Settings

Step 1 Go to Storage > Schedule Settings > Record Schedule/Capture Schedule.

Step 2 Check Enable to enable scheduled recording.

Step 3 Click **Advanced** to set the recording parameters.

Advanced Parameters					
Record Audio:					
Pre-Record:	5s	-			
Post-Record:	5s	•			
Stream Type:	Main Stream	•			
Expired Time (da	y): 5				
Redundant Re	cord/Capture				
	ОК	Cancel			

Figure 7-8 Advanced Record Settings

Record Audio: Check the checkbox to enable or disable audio recording.

Pre-record: The time you set to record before the scheduled time or event. For example, when an alarm triggers the recording at 10:00, and if you set the pre-record time as 5 seconds, the camera records at 9:59:55.

Post-record: The time you set to record after the event or the scheduled time. For example, when an alarm triggered recording ends at 11:00, and if you set the post-record time as 5 seconds, it records till 11:00:05.

Expired Time: The expired time is period for a recorded file to be kept in the HDD. When the deadline is reached, the file will be deleted. If you set the expired time to 0, the file will not be deleted. The actual keeping time for the file should be determined by the capacity of the HDD.

Redundant Record/Capture: By enabling redundant record or capture you save the record and captured picture in the redundant HDD. See *Chapter Configure Redundant Recording and Capture*.

Stream Type: Main stream and sub-stream are selectable for recording. When you select sub-stream, you can record for a longer time with the same storage space.

Step 4 Click **OK** to save the settings.

7.4 Configure Recording Schedule

Set the record schedule, and then the camera automatically starts/stops recording according to the configured schedule.

Before you start

Make sure you have installed the HDDs to the device or added the network disks before you want to store the video files, pictures and log files.

Refer to the *Quick Start Guide* for the HDD installation.

Refer to *Chapter 7.1.2* Add the Network Disk for network HDD connections.

Step 1 Go to Storage > Recording Schedule.

Step 2 Select a camera.

- Step 3 Check the Enable Schedule.
- Step 4 Select a **Record Type**. The record type can be Continuous, Motion Detection, Alarm, Motion | Alarm, Motion & Alarm, and Event.

Different recording types are configurable.

Continuous: scheduled recording.

Event: recording triggered by all event triggered alarm.

Motion: recording triggered by motion detection.

Alarm: recording triggered by alarm.

M/A: recording triggered by either motion detection or alarm.

M&A: recording triggered by motion detection and alarm.

POS: recording triggered by POS and alarm.

Step 5 Select a day and click-and-drag the mouse on the time bar to set the record schedule.

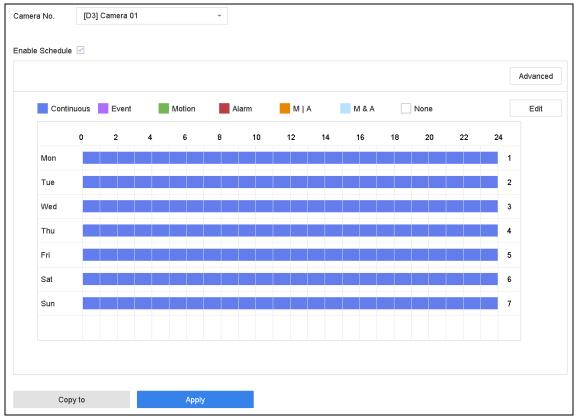


Figure 7-9 Record Schedule

Step 6 Repeat the above steps to schedule recording or capture for other days in the week.

The all-day continuous recording is configured for the device by factory default.

Step 7 (Optional) Copy the schedule settings of the one day to the other days of the week or holiday.

- 1) Click the tab.
- 2) Select the day (s) to duplicate with the same schedule settings.
- 3) Click OK.

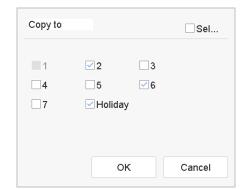


Figure 7-10 Copy Schedule to Other Days

Step 8 Click Apply.



To enable Motion, Alarm, M | A (motion or alarm), M & A (motion and alarm) and Event triggered recording and capture, you must configure the motion detection settings, alarm input settings and other events as well. Please refer to Chapter 11 Event and Alarm Settings and Chapter 12 VCA Event Alarm for details for details.

7.5 Configure Continuous Recording

- Step 1 Go to Camera > Encoding Parameters > Recording Parameters.
- Step 2 Set the continuous main stream/sub-stream recording parameters for the camera.
- Step 3 Go to **Storage** > **Recording Schedule**.
- Step 4 Select the recording type to **Continuous**.
- Step 5 Drag the mouse on the time bar to set the continuous recording schedule. Refer to Chapter 7.4 Configure Recording Schedule for details.

7.6 Configure Motion Detection Triggered Recording

You can configure the recording triggered by the motion detection event.

Step 1 Go to System > Event > Normal Event > Motion Detection.

- Step 2 Configure the motion detection and select the channel (s) to trigger the recording when motion event occurs. Refer to Chapter 11.3 Configure Motion Detection Alarm for details.
- Step 3 Go to Camera > Encoding Parameters > Recording Parameters.
- Step 4 Set the event main stream/sub-stream recording parameters for the camera.
- Step 5 Go to Storage > Recording Schedule.

Step 6 Select the recording type to Motion.

Step 7 Drag the mouse on the time bar to set the motion detection recording schedule. Refer to Chapter 7.4 Configure Recording Schedule for details.

7.7 Configure Event Triggered Recording

You can configure the recording triggered by the motion detection, motion detection and alarm, face detection, vehicle detection, line crossing detection, etc.

- Step 1 Go to System > Event.
- Step 2 Configure the event detection and select the channel (s) to trigger the recording when event occurs. Refer to Chapter 11 Event and Alarm Settings and Chapter 12 VCA Event Alarm for details.
- Step 3 Go to Camera > Encoding Parameters > Recording Parameters.
- Step 4 Set the event main stream/sub-stream recording parameters for the camera.
- Step 5 Go to **Storage** > **Recording Schedule**.
- Step 6 Select the recording type to **Event**.
- Step 7 Drag the mouse on the time bar to set the event detection recording schedule. Refer to Chapter 7.4 Configure Recording Schedule for details.

7.8 Configure Alarm Triggered Recording

You can configure the recording triggered by the motion detection, face detection, vehicle detection, line crossing detection, etc.

Step 1 Go to System > Event > Normal Event > Alarm Input.

Step 2 Configure the alarm input and select the channel (s) to trigger the recording when alarm occurs.

Refer to Chapter 11 Event and Alarm Settings and Chapter 12 VCA Event Alarm for details for details.

Step 3 Go to Camera > Encoding Parameters > Recording Parameters.

Step 4 Set the event main stream/sub-stream recording parameters for the camera.

- Step 5 Go to **Storage > Recording Schedule**.
- Step 6 Select the recording type to Alarm
- Step 7 Drag the mouse on the time bar to set the alarm recording schedule. Refer to Chapter 7.4 Configure Recording Schedule for details.

7.9 Configure POS Event Triggered Recording

You can configure the recording triggered by the connected POS event, such as the transaction, etc.

Step 1 Go to System >POS Settings.

Step 2 Configure the POS and select the channel (s) in the **Event Linkage** to trigger the recording when POS event occurs.

Refer to Chapter 13 Smart Analysis for details.

- Step 3 Go to Camera > Encoding Parameters > Recording Parameters.
- Step 4 Set the event main stream/sub-stream recording parameters for the camera.
- Step 5 Go to **Storage > Recording Schedule**.
- Step 6 Select the record type to **POS Event**.
- Step 7 Set the schedule for the POS event triggered recording. Refer to Chapter 7.4 Configure Recording Schedule for details.

7.10 Configure Picture Capture

The picture refers to the live picture capture in continuous or event recording type.

Step 1 Go to Storage > Capture Schedule > Advanced.

Step 2 Set the picture parameters.

- **Resolution**: set the resolution of the picture to capture.
- **Picture Quality**: set the picture quality to low, medium or high. The higher picture quality results in more storage space requirement.
- **Interval**: the interval of capturing live picture.
- **Capture Delay Time**: the duration of capturing pictures.

Step 3 Go to Storage > Capture Schedule.

Step 4 Select the camera to configure the picture capture.

Step 5 Set the picture capture schedule. Refer to Chapter 7.4 Configure Recording Schedule for details.

7.11 Configure Holiday Recording and Capture

Purpose:

Follow the steps to configure the record or capture schedule on holiday for that year. You may want to have different plan for recording and capture on holiday.

Step 1 Go to System > Holiday Settings.

Step 2 Select a holiday item from the list and click

Step 3 Check the **Enable** to configure the holiday.

Edit					
Enable					
Holiday N	Holiday1				
Mode	By Month				-
Start Date	Jan		•	1	-
End Date	Feb		•	8	~
		Apply		ОК	Cancel

Figure 7-11 Edit Holiday Settings

- 1) Edit the holiday name.
- 2) Select the mode to by date, by week or by month.
- 3) Set the start and end date of the holiday.
- 4) Click **OK**.

Step 4 Set the schedule for the holiday recording. Refer to Chapter 7.4 Configure Recording Schedule for details.

7.12 Configure Redundant Recording and Capture

Purpose:

Enabling redundant recording and capture, which means saving the record files and captured pictures not only in the R/W HDD but also in the redundant HDD, will effectively enhance the data safety and reliability.

You must set the storage mode to *Group* before you set the HDD property to Redundancy. For detailed information, please refer to Chapter 7.2.1 Configure HDD Group. There should be at least another HDD which is in Read/Write status.

Step 1 Go to Storage > Storage Device.

Step 2 Select a HDD from the list and Click is to enter the Local HDD Settings interface.

Step 3 Set the HDD property to **Redundancy**.

Local HDD Settin	gs			
HDD No.	5			
HDD Property	RW	⊖ Read-only	Redund	dan
Group		○4 ○5 ○6 ○12 ○13 ○14		;
HDD Capacity	931.52GB			
			ОК	Cancel

Figure 7-12 HDD Property-Redundancy

Step 4 Go to Storage > Schedule Settings > Record Schedule/Capture Schedule.

Step 5 Click Advanced to set the camera recording parameters.

Advanced Parameters					
Record Audio:					
Pre-Record:	5s			-	
Post-Record:	5s			•	
Stream Type:	Main Strea	m		•	
Expired Time (da	ıy):	5			
Redundant Re	cord/Capture				
	ок		Cance	I	

Figure 7-13 Record Parameters

Step 6 Check the checkbox of **Redundant Record/Capture**.

Step 7 Click **OK** to save settings.

Chapter 8 Disk Array (RAID)

Purpose

A disk array is a data storage virtualization technology that combines multiple physical disk drives into a single logical unit. Also known as a "RAID", an array stores data over multiple HDDs to provide enough redundancy so that data can be recovered if one disk fails. Data is distributed across the drives in one of several ways called "RAID levels", based the redundancy and performance required.

Disk arrays are supported by LTN89xx-R Series device only.

8.1 Create a Disk Array

Purpose

The device supports software-based disk arrays. Enable the RAID function as required. Two ways are available for creating an array: one-touch configuration and manual configuration. The following flow chart shows the process of creating array.

8.1.1 Enable a RAID

Purpose

Perform the following steps to enable the disk array function.

Step 1 Go to Storage > Advanced.

Overwrite	
eSATA	eSATA1 ~
Usage	Record/Capture -
Enable HDD Sleeping	
Enable RAID	
Use the enterprise-class H	DD.
Apply	

Figure 8-1 Advanced

Step 2 Check Enable RAID.

Step 3 Click Apply.

Step 4 Reboot the device to have settings take effect.

8.1.2 One-Touch Creation

Purpose

One-touch configuration creates the disk array. By default, the array type created by one-touch configuration is RAID 5.

Before You Start

- Enable the RAID function. For details, refer to Chapter 8.1.1 Enable a RAID.
- Install at least 3 HDDs. If more than 10 HDDs are installed, 2 arrays will be created. To maintain
 reliability and stability running of the HDDs, it is recommended to use of enterprise-level HDDs of
 the same model and capacity.

Step 1 Go to Storage > RAID Setup > Physical Disk.

1 1663.02GB Normal Functional ST2000VX000-1CU164 ICI Normal 2 2794.52GB Normal Functional ST3000VX000-9YW166 ICI Normal 5 1663.02GB Normal Functional ST2000VX000-1CU164 ICI Normal 9 2794.52GB Normal Functional ST3000VX000-1CU164 ICI Normal	+ One-touch Cor	nfig 📿 Create					
2 2794.52GB Normal Functional ST3000VX000-9YW166 If None 5 1863.02GB Normal Functional ST2000VX000-1CU164 If None 9 2794.52GB Normal Functional ST3000VX000-1CU164 If None	□No.	Capacity Array	Туре	Status	Model	Hot Spare	Task
5 1863.02GB Normal Functional ST2000VX000-1CU164 Image: Constraint of the state	1	1863.02GB	Normal	Functional	ST2000VX000-1CU164		None
9 2794.52GB Normal Functional ST3000VX000-1CU166 C Normal	2	2794.52GB	Normal	Functional	ST3000VX000-9YW166		None
	5	1863.02GB	Normal	Functional	ST2000VX000-1CU164		None
□10 1863.02GB Normal Functional ST2000VX000-1CU164 🗹 Normal	9	2794.52GB	Normal	Functional	ST3000VX000-1CU166		None
	1 0	1863.02GB	Normal	Functional	ST2000VX000-1CU164		None

Figure 8-2 Physical Disk

Step 2 Click One-touch Config.

Step 3 Edit the array name in Array Name and click OK to start configuring.

If you install 4 or more HDDs, a hot spare disk for array rebuilding will be created.

Step 4 When a message box pops up when the array creation is completed, click **OK** on it.

Step 5 Optionally, the device will automatically initialize the created array. Go to **Storage > RAID Setup > Array** to view the information of the created array.

8.1.3 Manual Creation

Purpose

Manually create a RAID 0, RAID 1, RAID 5, RAID 6, or RAID 10 array.

Step 1 Go to Storage > RAID Setup > Physical Disk.

Step 2 Click Create.

Create Array				
Array Name				
RAID Level	RAID 5			•
Initialization Type	Initialize (Fas	st)		•
Physical Disk	□1 □2	5 9	10	
Array Capacity (Estir	nated): 0GB	OK	Cancel	

Table 8-1 Create Array Window

Step 3 Input the array name.

Step 4 Select RAID Level as RAID 0, RAID 1, RAID 5, RAID 6, or RAID 10 as required.

Step 5 Select the physical disks to constitute the array.

Table 8-2 Required Number of HDDs

RAID Level	Required Number of HDDs
RAID 0	At least 2 HDDs.
RAID 1	At least 2 HDDs.
RAID 5	At least 3 HDDs.
RAID 6	At least 4 HDDs.
RAID 10	The number of HDD must be an even ranges from 4 to 16.

Step 6 Click OK.

Step 7 Optionally, the device will automatically initialize the created array. Go to **Storage > RAID Setup > Array to** view the information of the created array.

No	Name	Free Space	Physical Disk	Hot S	Status	Level	Rebuild	Delete	Task
1	Array01	3725/3725G	1 5 10		Functional	RAID 5		×	Initialize (Fast)(Running) 43%

Figure 8-3 Array List

8.2 Rebuild an Array

Purpose:

The array status includes Functional, Degraded, and Offline. To ensure the high security and reliability of the data stored in an array, take immediate and proper maintenance of the arrays according its status.

- Functional: No disk loss in the array.
- Offline: The number of lost disks has exceeded the limit.
- Degraded: If any HDD fails in the array, the array degrades. Restore it to Functional status by rebuilding the array.

8.2.1 Configure a Hot Spare Disk

Purpose

Hot spare disks are required for disk array automatic rebuilding.

Step 1 Go to Storage > RAID Setup > Physical Disk.

No.	Capacity	Array	Туре	Status	Model	Hot Spare	Task
1	1863.02GB	Array01	Array	Functional	ST2000VX000-1CU164		None
2	2794.52GB		Normal	Functional	ST3000VX000-9YW166	Ľ	None
5	1863.02GB	Array01	Array	Functional	ST2000VX000-1CU164	-	None
9	2794.52GB		Normal	Functional	ST3000VX000-1CU166	Ľ	None
10	1863.02GB	Array01	Array	Functional	ST2000VX000-1CU164	-	None

Figure 8-4 Physical Disk

Step 2 Click of an available HDD to set it as the hot spare disk.

8.2.2 Automatically Rebuild an Array

Purpose

The device can automatically rebuild degraded arrays with the hot spare disks.

Before You Start

Create hot spare disks. For details, refer to Chapter 8.2.1 Configure a Hot Spare Disk.

Step 1 The device will automatically rebuild degraded arrays with the hot spare disks. Go to **Storage > RAID Setup > Array** to view rebuilding progress.




Figure 8-5 Array List

8.2.3 Manually Rebuild an Array

Purpose

If no hot spare disks are configured, rebuild a degraded array manually.

Before You Start

At least one available physical disk must exist to rebuild an array.

Step 1 Go to Storage > RAID Setup > Array.




Figure 8-6 Array List

Step 2 Click degraded array.

Rebuild Array	
Array Name	Array01
RAID Level	RAID 5
Array Disk	5 10
Physical Disk	2 9
	OK Cancel

Figure 8-7 Rebuild Array

Step 3 Select the available physical disk.

Step 4 Click OK.

Step 5 Click **OK** on the pop up message box "Do not unplug the physical disk when it is under rebuilding."

8.3 Delete an Array

Deleting an array will delete all the data saved to it.

Step 1 Go to Storage > RAID Setup > Array.



Figure 8-8 Array List

Step 2 Click \times of the array to delete it.



Figure 8-9 Attention

Step 3 Click Yes on the popup message box.

8.4 Check and Edit Firmware

Purpose

You can view the firmware information and set the background task speed on the Firmware interface.

Step 1 Go to Storage > RAID Setup > Firmware.

Version	1.1.0.0003
Physical Disk Count	16
Array Count	16
Virtual Disk Count	0
RAID Level	0 1 5 6 10
Hot Spare Type	Global Hot Spare
Support Rebuild	Yes
Background Task Speed	Medium Speed -

Figure 8-10 Firmware

Step 2 Optionally, set the **Background Task Speed**.

Step 3 Click Apply.

Chapter 9 File Management

9.1 Search and Export All Files

9.1.1 Search Files

Purpose

Specify detailed conditions to search videos and pictures.

Step 1 Go to File Management > All Files.

Step 2 Specify detailed conditions, including time, camera, event type, etc.

Time Today 2017-10-24 20:00:00 2017-10-24 23:59:59 Camera - Tag Image: Camera - Tag File Status All - Event Type None - Plate No. Image: Camera - Area/Country None -						
Tag Event Type None Plate No. Area/Country None	Time	Today ~	2017-10-24 00:00:0	0 🛱 2017-10-24 23:59:59		
Event Type None Plate No. Area/Country None	Camera	[All] Camera		•		
Plate No. Area/Country None	Тад		File Status	All		
Area/Country None -	Event Type	None -				
	Plate No.					
Empty Conditions Search Save	Area/Country	None -				
Empty Conditions Search Save						
Empty Conditions Search Save						
Empty Conditions Search Save						
Empty Conditions Search Save						
Empty Conditions Search Save						
Empty Conditions Search Save						
Empty Conditions Search Save						
				Empty Conditions	Search	Save

Figure 9-1 Search All Files

Step 3 Click **Search** to display results. The matched files will be displayed.

9.1.2 Export Files

Purpose

Export files for backup purposes using a USB device (USB flash drive, USB HDD, USB optical disc drive), SATA optical disc drive, or eSATA HDD.

Step 1 Search files to export. For details, see 9.1.1 Search Files.

Step 2 Click files to select and click Export.

Step 3 Select the file to export as Video and Log and click OK.

Step 4 Click **OK** to export files to backup device.

9.2 Search and Export Human Files

9.2.1 Search Human Files

Purpose

Specify detailed conditions by which to search human pictures and videos.

Before You Start

Configure the human body detection function for the cameras you want to search and export human pictures and videos.

Step 1 Go to File Management > Human Files.

Step 2 Select Time and Camera to search.

Time	Custom	- 2017-10-24 0	0:00:00	2017-10-24 23:59:59		
Camera	[All] Camera			~		
			E	Empty Conditions	Search	Save

Figure 9-2 Search Human Files

Step 3 Click Search to display results. The matched files are displayed in thumbnails or a list.

Step 4 Select Target Picture or Source Picture in the menu bar to display related pictures only.

- **Target Picture**: Display the search results of people close-ups.
- **Source Picture**: Display the search results of original pictures captured by the camera.

9.2.2 Export Human Files

Purpose

Export files for backup purposes using a USB device (USB flash drive, USB HDD, USB optical disc drive), SATA optical disc drive, or eSATA HDD.

Step 1 Search for the human files to export. For details, see 9.2.1 Search Human Files.

- Step 2 Click to select files and click Export.
- Step 3 Select the file to export as Video and Log and click OK.

Step 4 Click **OK** to export files to backup device.

9.3 Search and Export Vehicle Files

9.3.1 Search Vehicle Files

Purpose

Specify detailed conditions by which to search vehicle pictures and videos.

Before You Start

Configure the vehicle detection function for the cameras you want to search and export vehicle pictures and videos.

Step 1 Go to File Management > Vehicle Files.

Step 2 Specify detailed conditions, including Time, Camera, Plate No., and Area/Country.

Alij Camera	•		
lone -			
lone			
None -			
	Empty Conditions	Search	Save
		Empty Conditions	Empty Conditions Search

Figure 9-3 Search Vehicle Files

Step 3 Click Search to display results. The matched files are displayed in thumbnails or a list.

- Step 4 Select **Target Picture** or **Source Picture** in the menu bar to display related pictures only. Select **Video** or **Picture** to specify the file type.
 - **Target Picture**: Display the search results of vehicle close-ups.
 - **Source Picture**: Display the search results of original pictures captured by the camera.

9.3.2 Export Vehicle Files

Purpose

Export files for backup purposes to a USB device (USB flash drive, USB HDD, USB optical disc drive), SATA optical disc drive, or eSATA HDD.

Step 1 Search for the vehicle files to export. For details, see 9.3.1 Search Vehicle Files.

- Step 2 Click files to select and click Export.
- Step 3 Select the file to export as Video and Log and click OK.

Step 4 Click **OK** to export files to backup device.

9.4 Search History Operation

9.4.1 Save Search Conditions

Purpose

You can save the search conditions for future reference and quick searches.

Step 1 Go to File Management > All Files/People Appearance File/Vehicle File.

Step 2 Set the search conditions.

Step 3 Click Save.

Step 4 Enter a name in text field and click **Finished**. The saved search conditions will be displayed in search history list.

9.4.2 Call Search History

Purpose

You can quickly search files by calling the search history.

Step 1 Go to File Management > All Files/Human Files/Vehicle Files.

Step 2 Click a search conditon to search files quickly.

Chapter 10 Playback

10.1 Play Video Files

10.1.1 Instant Playback

Instant Playback enables the device to play the recorded video files recorded in the last five minutes. If no video is found, it means there is no recording during the last five minutes.

Step 1 On the Live View window of the selected camera, move the cursor to the window bottom to access the toolbar.

Step 2 Click

 \Box to start instant playback.



Figure 10-1 Playback Interface

10.1.2 Play Normal Video

Step 1 Go to Playback.

- Step 2 Check one or more cameras in the camera list to start playing the video.
- Step 3 Select a date in the calendar to start playing the video.
- Step 4 Use the toolbar in the bottom part of the playback interface to control the playing and perform a series of operations. Refer to Chapter 10.2 Playback Operations 8.2.



Step 5 Click the channel(s) to execute simultaneous playback of multiple channels.

Figure 10-2 Playback Interface

256x playing speed is supported.

10.1.3 Play Smart Searched Video

In smart playback mode, the device can analyze the video containing the motion, line, or intrusion detection information, mark it in red, and play the smart searched video.

INOTE

The smart playback must be in the single-channel playing mode.

Step 1 Go to Playback.

Step 2 Start playing the video of camera.

Step 3 Click Smart.

Step 4 From the toolbar at the bottom of the playing window, click the motion/line crossing/ intrusion icon for search.



Figure 10-3 Playback by Smart Search

Step 5 Set the rules and areas for smart search of line crossing detection, intrusion detection or motion detection event triggered recording.

•Line Crossing Detection

- 1) Click the icon.
- 2) Click on the image to specify the start point and end point of the line.

Intrusion Detection

- 1) Click the icon.
- 2) Specify 4 points to set a quadrilateral region for intrusion detection. Only one region can be set.

Motion Detection

- 1) Click the icon.
- 2) Hold the mouse on the image to draw the detection area manually.
- 3) Click Search 🖂 to search the matched video and start to play it.

10.1.4 Play Custom Searched Files

You can play the files by custom search with different conditions.

Step 1 Go to Playback.

- Step 2 Select a camera or cameras from the list.
- Step 3 Click **Custom Search** on the left bottom to enter the Search Condition interface.

Step 4 Enter the search conditions for the files, e.g., time, file status, event type, etc.

Network Video Recorder User Manual

A	-	File Status	All		
None	-				
None	-				
					Save
	None	None	None	None Empty Conditions	

Figure 10-4 Custom Search

Step 5 Click Search.

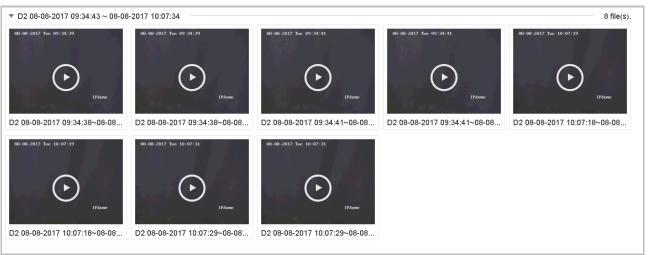


Figure 10-5 Custom Searched Video Files

Step 6 On the search results interface, select a file and click to start playing the video.

10.1.5 Play Tag Files

Purpose

Video tag allows you to record related information such as people and locations of a certain time point during playback. You can use video tag(s) to search for video files and position time point.

Before playing back by tag:

Add Tag Files

Step 1 Go to Playback.

Step 2 Search and play back the video file(s).

Step 3 Click I to add the tag.

Step 4 Edit the tag information.

Step 5 Click OK.



Max. 64 tags can be added to a single video file.

Edit Tag Files

You can edit the tag information for the existed tag video.

Step 1 Go to Playback.

Step 2 Click Tag.

The available tags are white marked and displayed in the time bar.

Step 3 Point the white marked tag in the time bar to access the tag information.

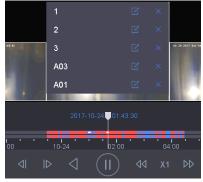


Figure 10-6 Edit Tag Files

Step 4 Click Step

Step 5 Click OK.

Play Tag Files

Step 1 Go to Playback.

Step 2 Click **Custom Search** on the left bottom to enter the Search Condition interface.

Step 3 Enter the search conditions for the tag files, including the time and the tag keyword.

Network Video Recorder User Manual

īme	Custom	*	2017-10-01 00:00:0	0 2017-10-23 23:59:59	
ag	A		File Status	All	
Event Type	None	*			
Plate No.					
rea/Country	None	-			

Figure 10-7 Tag Search

Step 4 Click Search.



Figure 10-8 Searched Tag Files

Step 5 On the search results interface, select a tag file and click to start playing the video.

10.1.6 Play Event Files

Purpose

Play back video files on one or several channels searched by event type (e.g., alarm input, motion detection, line crossing detection, face detection, vehicle detection, etc.).

Step 1 Go to Playback.

- Step 2 Click **Custom Search** on the left bottom to enter the Search Condition interface.
- Step 3 Enter the search conditions for the event files, e.g., time, event type, file status, vehicle information (for vehicle detection event), etc.

Step 4 Click Search.

Step 5 On the search results interface, select an event video file/picture file and double click to start playing the video.

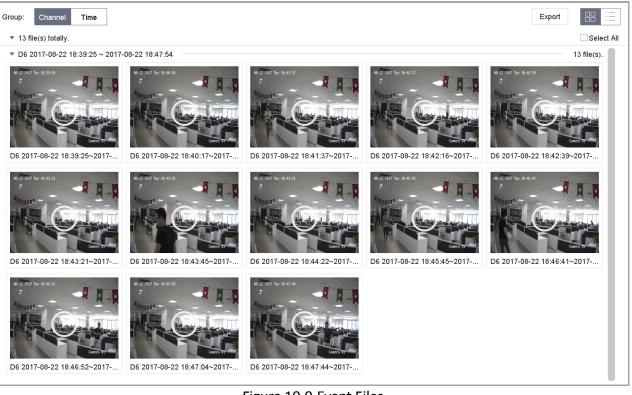


Figure 10-9 Event Files

You can click or button to play 30s backward or forward.



• Refer to Chapter 11

Event and Alarm Settings and Chapter 12 VCA Event Alarm for details for event and alarm settings.

Refer to Chapter 7.7 Configure Event Triggered Recording for the event triggered recording/capture settings.

10.1.7 Play Video Synopsis

Purpose:

Video synopsis is an approach to create a short video summary of a long video. It tracks and analyzes moving objects (also called events), and converts video streams into a database of objects and activities.

Before you start:

Enable Dual-VCA and intrusion detection/line crossing detection on the network camera.

Step 1 Go to **Playback** interface.

Step 2 Click

in toolbar.



Figure 10-10 Synopsis Playback

Step 3 Select a camera in channel list.

- Step 4 Specify **Start Time** and **End Time**. The duration must be within 24 hours.
- Step 5 Click **Search** to start play.
- Step 6 Optionally, double click a target on the playback window. A 60-second video of 30 seconds before and after the time will be played.

10.1.8 Play by Sub-periods

Purpose:

The video files can be played in multiple sub-periods simultaneously on the screen.

Step 1 Go to Playback.

Step 2 Select || | | | icon at the left bottom corner to enter the sub-period playing mode.

Step 3 Select a camera.

Step 4 Set the start time and end time for searching video.

Step 5 Select the different multi-period at the right bottom corner, e.g., 4-Period.

According to the defined number of split-screens, the video files on the selected date can be divided into average segments for playback. E.g., if there are video files existing between 16:00 and 22:00, and the 6-screen display mode is selected, then it can play the video files for 1 hour on each screen simultaneously.

10.1.9 Play Log Files

Purpose

Play back record file(s) associated with channels after searching system logs.

Step 1 Go to Maintenance>Log Information.

```
Step 2 Click Log Search.
```

Step 3 Set search time and type and click Search.

Network Video Recorder User Manual

No.	Major Type	Time	Minor Type	Parameter	Play	Details
5	Alarm	2017-10-25 00:04:30	Motion Detection Started	N/A		1
6	Alarm	2017-10-25 00:04:42	Motion Detection Stopped	N/A	•	0
7	Alarm	2017-10-25 00:06:04	Motion Detection Started	N/A	•	0
8	Operation	2017-10-25 00:06:18	Local Operation: Playback By Time	N/A		0
9	Alarm	2017-10-25 00:06:19	Motion Detection Stopped	N/A	•	0
10	Alarm	2017-10-25 00:06:41	Motion Detection Started	N/A	•	0
11	mormation	2017-10-25 00:06:46	System Running Status	N/A	-	0
12	mormation	2017-10-25 00:06:46	System Running Status	N/A.	-	0
13	OAlarm	2017-10-25 00:07:02	Motion Detection Stopped	N/A	•	1
14	Alarm	2017-10-25 00:07:59	Motion Detection Started	N/A.	•	0
15	Alarm	2017-10-25 00:08:15	Motion Detection Stopped	N/A.	•	0
16	Alarm	2017-10-25 00:08:27	Motion Detection Started	N/A.	•	0
17	Operation	2017-10-25 00:08:43	Local Operation: Playback By Time	N/A.	-	0
18	Operation	2017-10-25 00:08:46	Local Operation: Playback By Time	N/A		0
19	Alarm	2017-10-25 00:08:57	Motion Detection Stopped	N/A	•	0
20	Operation	2017-10-25 00:09:13	Local Operation: Playback By Time	N/A		0
21	Alarm	2017-10-25 00:09:22	Motion Detection Started	N/A	•	0
22	Alam	2017-10-25 00:09:35	Motion Detection Stopped	N/A	•	0

Figure 10-11 System Log Search Interface

Step 4 Choose a log with a video file and click \ge to start playing the log file.

10.1.10 Play External Files

Purpose

You can play files from external storage devices.

Before You Start

Connect the storage device with the video files to your device.

Step 1 Go to Playback.

Step 2 Click 🔲 at the left bottom corner.

Step 3 Select and click t
or double click to play the file.

10.2 Playback Operations

10.2.1 Set Play Strategy in Smart/Custom Mode

Purpose:

When you are in the smart or custom video playback mode, you can set the playing speed separately for the normal video and the smart/custom video, or you can select to skip the normal video.

In the Smart/Custom video playback mode, click



to set the play strategy.

- When **Do not Play Normal Videos** is checked, the device will skip the normal video and play the smart (motion/line crossing/intrusion) video and the custom (searched video) only in the normal speed (X1).
- When **Do not Play Normal Videos** is unchecked, you can set the play speed for the normal video the smart/custom video separately. The speed range is from X1 to XMAX.

You can set the speed in the single-channel play mode only.

Play Strategy	
Do not Play Normal Videos 🗹	
Normal Video	X8
Play Speed of Smart/Custom	×1
ок	Cancel

Figure 10-12 Play Strategy

10.2.2 Edit Video Clips

You can take video clips during playback and export the clips.





^{••} Set the start time and end time of the video clipping.



Export the video clips to the local storage device.

10.2.3 Switch between Main Stream and Sub-Stream

You can switch between the main stream and the sub-stream during playback.



Play the video in main stream.



: Play the video in sub-stream.

The encoding parameters for the main stream and sub-stream can be configured in **Storage** > **Encoding Parameters**.

10.2.4 Thumbnails View

With the thumbnails view on the playback interface, you can conveniently locate the required video files on the time bar.

In the playback mode, move the mouse to the time bar to get the preview thumbnails of the video files.



Figure 10-13 Thumbnails View

You can select and click on a thumbnail to enter the full-screen playback.

10.2.5 Fisheye View

You can enter the fisheye expansion view during the video playback.

Click the Local to enter the fisheye expansion mode.

- **180° Panorama (**): Switch the live view image to the 180° panorama view.
- **360° Panorama (**): Switch the Live View image to the 360° panorama view.
- **PTZ Expansion (**): The PTZ Expansion is the close-up view of a defined area in the fisheye view or panorama expansion, and it supports the electronic PTZ function, which is also called e-PTZ.
- **Radial Expansion (**): In the radial expansion mode, the whole wide-angle view of the fisheye camera is displayed. This view mode is called Fisheye View because it approximates the vision of a fish's convex eye. The lens produces curvilinear images of a large area, while distorting the perspective and angles of objects in the image.

10.2.6 Fast View

Hold the mouse to drag on the time bar to get a fast view of the video files.

In the Video Playback mode, hold and drag the mouse through the playing time bar to fast view the video files.

Release the mouse at the required time point to enter the full-screen playback.

10.2.7 Digital Zoom

Digital zoom adopts encoding technology to enlarge the image which will result in image quality damage.

In the Video Playback mode, click 🖾 in the toolbar to enter the digital zoom interface.

Move the sliding bar or scroll the mouse wheel to zoom in/out of the image to different magnifications (1 to16X).



Figure 10-14 Digital Zoom

10.2.8 POS Information Overlay

The device can be connected with the POS machine/server, and receive the transaction message for overlay on the image during playback.

In the video playback mode, click is to overlay the POS transaction information on the playback video.

When the playing speed is higher than 2x, the POS information cannot be overlaid on the video.

Chapter 11 Event and Alarm Settings

11.1 Configure Arming Schedule

Step 1 Select the Arming Schedule tab.

Step 2 Choose a day of the week and set the time period. Up to eight time periods can be set each day.

Time periods cannot repeat or overlapped.

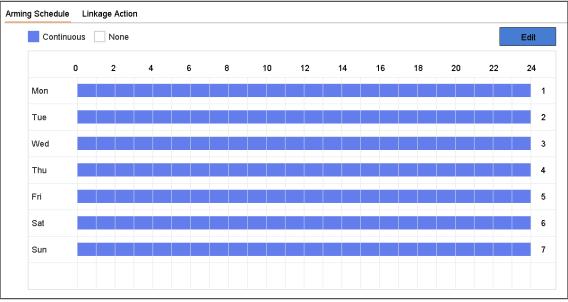


Figure 11-1 Set Arming Schedule

Step 3 (Optional) To copy the same arming schedule of the current day to the other day (s) of the week or holiday, you can click is to copy the arming schedule settings.

Step 4 Click Apply to save the settings.

11.2 Configure Alarm Linkage Actions

Step 1 Click Linkage Action to set the alarm linkage actions.

Normal Linkage	✓ Trigger Alarm Output	Trigger Channel	
✓ Full Screen Monitoring	⊡Local->1	D1	
Audible Warning	⊡Local->2	√ D2	
✓Notify Surveillance Center	⊡Local->3		
	⊡Local->4		
⊡ Send Email	☑10.15.2.250:8000->1		
lotice: please confirm the eve	ent output in "Live View" settings n	nenu is the same with the real	event output.

Figure 11-2 Set Linkage Actions

Step 2 Select the normal linkage actions, trigger alarm output, or trigger the recording channel.

• Full Screen Monitoring

When an alarm is triggered, the local monitor displays in full screen the video image from the alarming channel configured for full screen monitoring.

If alarms are triggered simultaneously in several channels, their full-screen images will be switched at an interval of 10 seconds (default dwell time). A different dwell time can be set by going to **System>Live View > Full Screen Monitoring Dwell Time**.

Auto-switch will terminate once the alarm stops and return to the Live View interface.

Select the channel(s) you want to trigger full screen monitoring in Trigger Channel settings.

Audible Warning

It will trigger an audible *beep* when an alarm is detected.

• Notify Surveillance Center

It will send an exception or alarm signal to the remote alarm host when an event occurs. The alarm host refers to the PC installed with Remote Client.

The alarm signal will be transmitted automatically at detection mode when a remote alarm host is configured. Refer to Chapter 15.8 Configure Ports for alarm host configuration.

• Send Email

It will send an e-mail with alarm information to the user when an alarm is detected.

Refer to 15.7 Configure Email for details of e-mail configuration details.

Step 3 Check the checkbox to select the alarm output when an alarm is triggered.

To trigger an alarm output when an event occurs, please refer to Chapter 11.6.3 Configure Alarm Output to set the alarm output parameters.

Step 4 Click **Trigger Channel** and select one or more channels that will record/capture or perform full-screen monitoring when a motion alarm is triggered.

You have to set the recording schedule to realize this function. Refer to Refer to Chapter 7.4 Configure Recording Schedule for setting the recording schedule.

Step 5 Click **Apply** to save the settings.

11.3 Configure Motion Detection Alarms

Motion Detection enables the device to detect the moving objects in the monitored area and trigger alarms.

Step 1 Go to System> Event>Normal Event>Motion Detection.

Camera	[D2] IPdome Enable ing Schedule Linkage Action	
		Sensitivity 0 100 60
Full Scre	en Clear	
	Apply	

Figure 11-3 Set Motion Detection

Step 2 Select the camera to configure the motion detection.

Step 3 Check Enable.

Step 4 Set the motion detection area.

- Full screen: Click to set the full-screen motion detection for the image.
- Customized area: Click-and drag the mouse to click and drag on the preview screen to draw the customized motion detection area (s).

Step 5 Click **Clear** to clear the current motion detection area settings and draw again.

- Step 6 Set sensitivity (0-100). The sensitivity allows you to calibrate how readily movement triggers the alarm. A higher value results in the more readily to triggers motion detection.
- Step 7 Set the arming schedule. Refer to Chapter 11.1 Configure Arming Schedule.

Step 8 Set the linkage actions. Refer to Chapter 11.2 Configure Alarm Linkage Actions.

11.4 Configure Video Loss Alarms

Purpose

Video Loss Detection detects video loss of a channel and takes alarm response action(s).

Step 1 Go to System> Event>Normal Event>Video Loss.

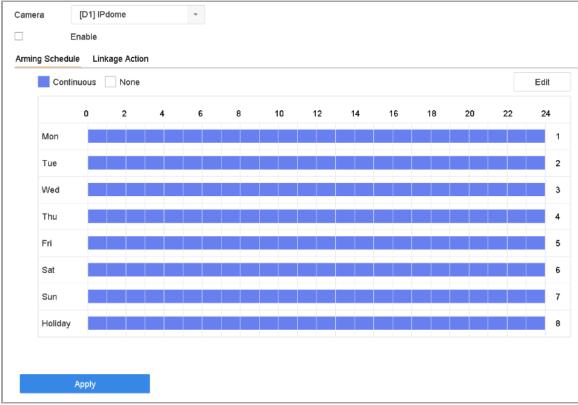


Figure 11-4 Set Video Loss Detection

Step 2 Select the camera to configure the video loss detection.

Step 3 Check Enable.

Step 4 Set the arming schedule. Refer to Chapter 11.1 Configure Arming Schedule.

Step 5 Set the linkage actions. Refer to Chapter 11.2 Configure Alarm Linkage Actions.

11.5 Configure Video Tampering Alarms

Purpose

Video Tampering Detection triggered an alarm when the camera lens is covered and takes alarm response action(s).

Step 1 Go to System> Event>Normal Event>Video Tampering.

Step 2 Select the camera to configure the video tampering detection.

Camera [D2] IPdome -	
✓ Enable	
Area Arming Schedule Linkage Action	
	Sensitivity 0 2 1
Clear	
Apply	

Figure 11-5 Set Video Tampering Setting

Step 3 Check Enable.

- Step 4 Set the video tampering area. Click-and-drag the mouse on the preview screen to draw the customized video tampering area.
- Step 5 Click **Clear** to clear the current area settings and draw again.
- Step 6 Set sensitivity level (0-2). 3 levels are available. The sensitivity calibrates how readily movement triggers the alarm. A higher value more readily triggers the video tampering detection.
- Step 7 Set the arming schedule. Refer to Chapter 11.1 Configure Arming Schedule.
- Step 8 Set the linkage actions. Refer to Chapter 11.2 Configure Alarm Linkage Actions.

11.6 Configure Sensor Alarms

Purpose:

Set the handling action of an external sensor alarm.

11.6.1 Configure Alarm Inputs

Step 1 Go to System> Event>Normal Event>Alarm Input

Step 2 Select an alarm input item from the list and click

		×
- Туре	N.O -	
ut One-Key Dis 		
Audible Warning	✓ Notify Surveillance	
Send Email		
	tt ● One-Key Dis	ut ● One-Key Dis

Figure 11-6 Alarm Input

Step 3 Select the alarm input type to N.C or N.O.

Step 4 Edit the alarm name.

Step 5 Check Input.

Step 6 Set the arming schedule. Refer to Chapter 11.1 Configure Arming Schedule.

Step 7 Set the linkage actions. Refer to Chapter 11.2 Configure Alarm Linkage Actions.

11.6.2 Configure One-Key Disarming

One-Key Disarming disarm Alarm Input 1 by one-key operation.

Step 1 Go to System> Event>Normal Event>Alarm Input

Step 2 Select Alarm Input 1 from the list and click

- Step 3 Set the alarm input type to N.C or N.O.
- Step 4 Edit the alarm name.

Step 5 Check Enable One-Key Disarming.

Edit									×
Alarm Ir	nput No.	Local<-1		•	Туре	N.0		•	
Alarm N	Name	A							
Setting	ls O	Nonuse	🔘 Input		• One-Key Dis				
E	✓ Normal L	inkage							
5	✓ Full Scre	en Monitori		🗹 Auc	dible Warning		Notify Survei	llance	
Ŀ	✓ Trigger A	Alarm Output		✓ Ser	nd Email				
								Copy to	Apply

Figure 11-7 One-Key Alarm Disarming

Step 6 Select the alarm linkage action(s) you want to disarm for the local Alarm Input.

When Alarm Input 1 (Local<-1) is enabled with one-key disarming, the other alarm input settings are not configurable.

Step 7 Click **Apply** to save the settings.

11.6.3 Configure Alarm Outputs

Trigger an alarm output when an alarm is triggered.

Step 1 Go to System> Event>Normal Event>Alarm Output.

Step 2 Select an alarm output item from the list and click

Step 3 Edit the alarm name.

Step 4 Select the dwell time (the alarm duration) from 5s to 600s, or Manually Clear.

Manually Clear: You should manually clear the alarm when the alarm occurs. Refer to Chapter 11.9 Trigger or Clear Alarm Output Manually for detailed instructions.

Step 5 Set the arming schedule. Refer to Chapter 11.1 Configure Arming Schedule.

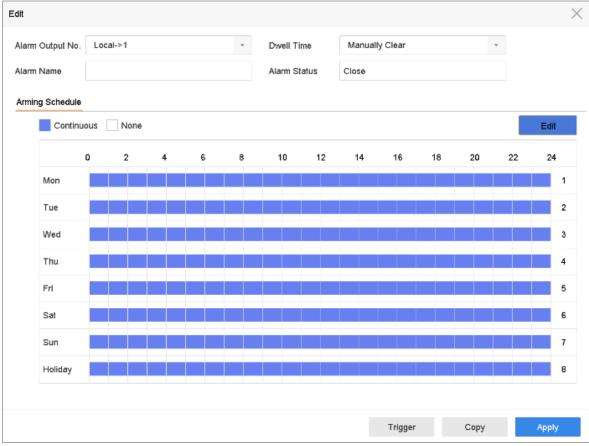


Figure 11-8 Alarm Output

Step 1 (Optional) Click **Copy** to copy the same settings to other alarm output (s).

11.7 Configure Exceptions Alarms

Exception events can be configured to take the event hint in the Live View window and trigger alarm output and linkage actions.

Step 1 Go to System> Event>Normal Event>Exception.

Step 2 (Optional) Enable the event hint to display it in the live view window.

1) Check Enable Event Hint.

2) Click to select the exception type (s) to take the event hint.

Event Hint Settings		
All		
Network Disconnected		
⊡IP Conflicted		
⊡lllegal Login		
⊡Video Signal Loss		
⊡Alarm Input Triggered		
✓Video Tamper Detected		
—		
	ОК	Cancel

Figure 11-9 Event Hint Settings

Step 3 Select the excetion type from the drop-down list to set the linkage actions.

Enable Event Hint 🛛	~		
Event Hint Config ^{ट्र}	23		
	HDD Full		*
Exception Type	HDD Full		•
Normal Linkage		Trigger Alarm O	utput
Audible Warning		✓Local->1	
✓ Notify Surveilland	e Center	✓Local->2	
-		□Local->3 □Local->4	
Send Email		10.15.2.250:800	0->1
Apply			

Figure 11-10 Exceptions Handling

Step 4 Set the normal linkage and alarm output triggering. Refer to Chapter 11.8 Setting Alarm Linkage Actions

11.8 Setting Alarm Linkage Actions

Purpose

Alarm linkage actions will be activated when an alarm or exception occurs, including Event Hint Display, Full Screen Monitoring, Audible Warning (buzzer), Notify Surveillance Center, Trigger Alarm Output, and Send Email.

11.8.1 Configure Auto-Switch Full Screen Monitoring

When an alarm is triggered, the local monitor displays in full screen the video image from the alarming channel configured for full screen monitoring. And when the alarm is triggered simultaneously in several channels, you must configure the auto-switch dwell time.

Step 1 Go to System > View > General.

Step 2 Set the event output and dwell time.

- Event Output: Select the output to show the event video.
 - Full Screen Monitoring Dwell Time: Set the time in seconds to show the alarm event screen. If alarms are triggered simultaneously in several channels, their full-screen images will be switched at an interval of 10 seconds (default dwell time).
- Step 3 Go to the **Linkage Action** interface of the alarm detection (e.g., motion detection, video tampering, face detection, etc.).
- Step 4 Select the Full Screen Monitoring alarm linkage action.
- Step 5 Select the channel(s) in **Trigger Channel** settings you for make full screen monitoring in Trigger Channel Settings.

Auto-switch will terminate once the alarm stops and back to the live view interface.

11.8.2 Configure Audio Warning

The audio warning has the system to trigger an audible *beep* when an alarm is detected.

Step 1 Go to System>View>General.

- Step 2 Enable the audio output and set the volume.
- Step 3 Go to the **Linkage Action** interface of the alarm detection (e.g., motion detection, video tampering, face detection, etc.).
- Step 4 Select the Audio Warning alarm linkage action.

11.8.3 Notify Surveillance Center

The device can send an exception or alarm signal to the remote alarm host when an event occurs. The alarm host refers to the PC installed with client software (e.g., NVMS7000).

Step 1 Go to System > Network > Advanced > More Settings.

- Step 2 Set the alarm host IP and alarm host port.
- Step 3 Go to the **Linkage Action** interface of the alarm detection (e.g., motion detection, video tampering, face detection, etc.).
- Step 4 Select the Notify Surveillance Center.

11.8.4 Configure E-mail Linkage

The system can send an email with alarm information to a user or users when an alarm is detected.

Please refer to Chapter 15.7 Configure Email for details of Email configuration.

Step 1 Go to System>Network>Advanced.

- Step 2 Configure the e-mail settings.
- Step 3 Go to the **Linkage Action** interface of the alarm detection (e.g., motion detection, video tampering, face detection, etc.).
- Step 4 Select the Send Email alarm linkage action.

11.8.5 Trigger Alarm Outputs

The alarm output can be triggered by the alarm input, motion detection, video tampering detection, face detection, line crossing detection, and any all other events.

- Step 1 Go to the **Linkage Action** interface of the alarm detection (e.g., motion detection, face detection, line crossing detection, intrusion detection, etc.).
- Step 2 Click the Trigger Alarm Output tab.
- Step 3 Select the alarm output (s) to trigger.
- Step 4 Go to System> Event>Normal Event>Alarm Output.

Step 5 Select an alarm output item from the list.

Refer to Chapter 11.6.3 Configure Alarm Output for the alarm output settings.

11.8.6 Configure PTZ Linkage

The system can trigger the PTZ actions (e.g., call preset/patrol/pattern) when the alarm event, or VCA detection events occurs.

Make sure the connected PTZ or speed dome connected supports PTZ linkage.

- Step 1 Go to the **Linkage Action** interface of the alarm input or VCA detection (e.g., face detection, line crossing detection, intrusion detection, etc.).
- Step 2 Select the PTZ Linkage.
- Step 3 Select the camera to perform the PTZ actions.

Step 4 Select the preset/patrol/pattern N	o. to call when the alarm events occur
---	--

PTZ Linkage		
PTZ Linkage	[D1] IPCamera 01	•
Preset No.	5	•
⊖Patrol No.	1	-
⊖Pattern No.	1	-

Figure 11-11 PTZ Linkage

You can set only one PTZ type for the linkage action each time.

11.9 Trigger or Clear Alarm Output Manually

Purpose

Sensor alarm can be triggered or cleared manually. When the **Manually Clear** is selected for the dwell time of an alarm output, the alarm can be cleared only by clicking **Clear** button.

Step 1 Go to System> Event>Normal Event>Alarm Output.

- Step 2 Select the alarm output you want to trigger or clear.
- Step 3 Click Trigger/Clear to trigger or clear an alarm output.

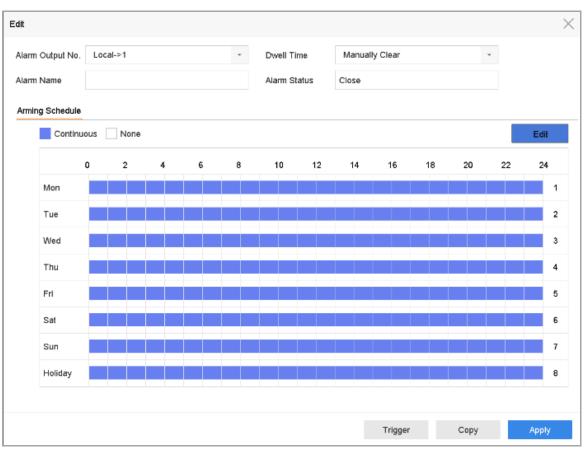


Figure 11-12 Alarm Output

Chapter 12 VCA Event Alarm

The device supports receiving VCA detections sent by connected IP cameras. Enable and configure VCA detection on the IP camera settings interface first.

- VCA detections must be supported by the connected IP camera.
- Refer to the network camera's user manual for detailed VCA detection instructions.

12.1 Face Detection

Purpose

The Face Detection function detects the face appearing in the surveillance scene. Linkage actions can be triggered when a human face is detected.

Step 1 Go to System > Event > Smart Event.

Step 2 Click Face Detection.

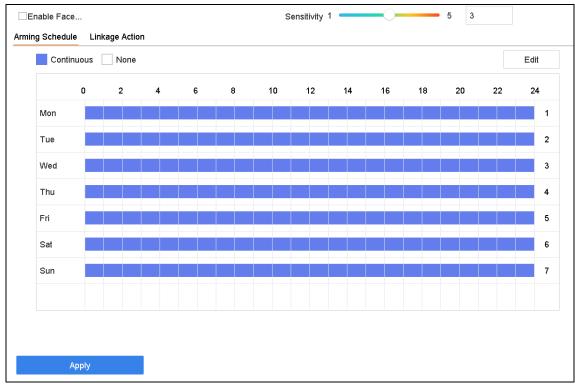


Figure 12-1 Face Detection

Step 3 Select a **Camera** to configure.

Step 4 Check Enable Face Detection.

- Step 5 Optionally, check Save VCA Picture to save the captured pictures of face detection.
- Step 6 Drag the **Sensitivity** slider to set the detection sensitivity. Sensitivity range: [1-5]. The higher the value is, the more easily the face will be detected.
- Step 7 Set the arming schedule. Refer to Chapter 11.1 Configure Arming Schedule.

Step 8 Set the linkage actions. Refer to Chapter 11.2 Configure Alarm Linkage Actions.

Step 9 Click Apply.

12.2 Vehicle Detection

Purpose

Vehicle Detection is available for road traffic monitoring. In Vehicle Detection, a passed vehicle can be detected and the picture of its license plate can be captured. You can send an alarm signal to notify the surveillance center and upload the captured picture to an FTP server.

Step 1 Go to System > Event > Smart Event.

Step 2 Click Vehicle.

Enable Veh	icle Detection					
Area Settings	Arming Schedule	Linkage Action	Picture	Overlay Content	Blacklist and Whitelist	
						_
33/1		-		1		
11				9	Lane Num 1	
1						
	-1					
18 10 10	-					
	#0#	#1	#			
2 Parte and		0 1	5			
		Rost.		aler of		
7			-			
			-	-		
Sastili				(and		
				and the second s		
	Apply					

Figure 12-2 Vehicle Detection

Step 3 Select a camera to configure.

Step 4 Check Enable Vehicle Detection.

- Step 5 Optionally, check Save VCA Picture to save the captured vehicle detection pictures.
- Step 6 Set the arming schedule. Refer to Chapter 11.1 Configure Arming Schedule.
- Step 7 Set the linkage actions. Refer to Chapter 11.2 Configure Alarm Linkage Actions.
- Step 8 Configure rules, including **Area Settings**, **Picture**, **Overlay Content**, and **Blacklist and Whitelist**. Area Settings: Up to 4 lanes are selectable.

Step 9 Click Save.



Refer to the Network Camera User Manual for detailed instructions for the vehicle detection.

12.3 Line Crossing Detection

Purpose

Line crossing detection detects people, vehicles, and objects crossing a set virtual line. The detection direction can be set as bidirectional, from left to right or from right to left.

Step 1 Go to System > Event > Smart Event.

Step 2 Click Line Crossing.

Enable Line	e Crossing Detec				
Area Settings	Arming Schedule	Linkage Action			
	_				
		and the second	Arming Area	1	
		Cattor and	Direction	A<->B	*
LES _		POR -	Sensitivity	1	- 100 50
/	0		Genaalivity		100 00
	1				
#1#		A			
		Frie			
		B			
		11111111			
		Part - 1-			
Draw Area	Clear				
[}	Apply				

Figure 12-3 Line Crossing Detection

Step 3 Select a **camera** to configure.

Step 4 Check the Enable Line Crossing Detection checkbox.

Step 5 Optionally, check **Save VCA Picture** to save the captured pictures of line crossing detection pictures.

Step 6 Follow the steps to set the line crossing detection rules and detection areas.

- 1) Select an Arming Region to configure. Up to 4 arming regions are selectable.
- 2) Select the Direction as A<->B, A->B, or A<-B.

A<->**B**: Only the arrow on the B side shows. An object crossing a configured line in both directions can be detected and trigger alarms.

A->B: Only an object crossing the configured line from the A side to the B side can be detected.

B->A: Only an object crossing the configured line from the B side to the A side can be detected.

- 3) Drag the Sensitivity slider to set the detection sensitivity. Sensitivity range: sensitivity. The higher the value is, the more easily the detection alarm will be triggered.
- 4) Click Draw Region and set two points in the preview window to draw a virtual line.

Step 7 Set the arming schedule. Refer to Chapter 11.1 Configure Arming Schedule.

Step 8 Set the linkage actions. Refer to Chapter 11.2 Configure Alarm Linkage Actions.

Step 9 Click Apply.

12.4 Intrusion Detection

Purpose

The Intrusion Detection Function detects people, vehicles or other objects that enter and loiter in a pre-defined virtual region. Specific actions can be taken when an alarm is triggered.

Step 1 Go to System > Event > Smart Event.

Step 2 Click Intrusion.

a Settings Arming Schedule Linkage Action		
	Virtual Plane 1	~
7.	Time Thres0	10 0
	Sensitivity 1	100 50
	Percentage 1	100 1
#1#		
Draw Area Clear		

Figure 12-4 Intrusion Detection

Step 3 Select a camera to configure.

Step 4 Check Enable Intrusion Detection.

Step 5 Optionally, check Save VCA Picture to save the captured intrusion detection pictures.

Step 6 Follow these steps to set the detection rules and detection areas.

- 1) Select a Virtual Panel to configure. Up to 4 virtual panels are selectable.
- 2) Drag the sliders to set Time Threshold, Sensitivity, and Percentage.

Time Threshold: The time an object loiter in the region. When the duration of the object in the defined detection area exceeds the threshold, the device will trigger an alarm. Its range is [1s-10s].

Sensitivity: The size of the object that can trigger the alarm. The higher the value is, the more easily the detection alarm will be triggered. Its range is [1-100].

Percentage: The ratio of the in-region part of the object that can trigger the alarm. For example, if the percentage is 50%, when the object enters the region and occupies half of the whole region, the device will trigger an alarm. Its range is [1-100].

3) Click Draw Region and draw a quadrilateral in the preview window by specifying four vertices of the detection region.

Step 7 Set the arming schedule. Refer to Chapter 11.1 Configure Arming Schedule.

Step 8 Set the linkage actions. Refer to Chapter 11.2 Configure Alarm Linkage Actions.

Step 9 Click Apply.

12.5 Region Entrance Detection

Purpose

The Region Entrance Detection Function detects objects that enter a pre-defined virtual region.

Step 1 Go to System Management > Event Settings > Smart Event.

Step 2 Click the Region Entrance Detection item.

	jion Entrance De Arming Schedule	Linkage Action		
Stop Drawing	#1		Arming Area 1 Sensitivity 1	• 100 50
	Apply			

Figure 12-5 Region Entrance Detection

Step 3 Select a camera to configure.

Step 4 Check Enable Region Entrance Detection.

Step 5 Optionally, check **Save VCA Picture** to save the captured pictures of region entrance detection pictures.

Step 6 Follow thees steps to set the detection rules and detection areas.

- 1) Select an Arming Region to configure. Up to 4 regions are selectable.
- 2) Drag the sliders to set Sensitivity.

Sensitivity: The higher the value is, the more easily the detection alarm will be triggered. Its range is [0-100].

3) Click **Draw Region** and draw a quadrilateral in the preview window by specifying four vertices of the detection region.

Step 7 Configure Arming Schedule and Linkage Action.

Step 8 Click Apply.

12.6 Region Exiting Detection

Purpose

The Region Exiting Detection Function detects objects that exit from a pre-defined virtual region.

Step 1 Go to System > Event > Smart Event.

Step 2 Click Region Exiting.

Enable Region Exiting Dete		
Area Settings Arming Schedule Linkage Action		
Area sening Aning Schedule Linkage Action	Arming Area 1 Sensitivity 1	• 100 50

Figure 12-6 Region Exiting Detection

Step 3 Select a camera to configure.

Step 4 Check Enable Region Exiting Detection.

Step 5 Optionally, check Save VCA Picture to save the captured region exiting detection pictures.

Step 6 Follow these steps to set the detection rules and detection areas.

- 1) Select an Arming Region to configure. Up to 4 regions are selectable.
- 2) Drag the sliders to set Sensitivity.

Sensitivity: The higher the value is, the more easily the detection alarm will be triggered. Its range is [0-100].

3) Click Draw Region and draw a quadrilateral in the preview window by specifying four vertices of the detection region.

Step 7 Set the arming schedule. Refer to Chapter 11.1 Configure Arming Schedule.

Step 8 Set the linkage actions. Refer to Chapter 11.2 Configure Alarm Linkage Actions.

Step 9 Click Apply.

12.7 Unattended Baggage Detection

Purpose

The Unattended Baggage Detection Function detects the objects left over in a pre-defined region such as the baggage, purses, dangerous materials, etc., and a series of actions can be taken when the alarm is triggered.

Step 1 Go to System > Event > Smart Event.

Step 2 Click Unattended Baggage.

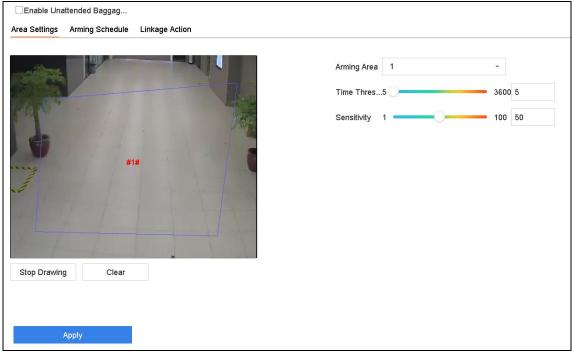


Figure 12-7 Unattended Baggage Detection

Step 3 Select a camera to configure.

Step 4 Check Enable Unattended Baggage Detection.

Step 5 Optionally, check **Save VCA Picture** to save the captured unattended baggage detection pictures.

Step 6 Follow these steps to set the detection rules and detection areas.

- 1) Select an **Arming Region** to configure. Up to 4 regions are selectable.
- 2) Drag the sliders to set **Time Threshold** and **Sensitivity**.

Time Threshold: The time of the objects are left in the region. If the value is 10, an alarm is triggered after the object is left and stayed in the region for 10s. Its range is [5s-20s].

Sensitivity: Similarity of the background image to the object. The higher the value, the more easily the detection alarm will be triggered.

- 3) Click **Draw Region** and draw a quadrilateral in the preview window by specifying four vertices of the detection region.
- Step 7 Set the arming schedule. Refer to Chapter 11.1 Configure Arming Schedule.

Step 8 Set the linkage actions. Refer to Chapter 11.2 Configure Alarm Linkage Actions.

Step 9 Click Apply.

12.8 Object Removal Detection

Purpose

The Object Removal Detection function detects the objects removed from a pre-defined region, such as the exhibits on display, and a series of actions can be taken when the alarm is triggered.

Step 1 Go to System > Event > Smart Event.

Step 2 Click Object Removable.

Enable Object Removal Det		
Area Settings Arming Schedule Linkage Action	Arming Area 1 Time Thres5 Sensitivity 1	- 3600 5 100 50
Draw Area Clear		
Apply		

Figure 12-8 Object Removal Detection

Step 3 Select a **camera** to configure.

Step 4 Check Enable Object Removable Detection.

Step 5 Optionally, check Save VCA Picture to save the captured object removable detection pictures.

Step 6 Follow these steps to set the detection rules and detection areas.

- 1) Select an Arming Region to configure. Up to 4 regions are selectable.
- 2) Drag the sliders to set Time Threshold and Sensitivity.

Time Threshold: The time of the objects removed from the region. If the value is 10, alarm will be triggered after the object disappears from the region for 10s. Its range is [5s-20s].

Sensitivity: The similarity degree of the background image. If the sensitivity is high, a very small object taken from the region will trigger the alarm.

- 3) Click **Draw Region** and draw a quadrilateral in the preview window by specifying four vertices of the detection region.
- Step 7 Set the arming schedule. Refer to Chapter 11.1 Configure Arming Schedule.

Step 8 Set the linkage actions. Refer to Chapter 11.2 Configure Alarm Linkage Actions.

Step 9 Click Apply.

12.9 Audio Exception Detection

Purpose

Audio exception detection detects abnormal sounds in the surveillance scene, such as a sudden increase/decrease in sound intensity.

Step 1 Go to System > Event > Smart Event.

Step 2 Click Audio Exception.

eption Detection Arming Schedule Linkage Action	Exception Detection Arming S
Audio Loss Exception	Audio Loss Exception
Sudden Increase of Sound Intens	Sudden Increase of Sound
nsitivity 1 100 50	Sensitivity 1
und Int 1 100 50	Sound Int 1
Sudden Decrease of Sound Inten	Sudden Decrease of Sound
nsitivity 1 100 50	Sensitivity 1
Арріу	Apply

Figure 12-9 Audio Exception Detection

Step 3 Select a camera to configure.

Step 4 Optionally, check Save VCA Picture to save the captured audio exception detection pictures.

Step 5 Set the detection rules:

- 1) Select the **Exception Detection** tab.
- 2) Check Audio Loss Exception, Sudden Increase of Sound Intensity Detection, and/or Sudden Decrease of Sound Intensity Detection.

Audio Loss Exception: Detects a steep sound rise in the surveillance scene. You can set the detection sensitivity and threshold for steep sound rise by configuring its **Sensitivity** and **Sound Intensity Threshold**.

Sensitivity: The smaller the value, the more severe the change must be to trigger the detection. Range [1-100].

Sound Intensity Threshold: It can filter the sound in the environment. The louder the environment sound, the higher the value should be. Adjust it according to the environment. Range [1-100].

Sudden Decrease of Sound Intensity Detection: Detects a steep sound drop in the surveillance scene. You need set the detection sensitivity [1-100].

Step 6 Set the arming schedule. Refer to Chapter 11.1 Configure Arming Schedule.

Step 7 Set the linkage actions. Refer to Chapter 11.2 Configure Alarm Linkage Actions.

Step 8 Click Apply.


12.10 Sudden Scene Change Detection

Purpose

Scene change detection detects the change of the surveillance environment affected by external factors, such as the intentional rotation of the camera.

Step 1 Go to System > Event > Smart Event.

Step 2 Click Sudden Scene Change.

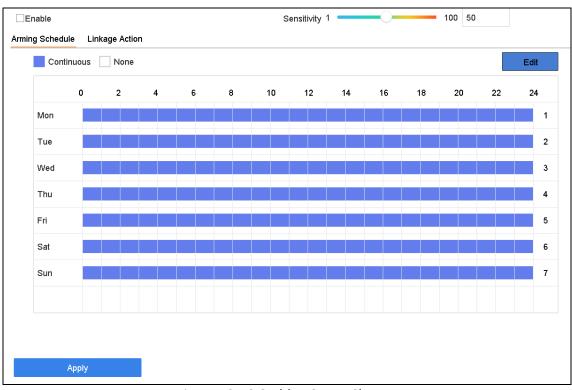

Network Video Recorder User Manual

Figure 12-10 Sudden Scene Change

- Step 3 Select a camera to configure.
- Step 4 Check Enable Sudden Scene Change Detection.
- Step 5 Optionally, check Save VCA Picture to save the captured sudden scene change detection pictures.
- Step 6 Drag the **Sensitivity** slider to set the detection sensitivity. Sensitivity range: [1-100]. The higher the value, the more easily the change of scene can trigger the alarm.
- Step 7 Set the arming schedule. Refer to Chapter 11.1 Configure Arming Schedule.
- Step 8 Set the linkage actions. Refer to Chapter 11.2 Configure Alarm Linkage Actions.
- Step 9 Click Apply.


12.11 Defocus Detection

Purpose

Image blur caused by lens defocus can be detected.

Step 1 Go to System > Event > Smart Event.

Step 2 Click Defocus.

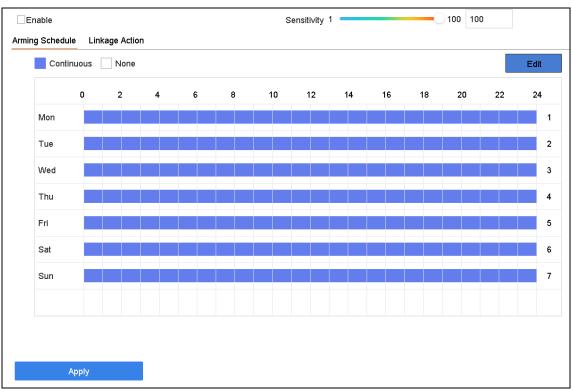

Network Video Recorder User Manual

Figure 12-11 Defocus Detection

Step 3 Select a camera to configure.

Step 4 Check Enable Defocus Detection.

Step 5 Optionally, check Save VCA Picture to save the captured defocus detection pictures.

Step 6 Drag the **Sensitivity** slider to set the detection sensitivity. Sensitivity range: [1-100]. The higher the value, the more easily the defocus image will be detected.

Step 7 Set the arming schedule. Refer to Chapter 11.1 Configure Arming Schedule.

Step 8 Set the linkage actions. Refer to Chapter 11.2 Configure Alarm Linkage Actions.

Step 9 Click **Apply**.

12.12 PIR Alarm

Purpose

A PIR (Passive Infrared) alarm is triggered when an intruder moves within the detector vision field. The heat energy dissipated by a person or any other warm blooded creature such as dogs, cats, etc., can be detected.

Step 1 Go to System > Event > Smart Event.

Step 2 Click PIR Alarm.



Network Video Recorder User Manual

Figure 12-12 FIR Alarm

Step 3 Select a camera to configure.

Step 4 Check PIR Alarm.

Step 5 Optionally, check **Save VCA Picture** to save the captured of PIR alarm pictures.

Step 6 Set the arming schedule. Refer to Chapter 11.1 Configure Arming Schedule.

Step 7 Set the linkage actions. Refer to Chapter 11.2 Configure Alarm Linkage Actions.

Step 8 .Click Apply.

12.13 Thermal Camera Detection

The NVR supports the event detection modes of the thermal network cameras: fire and smoke detection, temperature detection, temperature difference detection, etc.

Before you start

Add the thermal network camera to your device and make sure the camera is activated.

Step 1 Go to System > Event > Smart Event.

- Step 2 Select a thermal camera from the camera list.
- Step 3 (Optional) Check Save VCA Picture to save the captured pictures of detection.
- Step 4 Select an event detection (Temperature, etc.).
- Step 5 Set the arming schedule. Refer to Chapter 11.1 Configure Arming Schedule.
- Step 6 Set the linkage actions. Refer to Chapter 11.2 Configure Alarm Linkage Actions.

Step 7 Click Apply.

Chapter 13 Smart Analysis

With the configured VCA detection, the device supports smart analysis for people counting and heat map.

13.1 People Counting

Purpose

Counting calculates the number of people entering or leaving a certain configured area and creates daily/weekly/monthly/annual reports for analysis.

Step 1 Go to Smart Analysis > Counting.

Step 2 Select the camera.

Step 3 Select the report type to Daily Report, Weekly Report, Monthly Report, or Annual Report.

Step 4 Set the **Date** to analyze. The people counting graphic will show.

ra				era 01																				
ily	Repor	i	Week	ly Repo	rt 1	Monthly	Repor	t Ar	nual Re	eport		D	ate 25	-08-20	17								₿ B	cport
P	eople	Entere	d 📕	People	e Exited																			
0																								
0																								
.																								
) -																								
) -																								
,																								
,																								
0 - 0 -																								
יי																								
)	4	2	2	4	5	6	7		9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24

Figure 13-1 People Counting Interface

Step 5 (Optional) Click Export to export the report in Microsoft Excel format.

13.2 Heat Map

Purpose

Heat Map is a graphical representation of data. The heat map function is used to analyze how many people visited and stayed in a specific area.

The Heat Map function must be supported by the connected IP camera and the corresponding configuration must be set.

- Step 1 Go to Smart Analysis > Heat Map.
- Step 2 Select a camera.
- Step 3 Select the report type as Daily Report, Weekly Report, Monthly Report, or Annual Report.

Step 4 Set the **Data** to analyze.

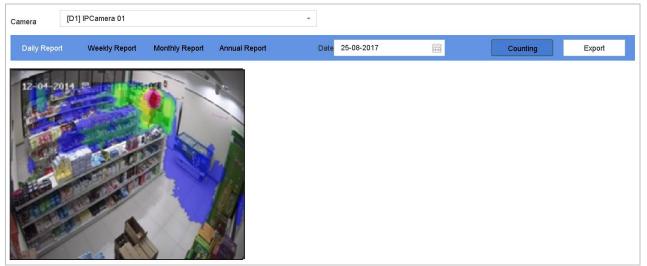


Figure 13-2 Heat Map Interface

Step 5 Click **Counting**. The results will be displayed in graphics marked in different colors.

As shown in the figure above, red color block (255, 0, 0) indicates the most trafficked area, and blue color block (0, 0, 255) indicates the less-popular area.

Step 6 (Optional) Click **Export** to export the statistics report in Microsoft Excel format.

Chapter 14 POS Configuration

The device can be connected to a POS machine/server, and receive a transaction message to overlay on the image during Live View or playback, as well as trigger a POS event alarm.

14.1 Configure POS Settings

14.1.1 Configure POS Connection

- Step 1 Go to System > POS.
- Step 2 Click Add to enter the POS adding interface.
- Step 3 Select a POS device from the drop-down list.

```
Step 4 Check Enable.
```


The number of POS devices supported by each device is the half of its number of channel.

Add POS					
Enable			POS Name	POS 3	-
POS Protocol	AVE	- Custom	Connection Mode	Sniff	- Parameters

Figure 14-1 POS Settings

Step 5 Select the POS protocol to Universal Protocol, EPSON, AVE, or NUCLEUS.



When a new protocol is selected, reboot the device to activate the new settings.

Universal Protocol

Click **Advanced** to expand more settings when selecting the universal protocol. You can set the start line identifier, line break tag, and end line tag for the POS overlay characters, and the case-sensitive property of the characters. You can also optionally check the filtering identifier and the XML protocol.

Start Line Identifier		Hex	\checkmark
Line Break	0D0A	Hex	\checkmark
End Line Identifier		Hex	\checkmark
Case Sensitive	\checkmark		
Filtering Identifier	\checkmark		
Enable XML Prot	\checkmark		
	ОК	Cance	ŧ

Figure 14-2 Universal Protocol Settings

• EPSON

The fixed start and end line tag are used for EPSON protocol.

• AVE

The fixed start and end line tag are used for AVE protocol. Serial port and virtual serial port connection types are supported.

- 1) Click **Custom** to configure the AVE settings.
- 2) Set the rule to VSI-ADD or VNET.
- 3) Set the address bit of the POS message to send.
- 4) Click **OK** to save the settings.

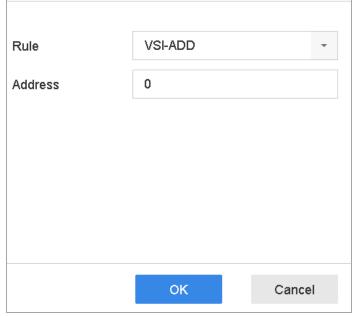


Figure 14-3 AVE Settings

• NUCLEUS

- 1) Click the **Custom** to configure the NUCLEUS settings.
- 2) Enter the employee No., shift No., and the terminal No. in the field. The matching message sent from the POS device will be used as the valid POS data.

The NUCLEUS protocol must be used in the RS-232 connection communication.

- Step 6 Set the connection mode to **TCP Reception**, **UDP Reception**, **Multicast**, **RS-232**, **USB-to-RS-232**, or **Sniff**, and click **Parameters** to configure the parameters for each connection mode.
 - TCP Connection
 - 1) When using TCP connection, the port must be set from 1 to 65535, and the port for each POS machine must be unique.
 - 2) Set the Allowed Remote IP Address of the device sending the POS message.

TCP Connection Setti	ngs				
Port	10010				
Allowed Remote IP A	192 . 0	. 0	. 64		
				ок	Cancel

Figure 14-4 TCP Connection Settings

- UDP Connection
- 1) When using UDP connection, the port must be set from 1 to 65535, and the port for each POS machine must be unique.
- 2) Set the Allowed Remote IP Address of the device sending the POS message.
- USB-to-RS-232 Connection

Configure the USB-to-RS-232 convertor port parameters, including the port serial number, baud rate, data bit, stop bit, parity, and flow ctrl.

ΝΤ 1	T7·1	D 1	тт	۱ <i>۲</i> ۱
Network	viaeo	Kecorder	User	Manual

USB-to-RS-232 Settin	js
Serial Port Number	1 ~
Baud Rate	4800 -
Data Bit	5 -
Stop Bit	1 -
Parity	None -
Flow Ctrl	None -
	OK Cancel

Figure 14-5 USB-to-RS-232 Settings

RS-232 Connection

Connect the device and the POS machine via RS-232. The RS-232 settings can be configured in Menu>Configuration>RS-232. The Usage must be set to Transparent Channel.

Multicast Connection

When connecting the device and the POS machine via Multicast protocol, set the multicast address and port.

Sniff Connection

Connect the device and the POS machine via Sniff. Configure the source address and destination address settings.

Sniff Settings	
Enable Source Port F	
Source Address	18 . 16 . 1 . 1
Source Port	10020
Enable Destination A	
Enable Destination P	
Destination Address	20 . 18 . 1 . 24
Destination Port	10030
	OK Cancel

Figure 14-6 Sniff Settings

14.1.2 Configure POS Text Overlay

Step 1 Go to System > POS.

Step 2 Click Channel Linkage and Display tab.

Step 3 Select the linked channel to overlay the POS characters.

Step 4 Set the characters overlay for the enabled POS.

- Character encoding format: currently the Latin-1 format is available
- Overlay mode of the characters to display in scrolling or page mod
- Font size and font color
- Display time (sec) of the characters. The value ranges 5 -3600 sec.
- Timeout of POS event. The value ranges 5 -3600 sec. When the device has not received the POS message within the defined time, the transaction ends.
- Step 5 In the **Privacy Settings**, set the POS privacy information to not display on the image, e.g., the card number, user name, etc.
- Step 6 Result: The defined privacy information will be displayed using ***on the image instead.
- Step 7 (optional) Check the checkbox to enable the **Overlay POS in Live View**. When this feature is enabled, the POS information is overlaid on the Live View image.

Channel Linkage and Display Arming Schedule Event Linkage				
	Linked Channel	[D1] IPCan	nera 02	-
	Character Encod	UTF-8		•
Real Radie Contraction of the Contraction	Overlay Mode	Page		-
	Font Size	Large	Medium	Small
	Font Color			
	Display for(s)	30		
	Timeout(s)	5		
	Privacy Settings	1634	0921	543
		For example, the	entered card num	oer will be shown
	Overlay POS in	\checkmark		

Figure 14-7 Overlay Character Settings

Drag the frame to adjust the textbox size and position on POS settings interface preview screen.

Step 8 Click **Apply** to activate the settings.

14.2 Configure POS Alarm

Purpose

A POS event can trigger channels to start recording, or trigger full screen monitoring or an audio warning, notifying the surveillance center, send e-mail, etc.

Step 1 Go to Storage > Recording Schedule.

Step 2 Set the POS event's arming schedule.

Step 3 Go to System > POS.

Step 4 Click Event Linkage on the POS adding or editing interface.

Step 5 Select the normal linkage actions: full screen monitoring, audio warning, or send e-mail.

Step 6 Select one or more alarm output(s) to trigger.

Step 7 Select one or more channels to record or become full-screen monitoring when a POS alarm is triggered.

Normal Linkage	Trigger Alarm Output	Trigger Channel	
✓ Full Screen Monitoring	⊡Local->1	☑ D1	
✓ Audible Warning	Local->2	⊡D2	
Send Email	⊡Local->3	D 3	
	Local->4	D4	
	□10.15.2.250:8000->1		
lotice: please confirm the eve	10.15.2.250:8000->1	enu is the same with the rea	event output.
lotice: please confirm the eve		enu is the same with the rea	event output.
lotice: please confirm the eve		enu is the same with the rea	l event output.

Figure 14-8 Set Trigger Cameras of POS

Step 8 Click Apply to save the settings.

Chapter 15 Network Settings

15.1 Configure TCP/IP Settings

Purpose

TCP/IP settings must be properly configured before you can operate the device will operate over a network.

15.1.1 Device with Dual Network Interface

Step 1 Go to System > Network > TCP/IP.

Working Mode	Net Fault-Tolerance	•		
Select NIC	bond0	*		
NIC Туре	10M/100M/1000M Self-adap	*		
Enable DHCP			Enable Obtain DNS	
IPv4 Address	10 . 15 . 2 . 107		Preferred DNS Server	
IPv4 Subnet Mask	255 . 255 . 255 . 0		Alternate DNS Server	
IPv4 Default Gateway	10 . 15 . 2 . 254			
MAC Address	a4:14:37:aa:09:a3			
MTU(Bytes)	1500			
Main NIC	LAN1	•		

Figure 15-1 TCP/IP Settings

Step 2 Select Net-Fault Tolerance or Multi-Address Mode under Working Mode.

- **Net-Fault Tolerance**: The two NIC cards use the same IP address, and you can select the main NIC to LAN1 or LAN2. In this way, in case of one NIC card failure, the device will automatically enable the other standby NIC card so as to ensure the normal running of the system.
- **Multi-Address Mode**: The parameters of the two NIC cards can be configured independently. You can select LAN1 or LAN2 under Select NIC for parameter settings. Select one NIC card as the default route. When the system connects with the extranet, the data will be forwarded through the default route.

Step 3 Configure other IP settings as needed.

- Check **Enable DHCP** to obtain IP settings automatically if a DHCP server is available on the network.
- Valid MTU value range is 500 to 9676.

Step 4 Click Apply.

15.1.2 Device with a Single Network Interface

Step 1 Go to System > Network > TCP/IP.

NIC Туре	10M/100M/1000M Self-adap -		
Enable DHCP		Enable Obtain DNS	
Pv4 Address	10 . 15 . 2 . 104	Preferred DNS Server	
Pv4 Subnet Mask	255 . 255 . 255 . 0	Alternate DNS Server	
Pv4 Default Gateway	10 . 15 . 2 . 254		
MAC Address	18:68:cb:9e:46:6b		
MTU(Bytes)	1500		
nternal NIC IPv4 A	192 . 168 . 254 . 1		

Figure 15-2 TCP/IP Settings

Step 2 Configure network parameters as needed.

- Check **Enable DHCP** to obtain IP settings automatically if a DHCP server is available on the network.
- Valid MTU value range is 500 to 9676.

Step 3 Click Apply.

15.2 Configure PT cloud

PT cloud provides the mobile phone application to access and manage your connected encoder, which enables you to get a convenient remote access to the surveillance system.



The PT cloud can be enabled via operation on IP PORTAL software, GUI and Web browser. We introduce the operation steps on GUI in this section.

Step 1 Go to Configuration > Network > Advanced Settings > Platform Access.

Access Type	Enable PT Cloud	
Enable		
Server Address	dev sgp.guardingvision.com	Custom
Enable Stream Encrypt		
Verification Code/Encr		
Status	Online	
Scan the OR code via the P	T Cloud app application to add the de	evice.

Figure 15-3 PT cloud Settings

Step 2 Check the Enable checkbox to activate the function.

Then the Service Terms page pops up as below.

erv	vice Terms	
/eri	ification Code	
0	To enable PT Cloud service, you default verification code.	need to create a verification code or edit the
-	The PT Cloud service will require Privacy Statement before enabling	internet access Please read Service Terms an g the service.
0	Use your mobile phone to scan th	e QR code to obtain Terms of Service and Pri

Figure 15-4 Service Terms

1) Create the verification code in the Verification Code text field.

- 2) Confirm the verification code.
- 3) Read **Terms of Service** and **Privacy Policy** before enabling the service.
- 4) Click **OK** to save the settings and return to the PT cloud page.

- PT cloud is disabled by default.
- The verification code is empty when the device leaves factory.

• The verification code must contain 6 to 12 letters or numbers and is case sensitive.

• Every time you enable PT cloud, the Service Terms page pops up and you should read Terms of Service and Privacy Policy before enabling it.

Step 3 (Optional) If you want to customize the server, enable **Custom** and enter the **Server Address** in the text field.

Step 4 Click Save.

Step 5 After configuration, you can access and manage the DVR by your mobile phone.

Please refer to the help file on the *PT cloud Mobile Client User Manual* for adding the device to PT cloud and more operation instructions.

15.3 Configure DDNS

Purpose

You can set Dynamic DNS service for network access. Different DDNS modes are available: **DynDNS**, **PeanutHull**, and **NO-IP**.

Before You Start

You must register the DynDNS, PeanutHull, or NO-IP services with your ISP before configuring DDNS settings.

Step 1 Go to System > Network > TCP/IP > DDNS.

Step 2 Check Enable.

Step 3 Select DynDNS under DDNS Type.



PeanutHull and NO-IP are also available under DDNS Type, and required information should be entered accordingly.

Step 4 Enter Server Address for DynDNS (i.e., members.dyndns.org).

Step 5 Under **Device Domain Name**, enter the domain name obtained from the DynDNS Website.

Step 6 Enter the User Name and Password registered in the DynDNS Website.

DDNS Type	DynDNS -	User Name	test
Server Address	member.dyndns.org	Password	****
Device Domain Name	1233dyndns.com		
Status	DDNS is disabled.		

Figure 15-5 DDNS Settings

Step 7 Click Apply.

15.4 Configure PPPoE

If the device is connected to the Internet through PPPoE, you need to configure the user name and password accordingly under **System** > **Network** > **TCP/IP** > **PPPoE**.

Contact your Internet service provider for details about PPPoE service.

15.5 Configure NTP

Purpose

Connection to a network time protocol (NTP) server can be configured on your device to ensure the system's date and time accuracy.

Step 1 Go to System > Network > TCP/IP > NTP.

TCP/IP DDNS PPPoE	NTP NAT
Enable	
Interval (min)	180
NTP Server	au.pool.ntp.org
NTP Port	123
Apply	

Figure 15-6 NTP Settings

Step 2 Check Enable.

Step 3 Configure NTP settings as need.

- Interval (min): Time interval between two time synchronization with NTP server
- NTP Server: IP address of the NTP server
- NTP Port: Port of the NTP server

Step 4 Click Apply.

15.6 Configure SNMP

Purpose

You can configure SNMP settings to get device status and parameter information.

Before You Start

Download the SNMP software to receive device information via the SNMP port. By setting the trap address and port, the device is allowed to send alarm events and exception messages to the surveillance center.

Step 1 Go to System > Network > Advanced > SNMP.

Enable	
SNMP Version	V2 ~
SNMP Port	161
Read Community	public
Write Community	private
Trap Address	
Trap Port	162

Figure 15-7 SNMP Settings

Step 2 Check Enable. A message will pop up to notify about a possible security risk. Click Yes to continue.

Step 3 Configure the SNMP settings as needed.

- Trap Address: SNMP host IP address.
- **Trap Port**: Port of the SNMP host.

Step 4 Click **Apply**.

15.7 Configure Email

Purpose

The system can be configured to send an e-mail notification to all designated users when a specified event occurs such as when an alarm or motion event is detected, the administrator password is changed, etc.

Before You Start

The device must be connected to a local area network (LAN) that contains an SMTP mail server. The network must also be connected to either an intranet or the Internet depending on the location of the e-mail accounts to which you want to send notifications.

Step 1 Go to System > Network > Advanced > Email.

User Name Image: SMTP Server Password SmTP Port Sender test01 test01@hotmail.com Select Receivers receiver 1 test02@hotmail.com test02@hotmail.com test02@hotmail.com 1 Test Apply					
Sender's Address test01@hotmail.com Sender's Address test01@hotmail.com Select Receivers Receiver 1 Receiver's Address test02@hotmail.com Enable Attached Picture	User Name		SMTP Server		
Sender's Address test01@hotmail.com Select Receivers Receiver 1 Receiver test02 Receiver's Address test02@hotmail.com Enable Attached Picture	Password		SMTP Port	25	
Select Receivers Receiver 1 Receiver test02 Receiver's Address test02@hotmail.com Enable Attached Picture	Sender	test01	Enable SSL/TLS		
Receiver test02 Receiver's Address test02@hotmail.com Enable Attached Picture	Sender's Address	test01@hotmail.com			
Receiver's Address test02@hotmail.com Enable Attached Picture	Select Receivers	Receiver 1 -			
Enable Attached Picture	Receiver	test02			
Interval 2s ~	Receiver's Address	test02@hotmail.com			
	Enable Attached Picture				
Test Apply	Interval	2s -			
Test Apply					
	Test	Apply			

Figure 15-8 E-mail Settings

Step 2 Configure the following e-mail settings.

- **Enable Server Authentication**: Check to enable the function if the SMTP server requires user authentication, and enter the user name and password accordingly.
- **SMTP Server**: IP address of SMTP Server or host name (e.g., smtp.263xmail.com).
- **SMTP Port**: The default TCP/IP port used for SMTP is 25.
- Enable SSL/TLS: Check to enable SSL/TLS if required by the SMTP server.
- **Sender**: The sender's name.
- Sender's Address: The sender's Address.
- Select Receivers: Select the receiver. Up to 3 receivers can be configured.
- **Receiver**: The receiver's name.
- **Receiver's Address**: The e-mail address of the user to be notified.
- **Enable Attached Picture**: Check to send e-mail with attached alarm images. The interval is the time between sending two subsequent alarm images.

Step 3 Click Apply.

Step 4 (Optional) Click Test to send a test e-mail.

15.8 Configure Ports

You can configure different types of ports to enable relevant functions.

Go to **System > Network > Advanced > More Settings** and configure port settings as needed.

• Alarm Host IP/Port: With a remote alarm host configured, the device will send the alarm event or exception message to the host when an alarm is triggered. The remote alarm host must have the client management system (CMS) software installed.

The **Alarm Host IP** refers to the IP address of the remote PC on which the CMS software (e.g., NVMS7000) is installed, and the **Alarm Host Port** (7200 by default) must be the same as the alarm monitoring port configured in the software.

- **Server Port**: Server port (8000 by default) should be configured for remote client software access and its valid range is 2000 to 65535.
- **HTTP Port**: HTTP port (80 by default) should be configured for remote Web browser access.
- Multicast IP: Multicast can be configured to enable Live View for cameras that exceed the maximum number allowed through network. A multicast IP address covers Class-D IP ranging from 224.0.0.0 to 239.255.255.255 and it is recommended to use an IP address ranging from 239.252.0.0 to 239.255.255.255.

When adding a device to the CMS software, the multicast address must be the same as that of the device.

• **RTSP Port**: RTSP (Real Time Streaming Protocol) is a network control protocol designed to control streaming media servers. The port is 554 by default.

SNMP Email	
Alarm Host IP	
Alarm Host Port	0
Server Port	8000
HTTP Port	80
Multicast IP	
RTSP Port	554
Ар	slv.

Figure 15-9 Port Settings

Chapter 16 Hot Spare Device Backup

Purpose

The device can form an N+1 hot spare system. The system consists of several working devices and a hot spare device; when the working device fails, the hot spare device switches into operation, thus increasing the reliability of the system. Contact your dealer for details of models that support the hot spare function.

A bidirectional connection shown in the figure below is required to be built between the hot spare device and each working device.

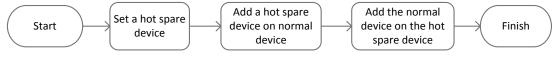


Figure 16-1 Building a Hot Spare System

Before You Start

At least 2 devices must be online.

16.2 Set Hot Spare Device

Purpose

Hot spare devices takes over working device tasks when working devices fail.

Step 1 Go to System > Hot Spare.

Step 2 Set the Work Mode to Hot Spare Mode.

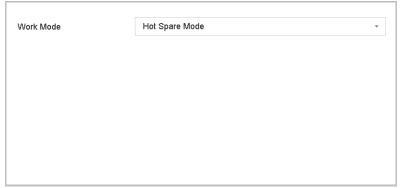


Figure 16-2 Hot Spare

Step 3 Click Apply.

Step 4 Click **Yes** in the popup attention box to reboot the device.

- The camera connection will be disabled when the device works in hot spare mode.
- It is highly recommended to restore the device defaults after switching the working mode of the hot spare device to normal mode to ensure the normal operation afterwards.

16.3 Set Working Device

Step 1 Go to System > Hot Spare.

Step 2 Set the Work Mode to Normal Mode.

Step 3 Check Enable.

Step 4 Enter the IP address, user name, and admin password of the hot spare device.

Work Mode	Normal Mode
Enable	
IPv4 address of the hot spare device	10 . 15 . 1 . 106
User Name of Hot Spare Device	admin
Password of the hot spare device	****
Working Status	Connected
*Notice: After the hot spare is enabled, otherwise, this function is not available	you must link the working device to the hot spare device,

Figure 16-3 Hot Spare

Step 5 Click Apply.

16.4 Manage Hot Spare System

Step 1 Go to System > Hot Spare in the hot spare device.

Step 2 Check working devices on the device list and click **Add** to link the working device to the hot spare device.



A hot spare device can connect up to 32 working devices.

Work Mode	Hot Spare Mode	Ţ	
Device List			
No.	IP Address		
□ 1	10.15.2.107		
Add			
Working Dev			
Working Dev No. IP Address	Connection Status	Working Status	Delete
	Connection Status	Working Status	Delete
	Connection Status	Working Status	Delete
	Connection Status	Working Status	Delete
	Connection Status	Working Status	Delete
	Connection Status	Working Status	Delete
	Connection Status	Working Status	Delete
	Connection Status	Working Status	Delete

Figure 16-4 Add Working Device

Working Status	Description
No record	The working device works properly.
Backing up	If the working device goes offline, the hot spare device will record the video of the IP camera connected to the working device for backup The record back up functions for 1 working device at a time.
Synchronizing	When the working device comes back online, the lost video files will be restored by the record synchronization function. The record synchronization function can be enabled for 1 working device at a time.

Table 16-1 Working Status Descrption

Chapter 17 User Management and Security

17.1 Manage User Accounts

Purpose

The *Administrator* user name is *admin* and the password is set when you start the device for the first time. The *Administrator* has the permission to add and delete users and configure user parameters.

17.1.1 Add a User

Step 1 Go to System > User.

+ Add	🖉 Modify 🛛 🗙 Dele	ste		
No	User Name	Security Priority	User's MAC Address	Permission
1	admin	Strong Password Admin	00:00:00:00:00:00	٢

Figure 17-1 User Management Interface

Step 2 Click Add to enter the operation permission interface.

Step 3 Input the admin password and click **OK**.

Step 4 In the Add User interface, enter the information for a new user, including User Name, Password, Confirm (password), User Level (Operator/Guest), and User's MAC Address.

Add User		\times
User Name	A01	
Password	****	
	Strong	
Confirm	****	
	Note:Valid password range [8-16]. You can use	
User Level	Operator -	
User's MAC Ad	00 : 00 : 00 : 00 : 00 : 00	
	ок	

Figure 17-2 Add User

Strong Password Recommended–We highly recommend you create a strong password of your own choosing (using a minimum of 8 characters, including at least three of the following categories: upper case letters, lower case letters, numbers, and special characters) in order to increase the security of your product. We also recommend that you reset your password regularly. Especially in the high security systems, resetting the password monthly or weekly can better protect your product.

• User Level: Set the user level to Operator or Guest. Different user levels have different operating permission.

Operator: An *Operator* user level has Two-way Audio permission in Remote Configuration and all operating permissions in Camera Configuration by default.

Guest: The Guest user has no permission of Two-way Audio in Remote Configuration and only has the local/remote playback in the Camera Configuration by default.

• User's MAC Address: The MAC address of the remote PC that logs onto the device. If it is configured and enabled, it allows only the remote user with this MAC address to access the device.

Step 5 Click **OK** to finish adding the new user account.

Step 6 In the User Management interface, the added new user is displayed on the list.

+ Add	\square Modify $ imes$ Delete					
No	User Name	Security	Priority	User's MAC Address	Permission	
1	admin	Strong Password	Admin	00:00:00:00:00	0	
2	A01	Strong Password	Operator	00:00:00:00:00	0	
3	A02	Strong Password	Operator	00:00:00:00:00:00	\bigcirc	

Figure 17-3 User List

17.1.2 Edit the Admin User

You can modify the admin user account's password and unlock pattern.

Step 1 Go to System > User.

Step 2 Select the admin user from the list and click Modify.

Edit User			\times
	User Name	admin	
	Password	****	Discard C
	Confirm	****	
	Note:Valid p	bassword range [8-16]. You can use	
	Password Str		
	User's MAC A	00 : 00 : 00 : 00 : 00 : 00	
	Unlock Pattern	Enable Unlock Pattern	502
	GUID File	Export	?
	Security Ques	<u>{</u>	
		ок	Cancel

Figure 17-4 Edit User (Admin)

- Step 3 Edit the admin user information as desired, including a new admin password (strong password is required) and MAC address.
- Step 4 Edit the unlock pattern for the admin user account.

- 1) Check **Enable Unlock Pattern** to enable the use of an unlock pattern when logging in to the device.
- 2) Use the mouse to draw a pattern among the 9 dots on the screen, and release the mouse when the pattern is done.

Refer to Chapter 2.2 Step 2 for detailed instructions.

Step 5 Click of **Export GUID** to enter the reset password interface to export the GUID file for the admin user account.

- Step 6 When the admin password is changed, export the new GUID to the connected USB flash disk in the Import/Export interface for the future password resetting.
- Step 7 Set the **security questions**.
- Step 8 Click **OK** to save the settings.
- Step 9 For an **Operator** or **Guest** user account, click on the user management interface to edit the permissions.

17.1.3 Edit an Operator/Guest User

You can edit the user information, including user name, password, permission level, and MAC address. Check **Change Password** to change the password, and input the new password in the text field of **Password** and **Confirm**. A strong password is recommended.

Step 1 Go to System > User.

Step 2 Select a user from the list and click Modify.

Edit User		\times
User Name	A01	
Password	*****	Discard C
Confirm	****	
Note:Valid p	assword range [8-16]. You can use .	
Password Stre		
User Level	Operator -	
User's MAC Ad	00 : 00 : 00 : 00 : 00 : 00	
		ок

Figure 17-5 Edit User (Operator/Guest)

Step 3 Edit the user information as desired, including the new password (strong password is required) and MAC address.

17.1.4 Delete a User

The admin user account has the permission to delete an operator/guest user account.

Step 1 Go to System > User.

Step 2 Select a user from the list.

Step 3 Click **Delete** to delete the selected user account.

17.2 Manage User Permissions

17.2.1 Set User Permissions

For an added user, you can assign the different permissions, including local and remote operation of the device.

Step 1 Go to System > User.

Step 2 Select a user from the list, and then click 🗹 to enter the permission settings interface.

Permission			\times
Local Configuration	Remote Configuration	Camera Configuration	n
✓Local Log Search			
Local Parameters	Settings		
Local Camera Mar	nagement		
Local Advanced O	peration		
Local Shutdown /	Reboot		
	Apply	ок	Cancel

Figure 17-6 User Permission Settings Interface

Step 3 Set the user's operating permissions for Local Configuration, Remote Configuration, and Camera Configuration for the user.

- Local Configuration
- **Local Log Search**: Searching and viewing logs and system information of device.
- **Local Parameters Settings**: Configuring parameters, restoring factory default parameters, and importing/exporting configuration files.
- Local Camera Management: Adding, deleting, and editing of IP cameras.
- **Local Advanced Operation**: Operating HDD management (initializing HDD, setting HDD property), upgrading system firmware, clearing I/O alarm output.
- **Local Shutdown Reboot**: Shutting down or rebooting the device.
- Remote Configuration
- **Remote Log Search**: Remotely viewing logs that are saved on the device.
- **Remote Parameters Settings**: Remotely configuring parameters, restoring factory default parameters, and importing/exporting configuration files.
- **Remote Camera Management**: Remote adding, deleting, and editing of the IP cameras.
- **Remote Serial Port Control**: Configuring settings for RS-232 and RS-485 port settings.
- **Remote Video Output Control**: Sending remote button control signals.

- **Two-Way Audio**: Operating the two-way radio between the remote client and the device.
- **Remote Alarm Control**: Remotely arming (notify alarm and exception message to the remote client) and controlling the alarm output.
- **Remote Advanced Operation**: Remotely operating HDD management (initializing HDD, setting HDD property), upgrading system firmware, clearing I/O alarm output.
- **Remote Shutdown/Reboot**: Remotely shutting down or rebooting the device.
- Camera Configuration
- **Remote Live View**: Remotely viewing live video of the selected camera(s).
- **Local Manual Operation**: Locally starting/stopping manual recording and alarm output of the selected camera(s).
- **Remote Manual Operation**: Remotely starting/stopping manual recording and alarm output of the selected camera(s). **Local Playback**: Locally playing back recorded files of the selected camera(s).
- **Remote Playback**: Remotely playing back recorded files of the selected camera(s).
- **Local PTZ Control**: Locally controlling PTZ movement of the selected camera(s).
- **Remote PTZ Control**: Remotely controlling PTZ movement of the selected camera(s).
- Local Video Export: Locally exporting recorded files of the selected camera(s).
- Local Live View: View live video of the selected camera(s) in local.

Step 4 Click **OK** to save the settings.

Only the admin user account has the permission to restore factory default parameters.

17.2.2 Set Local Live View Permission for Non-Admin Users

The admin user can assign to normal users (Operator or Guest) the live view permission for specific cameras.

Step 1 Go to System > User.

Step 2 Click Solution of the admin user.

Step 3 Input admin password and click **OK**.

Step 4 Select cameras that a non-admin user can view locally and click OK.

Permission									
Enable Liv	Enable Live View Permission								
Camera					Select All				
 ∠D1	✓ D2	✓ D3	✓ D4	✓ D5	✓ D6				
☑ D7	✓ D8	✓ D9	✓D10	✓ D11	✓D12				
☑ D13	✓ D14	✓D15	✓D16	✓ D17	✓D18				
☑ D19	✓ D20	✓ D21	✓ D22	✓ D23	✓ D24				
∠ D25	✓ D26	✓ D27	✓ D28	✓ D29	✓ D30				
☑ D31	✓ D32	✓ D33	✓ D34	✓D35	✓ D36				
☑ D37	✓ D38	✓ D39	✓ D40	✓D41	✓ D42				
✓ D43	✓ D44	✓ D45	✓ D46	✓ D47	✓ D48				
✓ D49	✓D50	🗹 D51	✓ D52	🗹 D53	✓ D54				
L]			
		Арр	bly	ОК	Car	ncel			

Figure 17-7 Set Live View Permissions

Step 5 Click Solution of non-admin user.

Step 6 Click the Camera Configuration tab.

Step 7 Select Camera Permission as Local Live View.

Step 8 Select cameras to display in Live View.

Step 9 Click OK.

17.2.3 Set Live View Permission on Lock Screen

The admin user can set live view permission for specific cameras in the screen lock status of device.

Step 1 Go to System > User.

Step 2 Click Live View Permission on Lock Screen.

Step 3 Input admin password and click Next.

Local Live V	/iew					\times
Camera					Select All	_
⊡ D1	✓ D2	D3	✓ D4	✓ D5	 □ D6	
□D7	D8	D9	D10	D11	D12	
□D13	D14	D15	D16	D17	D18	
D19	D20	D21	D22	D23	D24	
D25	D26	D27	D28	D29	D30	
D 31	D32	D33	D34	D35	D36	
□D37	D38	D39	D40	D41	D42	
D43	D44	D45	D46	D47	D48	
D49	D50	D51	D52	D53	D54	
All the	e users will h	ave the live v	view permissi	ion of selecte	ed channels.	J
		App	bly	ОК	Cancel	

Figure 17-8 Set Live View Permissions on Lock Screen

Step 4 Set the permissions.

- Select the camera (s) to allow live view when the current user account is in logout status.
- Deselect the camera (s) to forbidden the camera (s) being viewed when the current user account is in logout status.

Step 5 Click OK.

- The *admin* user can set this permission for user accounts.
- When the normal user (Operator or Guest) has no local live view permission for specific camera (s) (refer to 17.2.2 Set Local Live View Permission for Non-Admin Users), the live view permission for such camera (s) on lock screen status cannot be configured (live view not allowed by default).

17.3 Configure Password Security

17.3.1 Export GUID File

The GUID file may help you to reset password when you forget password.

- Step 1 Select to export GUID file when you are activating the device, or editing the admin user account.
- Step 2 Insert the U flash disk to your device, and export the GUID file to the U flash disk.

GUID Import/Expor	t					\times
Device Na USI	Device Na USB Flash Disk 1-1					
Name	Size	Туре	Edit Date	De	Play	
timobileD		Fol	02-01-2018	×	—	
la printscr		Fol	02-01-2018	×	-	
🗎 1.22-1.b	6075	File	21-01-2018	×	-	
🗎 1.22-2.b	6075	File	21-01-2018	×	-	
🗎 1.22-3.b	6075	File	21-01-2018	×	-	
🗎 1.22-4.b	6075	File	21-01-2018	×	-	
🗎 1.22-5.b	6075	File	21-01-2018	×	-	
🗎 1.22-6.b	6075	File	21-01-2018	×	_	
New Folder	🖏 E	rase		Free Space	e 14.00GE	}
			E	ixport	Back	

Figure 17-9 Export GUID File

Please keep your GUID file properly for future password resetting.

17.3.2 Configure Security Questions

The security question configuration may help you to reset password when you forget your password or encounter security issues.

- Step 1 Click **Security Question Configuration** when you are activating the device, or editing the admin user account.
- Step 2 Select three security questions from the drop-down list and input the answers.

Step 3 Click **OK**.

Security Question Configuration	n		>
Question 1	10. Your favorite book.	-	
Answer 1	A		
Question 2	11. Your favorite color.	•	
Answer 2	Blue		
Question 3	13. Your favorite flower.	•	
Answer 3	Rose		
	ок		Cancel

Figure 17-10 Configure Security Questions

17.4 Reset Password

When you forget the admin password, you can reset the password by importing the GUID file or by answering security questions.

17.4.1 Reset Password by GUID

Before You Start

The GUID file must be exported and saved in the local U flash disk after you have activated the device or edited the admin user account. (Refer to Chapter 17.3.1 Export GUID File).

Step 1 On the user login interface, click Forgot Password.

Step 2 Select the password resetting type to Verify by GUID.

Please insert the U flash disk stored with the GUID file to the NVR before resetting password.

Step 3 Select the GUID file from the U flash disk and click **Import** to import the file to the device.

If you have imported the wrong GUIE file for 7 times, you will be not allowed to reset the password for 30 minutes.

Step 4 After the GUID file is successfully imported, enter the reset password interface to set the new admin password.

Step 5 Click **OK** to set the new password. You can export the new GUID file to the U flash disk for future password resetting.

When the new password is set, the original GUID file will be invalid. The new GUID file should be exported for future password resetting. You can also enter the User>User Management interface to edit the admin user and export the GUID file.

17.4.2 Reset Password by Security Questions

Before You Start

You have configured the security questions when you activate the device or edit the admin user account. (Refer to Chapter 17.3.2 Configure Security Questions).

Step 1 On the user login interface, click Forgot Password.

Step 2 Select the password resetting type to Verify by Security Question.

Step 3 Input the correct answers of the three security questions.

Step 4 Click **OK**.



If the answers mismatch, the verification is failed.

Step 5 Create the new admin password on the Reset Password interface.

Chapter 18 System Service Maintenance

18.1 Storage Device Maintenance

18.1.1 Configure Disk Clone

Purpose

Select the HDDs to clone to the eSATA HDD.

Before You Start

Connect an eSATA disk to the device.

Step 1 Go to Maintenance > HDD Operation > HDD Clone.

lone Sourc	e					
Label	Capacity	Status	Property	Туре	Free Space	Group
1	1863.02GB	Normal	R/W	Local	1858.00GB	1
2	2794.52GB	Normal	R/W	Local	2794.00GB	1
5	1863.02GB	Normal	R/W	Local	1862.00GB	1
9	2794.52GB	Normal	R/W	Local	2794.00GB	1
1 0	1863.02GB	Normal	R/W	Local	1862.00GB	1
lone Destir	nation					
SATA	eSATA1				•	Refresh
apacity	2794.52GB					Clone

Figure 18-1 HDD Clone

- Step 2 Check the HDD to clone. The capacity of the selected HDD must match the capacity of the clone destination.
- Step 3 Click Clone.

Step 4 Click **Yes** on the popup message box to create the clone.

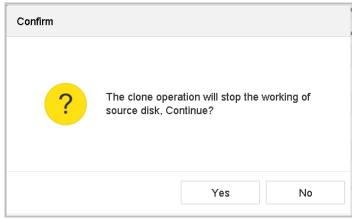


Figure 18-2 Message Box

18.1.2 S.M.A.R.T. Detection

Purpose

HDD detection functions such as the adopting of the S.M.A.R.T. and the Bad Sector Detection techniques. S.M.A.R.T. (Self-Monitoring, Analysis and Reporting Technology) are HDD monitoring systems to detect various reliability indicators in the hopes of anticipating failures.

Step 1 Go to Maintenance > HDD Operation > S.M.A.R.T.

- Step 2 Select the HDD to view its S.M.A.R.T. information list.
- Step 3 Select the self-test types as Short Test, Expanded Test, or the Conveyance Test.
- Step 4 Click **Self-Test** to start the S.M.A.R.T. HDD self-evaluation.

Step 5 The related S.M.R.T. information of the S.M.A.R.T. is shown, and you can check the HDD status.

	5	-					
elf-Test Type	Short Test	-	Self-Test	Not tested			
emperature	36		Self-Evaluation	Pass			
Vorking Time	. 390		All-Evaluation	Functional			
.M.A.R.T Infor							
ID	Attribute Name	Status	Flags	Threshold	Value	Worst	Raw Value
0x1	Raw Read Error R	ок	2f	51	200	200	8
	Spin Up Time	ок	27	21	113	107	7316
0x3			32	0	98	98	2657
0x3 0x4	Start/Stop Count	ок	32				
	Start/Stop Count Reallocated Sector	ок ок	33	140	200	200	0
0x4				140 0	200 200	200 200	0
0x4 0x5	Reallocated Sector	ок	33				
0x4 0x5 0x7	Reallocated Sector Seek Error Rate	ок ок	33 2e	0	200	200	0

Figure 18-3 S.M.A.R.T. Settings Interface

To use the HDD even when the S.M.A.R.T. checking has failed, check **Continue to use the disk** when self-evaluation is failed checkbox.

18.1.3 Bad Sector Detection

- Step 1 Go to Maintenance > HDD Operation > Bad Sector Detection.
- Step 2 Select the HDD No. you want to configure in the dropdown list.

Step 3 Select All Detection or Key Area Detection as the detection type.

Step 4 Click the **Self-Test** button to start the detection.

Fu	nctional	-	Bad	1	S	hield		_	++							Detect	ting Prod	cess				Testing	J 2%
																HDD (Capacity	,	931	.52GB			
																Block	Size		232	.88MB			
																Error (Count		0				
																Error	Informa	tion					

Figure 18-4 Bad Sector Detection

- You can pause/resume or cancel the detection.
- After testing has been completed, you can click **Error information** to see the detailed damage information.

18.1.4 HDD Health Detection

Purpose

You can view the health status of a 4 TB to 8 TB Seagate HDD that generated after October 1, 2017. Use this function to help troubleshoot HDD problems. Health Detection shows a more detailed HDD status than the S.M.A.R.T. function.

Step 1 Go to Maintenance > HDD Operation > Health Detection.

	System Info	>	16 HDD (s)	in total. The detect	ion is only ava	ailable for the Seaga	ate HDD.			BETTANK
シ 全 の	Import/Export Upgrade : Default	>	No. 1	HDD is healthy.	No.2	HDD is healthy.	No.3	B HDD is healthy.	No.4	HDD is healthy.
B	Network Detection 3 HDD Operation 5 S.M.A.R.T Bad Sector Detection	~	No.5	HDD is healthy.	No.6	HDD is healthy.	No. 7	7 HDD is healthy.	No.8	HDD is healthy.
	HDD Clone Heath Detection		No.9	HDD is healthy.	No.10	HDD is healthy.	No. 1	1 HDD is healthy.	No.12	HDD is healthy.
			No.13	HDD is healthy.	No. 14	HDD is healthy.	No.	5 HDD is healthy.	No.16	HDD is healthy.

Figure 18-5 Health Detection

Step 2 Click an HDD to view details.

18.2 Search and Export Log Files

Purpose

The device operation, alarm, exception, and information can be stored in log files, which can be viewed and exported at any time.

18.2.1 Search the Log Files

Step 1 Go to Maintenance > Log Information.

ajor Type All - inor Type Select All E	Export ALL
	Export ALL
☑ Alarm Input	
⊡Alarm Output	
☑Motion Detection Started	
☑Motion Detection Stopped	
⊡Video Tampering Detection Started	
⊡Video Tampering Detection Stopped	
☑POS Started	
☑POS Stopped	
☑Line Crossing Detection Alarm Started	
⊡Line Crossing Detection Alarm Stopped	
⊡Intrusion Detection Alarm Started	
⊡Intrusion Detection Alarm Stopped	
☑Audio Loss Exception Alarm Started	
☑Audio Loss Exception Alarm Stopped	
⊠Sudden Change of Sound Intensity Alarm Started	
⊡Sudden Change of Sound Intensity Alarm Stopped	
☑Face Detection (Face Capture) Alarm Started	
Zeas Datation /Ease Cantura) Alarm Channed	

Figure 18-6 Log Search Interface

Step 2 Set the log search conditions, including the time, major type and minor type.

Step 3 Click **Search** to start searching the log files.

Step 4 The matched log files will be displayed on the list, as shown below.

Network Video Recorder User Manual

ajor 1	Гуре	All	-						
nor	Search	Result							Export ALI
	No	Major Type	Time	Minor Type	Parameter	Play	Details		
×	103	Alarm	18-08-2017 07:07:31	Motion Detection	N/A		()		
~	104	Alarm	18-08-2017 07:07:43	Motion Detection	N/A		()		
_	105	Alarm	18-08-2017 07:16:27	Motion Detection	N/A		()		
_	106	Alarm	18-08-2017 07:16:37	Motion Detection	N/A		()		
	107	🖳 Inform	18-08-2017 07:17:19	System Running	N/A	-	()		
_	108	🖳 Inform	18-08-2017 07:17:19	System Running	N/A	-	()		
	109	🖳 Inform	18-08-2017 07:18:00	HDD S.M.A.R.T.	N/A	-	(!)		
~	110	🖳 Inform	18-08-2017 07:18:00	HDD S.M.A.R.T.	N/A	-	!		
_	111	Inform	18-08-2017 07:27:20	System Running	N/A	-	!		
~	Total: 11	51 P: 2/12			< <			Go	
						Export	Back		
	Sudden C	hange of Sound	Intensity Alarm Started						
	Sudden (bange of Sound	Intensity Alarm Stopped						

Figure 18-7 Log Search Results

Up to 2,000 log files can be displayed each time.

Step 5 Related Operation:

- Click it to view detailed information.
- Click b to view the related video file.

18.2.2 Export the Log Files

Before You Start

Connect a storage device to the NVR.

- Step 1 Search the log files. Refer to Chapter 18.2.1 Search the Log Files.
- Step 2 Select the log files you want to export, and click **Export** or click **Export ALL** on the Log Search interface to export all the system logs to the storage device.

System Log E	xport							\times
Device Na	USB	Flash Disl	¢ 1-1			▼	xt	• 6
Name		Size	Туре	Edit Dat	e	De	Play	
201708	2	41.3	File	22-08-2	017	×	-	
+ New Fold	ler	S E	ase			Free Spa	ce 8993	3.11MB
					E	(port	В	ack

Figure 18-6 Export Log Files

Step 3 On the Export interface, select the storage device from **Device Name**.

Step 4 Select the format of the log files to be exported. Up to 15 formats are selectable.

Step 5 Click **Export** to export the log files to the selected storage device.

- Click the **New Folder** button to create a new folder in the storage device.
- Click the **Format** button to format the storage device before exporting the log(s).

18.3 Import/Export IP Camera Configuration Files

Purpose

The IP camera information, including the IP address, manage port, password of admin, etc., can be saved in Microsoft Excel format and backed up to the local device. The exported file can be edited on a PC, including adding or deleting the content, and copying the setting to other devices by importing the Excel file to it.

Before You Start

When importing the configuration file, connect the storage device that contains the configuration file to the NVR.

Step 1 Go to Camera > IP Camera Import/Export.

Step 2 Click the **IP Camera Import/Export** tab, and the detected external device contents appear.

Step 3 Export or import the IP camera configuration files.

- Click **Export** to export the configuration files to the selected local backup device.
- To import a configuration file, select the file from the selected backup device and click **Import**.

After the importing process is completed, you must reboot the device to activate the settings.

18.4 Import/Export Device Configuration Files

Purpose

The device configuration files can be exported to a local device for backup; and the configuration files of one device can be imported to multiple devices if they are to be configured with the same parameters.

Before You Start

Connect a storage device to your device. To import the configuration file, the storage device must contain the file.

Step 1 Go to Maintenance >Import/Export.

Device Name	USB Flash D	Disk 1-1	- File Format	*.bin -			⊖ Refresh
+ New Folder		Import	Export			Total Free Capacity	9165.35M
Name		Size	Туре	Modify Date	Delete	Play	
devCfg_7	59708301	1260.94KB	File	18-08-2017 18:28:09	×	-	

Figure 18-7 Import/Export Config File

Step 2 Export or import the device configuration files.

- Click **Export** to export configuration files to the selected local backup device.
- To import a configuration file, select the file from the selected backup device and click the **Import**.

After having finished importing configuration files, the device will reboot automatically.

18.5 Configure System Services

18.5.1 I-VIEW-NOW UPNP Reporting

The I-VIEW-NOW UPNP Reporting service allows the system to automatically send the device network parameters to authorized receivers by e-mail.

Step 1 Go to Menu > Maintenance > System Service > More Settings > I-VIEW-NOW UPNP Reporting.

Step 2 Check the checkbox of I-VIEW-NOW UPNP Reporting.

Step 3 Click **Apply**.

18.6 Configure Stream Encryption

The stream encryption enables to encrypt the streams for live view, playback, download, backup, etc.

Step 1 Go to Menu > Maintenance > System Service > Stream Encryption.

Step 2 Check Enable Stream Encryption.

Step 3 Create the encryption password.



The stream encryption password is synchronized with the LTS-Connect service verification code. After enabling the encryption code, the LTS-Connect stream will be forcedly encrypted. Make sure the LTS-Connect service supports the stream encryption as well.

18.7 Upgrade the System

Purpose

The firmware on your device can be upgraded with a local backup device or remote FTP server.

18.7.1 Upgrade with a Local Backup Device

Before You Start

Connect your device to a local storage device that contains the firmware update file.

Step 1 Go to Maintenance>Upgrade.

Step 2 Click the Local Upgrade tab to enter the local upgrade interface.

Device Name	USB Flash Disk 1-1	File Format *.da	av;*.mav;*.iav			\bigcirc Refresh
1 Upgrade						
File Name	File Size	File Type	Edit Date	Delete	Play	

Figure 18-8 Local Upgrade Interface

Step 3 Select the firmware update file from the storage device.

Step 4 Click Upgrade to start upgrading.

Step 5 After the upgrade is complete, the device will reboot automatically to activate the new firmware.

18.7.2 Upgrade by FTP

Before You Start

Ensure the network connection of the PC (running FTP server) and the device are valid and correct. Run the FTP server on the PC and copy the firmware into the corresponding directory of your PC.

Step 1 Go to Maintenance>Upgrade.

Step 2 Click the **FTP** tab to enter the local upgrade interface.

FTP Server Address	192 . 0	. 0	. 68	
Upgrade				

Figure 18-9 FTP Upgrade Interface

Step 3 Enter FTP Server Address in the text field.

Step 4 Click Upgrade to start upgrading.

Step 5 After the upgrading is complete, reboot the device to activate the new firmware.

18.8 Restore Default Settings

Step 1 Go to Maintenance > Default.

Restore Defaults	Reset all settings to factory default except network and admin password settings
Factory Defaults	Restore device to inactive status and all settings including network and password
Restore to Inactive	Leave all settings unchanged except restore device to inactive status without amdin password
	Figure 18-10 Restore Defaults

Step 2 Select the restore type from the following three options.

Restore Defaults: Restore all parameters, except the network (including IP address, subnet mask, gateway, MTU, NIC working mode, default route, server port, etc.) and user account parameters, to the factory default settings.

Factory Defaults: Restore all parameters to the factory default settings.

Restore to Inactive: Restore the device to inactive status.

The device will reboot automatically after restoring to the default settings.

Chapter 19 General System Settings

19.1 Configure General Settings

Purpose:

You can configure the BNC output standard, VGA output resolution, and mouse pointer speed in the **System** > **General interface**.

Step 1 Go to System > General.

						1000	+ 4 0 0 0	00117/10				
Time Zone	(GMT+08:00) Beijing, Urumo		VGA2/HDMI2 Reso	lution		1920	1080	/60HZ(10	80P)	*		
Date Format	DD-MM-YYYY	-	Mouse Pointer Spe	ed		Slow				-	Fast	
System Date	22-08-2017		Enable DST			\checkmark						
System Time	11:34:09	\oplus	DST Mode			OAuto		 Manu 	al			
Device Name	Network Video Recorder		Start Time	Apr	•	1st	•	Sun	•	2	«»	: 0
Device No.	255		End Time	Oct	-	last	-	Sun	•	2	82	: 0
Auto Log out	Never	-	DST Bias			60 M	inutes			•		
Enable Wizard												
Enable Password												

Figure 19-1 General Settings Interface

Step 2 Configure the following settings.

Language: The default language used is English.

Output Standard: Set the output standard to NTSC or PAL, which must be the same as the video input standard.

Resolution: Configure video output resolution.

Device Name: Edit device name.

Device No.: Edit the device serial number. The Device No. can be set in the range of 1 to 255, and the default No. is 255. The number is used for the remote and keyboard control.

Auto Logout: Set the timeout time for menu inactivity. E.g., when the timeout time is set to 5 minutes, then the system will exit from the current operation menu to Live View screen after 5 minutes of menu inactivity.

Mouse Pointer Speed: Set the speed of the mouse pointer; 4 levels are configurable.

Enable Wizard: Enable/disable the Wizard when the device starts up.

Enable Password: Enable/disable the use of the login password.

Step 3 Click **Apply** to save the settings.

19.2 Configure Date & Time

- Step 1 Go to System > General.
- Step 2 Configure the date and time.
 - Time Zone: Select the time zone.
 - Date Format: Select the date format.
 - System Date: Select the system date.
 - **System Time:** Set the system time.

Time Zone	(GMT+08:00) Beijing, Urumo	-
Date Format	DD-MM-YYYY	-
System Date	22-08-2017	
System Time	11:34:09	

Figure 19-2 Date and Time Settings

Step 3 Click Apply to save the settings.

19.3 Configure DST Settings

DST (daylight saving time) refers to the period of the year when clocks are moved one period ahead. In some areas worldwide, this has the effect of creating more sunlit hours in the evening during months when the weather is the warmest.

We advance our clocks ahead a certain period (depends on the DST bias you set) at the beginning of DST, and move them back the same period when we return to standard time (ST).

Step 1 Go to System > General.

Step 2 Check Enable DST.

Enable DST			~					
DST Mode				Auto Manual				
Start Time	Apr	-	1st	- S	un -	- 2	ŝ	: 00
End Time	Oct	•	last	- S	un -	- 2	89	: 00
DST Bias			60 Minutes			•		

Figure 19-3 DST Settings Interface

Step 3 Set the DST mode to Auto or Manual.

- **Auto:** Automatically enable the default DST period according to the local DST rules.
- Manual: Manually set the start time and end time of the DST period, and the DST bias.
 DST Bias: Set the time (30/60/90/120 minutes) offset from the standard time.

Example: DST begins at 2:00 a.m. on the second Sunday of March and ends at 2:00 a.m. on the first Sunday of November, with 60 minutes ahead.

Step 4 Click **Apply** to save the settings.

Chapter 20 Appendix

20.1 Glossary

- **Dual Stream:** Dual stream is a technology used to record high resolution video locally while transmitting a lower resolution stream over the network. The two streams are generated by the device, with the main stream having a maximum resolution of 4CIF and the sub-stream having a maximum resolution of CIF.
- **HDD:** Acronym for Hard Disk Drive. A storage medium which stores digitally encoded data on platters with magnetic surfaces.
- **DHCP:** Dynamic Host Configuration Protocol (DHCP) is a network application protocol used by devices (DHCP clients) to obtain configuration information for operation in an Internet Protocol network.
- **HTTP:** Acronym for Hypertext Transfer Protocol. A protocol to transfer hypertext request and information between servers and browsers over a network
- **DDNS:** Dynamic DNS is a method, protocol, or network service that provides the capability for a networked device, such as a router or computer system using the Internet Protocol Suite, to notify a domain name server to change, in real time (ad-hoc) the active DNS configuration of its configured hostnames, addresses or other information stored in DNS.
- **PPPoE:** Stands for "Point-to-Point Protocol over Ethernet." PPPoE is a network configuration used for establishing a PPP connection over an Ethernet protocol.
- Hybrid device: A hybrid device is a combination of a DVR and device.
- **NTP:** Acronym for Network Time Protocol. A protocol designed to synchronize the clocks of computers over a network.
- **NTSC:** Acronym for National Television System Committee. NTSC is an analog television standard used in such countries as the United States and Japan. Each frame of an NTSC signal contains 525 scan lines at 60Hz.
- **Device:** Acronym for Network Video Recorder. A device can be a PC-based or embedded system used for centralized management and storage for IP cameras, IP Domes and other devices.
- **PAL:** Acronym for Phase Alternating Line. PAL is also another video standard used in broadcast televisions systems in large parts of the world. PAL signal contains 625 scan lines at 50Hz.
- **PTZ:** Acronym for Pan, Tilt, Zoom. PTZ cameras are motor driven systems that allow the camera to pan left and right, tilt up and down and zoom in and out.

• **USB:** Acronym for Universal Serial Bus. USB is a plug-and-play serial bus standard to interface devices to a host computer.

20.2 Troubleshooting

• No image displayed on the monitor after starting up normally.

Possible Reasons:

- No VGA or HDMI connections.
- Connection cable is damaged.
- Input mode of the monitor is incorrect.

Step 1 Verify the device is connected with the monitor via HDMI or VGA cable.

Step 2 If not, please connect the device with the monitor and reboot.

- Step 3 Verify the connection cable is good.
- Step 4 If there is still no image display on the monitor after rebooting, please check if the connection cable is good, and change a cable to connect again.
- Step 5 Verify Input mode of the monitor is correct.
- Step 6 Please check the input mode of the monitor matches with the output mode of the device (e.g. if the output mode of device is HDMI output, then the input mode of monitor must be the HDMI input). And if not, please modify the input mode of monitor.
- Step 7 Check if the fault is solved by the step 1 to step 3.
- Step 8 If it is solved, finish the process.

If not, please contact the engineer from our company to do the further process.

• There is an audible warning sound "Di-Di-Di-DiDi" after a new bought device starts up.

Possible Reasons:

- No HDD is installed in the device.
- The installed HDD has not been initialized.
- The installed HDD is not compatible with the device or is broken-down.

Step 1 Verify at least one HDD is installed in the device.

- If not, please install the compatible HDD.

Please refer to the *Quick Start Guide* for the HDD installation steps.

- If you don't want to install a HDD, go to Menu>System> Event>Normal Event>Exception, and uncheck the Audible Warning checkbox of "HDD Error".

Step 2 Verify the HDD is initialized.

- 1) Go to Menu>Storage>Storage Device.
- 2) If the status of the HDD is "Uninitialized", please check the checkbox of corresponding HDD and click the "Init" button.

Step 3 Verify the HDD is detected or is in good condition.

- 3) Select Menu>Storage>Storage Device.
- 4) If the HDD is not detected or the status is "Abnormal", please replace the dedicated HDD according to the requirement.

Step 4 Check if the fault is solved by the step 1 to step 3.

If it is solved, finish the process.

If not, please contact the engineer from our company to do the further process.

The status of the added IP camera displays as "Disconnected" when it is connected through Private Protocol. Select "Menu>Camera>Camera>IP Camera" to get the camera status.

Possible Reasons:

- Network failure, and the device and IP camera lost connections.
- The configured parameters are incorrect when adding the IP camera.
- Insufficient bandwidth.

Step 1 Verify the network is connected.

- 1) Connect the device and PC with the RS-232 cable.
- 2) Open the Super Terminal software, and execute the ping command. Input "ping IP" (e.g. ping 172.6.22.131).

I NOTE

Simultaneously press **Ctrl** and **C** to exit the ping command.

If there exists return information and the time value is little, the network is normal.

Step 2 Verify the configuration parameters are correct.

- 1) Go to Menu>Camera.
- 2) Verify the following parameters are the same with those of the connected IP devices, including IP address, protocol, management port, user name and password.

Step 3 Verify the whether the bandwidth is enough.

- 1) Go to Menu>Maintenance>Net Detect>Network Stat..
- 2) Check the usage of the access bandwidth, and see if the total bandwidth has reached its limit.

Step 4 Check if the fault is solved by the step 1 to step 3.

If it is solved, finish the process.

If not, please contact the engineer from our company to do the further process.

• The IP camera frequently goes online and offline and the status of it displays as "Disconnected".

Possible Reasons:

- The IP camera and the device versions are not compatible.
- Unstable power supply of IP camera.
- Unstable network between IP camera and device.
- Limited flow by the switch connected with IP camera and device.

Step 1 Verify the IP camera and the device versions are compatible.

- 1) Go to Menu>Camera, and view the firmware version of connected IP camera.
- 2) Go to Menu>Maintenance>System Info>Device Info and view the firmware version of device.

Step 2 Verify power supply of IP camera is stable.

- 1) Verify the power indicator is normal.
- 2) When the IP camera is offline, please try the ping command on PC to check if the PC connects with the IP camera.

Step 3 Verify the network between IP camera and device is stable.

- 3) When the IP camera is offline, connect PC and device with the RS-232 cable.
- 4) Open the Super Terminal, use the ping command and keep sending large data packages to the connected IP camera, and check if there exists packet loss.

Simultaneously press **Ctrl** and **C** to exit the ping command.

Example: Input ping 172.6.22.131 -| 1472 -f.

Step 1 Verify the switch is not flow control.

Check the brand, model of the switch connecting IP camera and device, and contact with the manufacturer of the switch to check if it has the function of flow control. If so, please turn it down.

Step 2 Check if the fault is solved by the step 1 to step 4.

If it is solved, finish the process.

If not, please contact the engineer from our company to do the further process.

• No monitor connected with the device locally and when you manage the IP camera to connect with the device by web browser remotely, of which the status displays as Connected. And then

you connect the device with the monitor via VGA or HDMI interface and reboot the device, there is black screen with the mouse cursor.

Connect the device with the monitor before startup via VGA or HDMI interface, and manage the IP camera to connect with the device locally or remotely, the status of IP camera displays as Connect. And then connect the device with the CVBS, and there is black screen either.

Possible Reasons:

After connecting the IP camera to the device, the image is output via the main spot interface by default.

- Step 1 Enable the output channel.
- Step 2 Go to Menu>System>Live View>General, and select video output interface in the drop-down list and configure the window you want to view.

- The view settings can only be configured by the local operation of device.
- Different camera orders and window-division modes can be set for different output interfaces separately, and digits like "D1" and "D2" stands for the channel number, and "X" means the selected window has no image output.

Step 3 Check if the fault is solved by the above steps.

If it is solved, finish the process.

If not, please contact the engineer from our company to do the further process.

• Live view stuck when video output locally.

Possible Reasons:

- Poor network between device and IP camera, and there exists packet loss during the transmission.
- The frame rate has not reached the real-time frame rate.

Step 1 Verify the network between device and IP camera is connected.

- When image is stuck, connect the RS-232 ports on PC and the rear panel of device with the RS-232 cable.
- Open the Super Terminal, and execute the command of "**ping** 192.168.0.0 **I** 1472 **f**" (the IP address may change according to the real condition), and check if there exists packet loss.

Simultaneously press **Ctrl** and **C** to exit the ping command.

Step 2 Verify the frame rate is real-time frame rate.

Go to Menu>Camera>Encoding Parameters, and set the Frame rate to Full Frame.

Step 3 Check if the fault is solved by the above steps.

If it is solved, finish the process.

If not, please contact the engineer from our company to do the further process.

- Live view stuck when video output remotely via the Internet Explorer or platform software. Possible Reasons:
- Poor network between device and IP camera, and there exists packet loss during the transmission.
- Poor network between device and PC, and there exists packet loss during the transmission.
- The performances of hardware are not good enough, including CPU, memory, etc..

Step 4 Verify the network between device and IP camera is connected.

- 1) When image is stuck, connect the RS-232 ports on PC and the rear panel of device with the RS-232 cable.
- 2) Open the Super Terminal, and execute the command of "**ping** *192.168.0.0* –**I 1472** –**f**" (the IP address may change according to the real condition), and check if there exists packet loss.

Simultaneously press **Ctrl** and **C** to exit the ping command.

Step 5 Verify the network between device and PC is connected.

- 1) Open the cmd window in the Start menu, or you can press "windows+R" shortcut key to open it.
- 2) Use the ping command to send large packet to the device, execute the command of "ping 192.168.0.0 –l 1472 –f" (the IP address may change according to the real condition), and check if there exists packet loss.

Simultaneously press Ctrl and C to exit the ping command.

Step 6 Verify the hardware of the PC is good enough.

Simultaneously press **Ctrl**, **Alt** and **Delete** to enter the windows task management interface, as shown in the following figure.

🜉 Windows Task	Manager			Ж					
File Options V	iew Help								
Applications Proc	esses Services Pe	rformance Netw	orking Users	1					
CPU Usage	CPU Usage His	tory	_						
35 %	front i		NLA						
Memory Physical Memory Usage History									
1.19 GB									
-Physical Memor	y (MB)	System		-					
Total	3060	Handles	21916	5					
Cached	1324	Threads	110	7					
Available	1837	Processes	73	3					
Free	547	Up Time Commit (MB)	0:11:57:4: 1463 / 6119	- 1					
-Kernel Memory	(MB)			- 1					
Paged	185								
Nonpaged	78	Resource Monitor							
Processes: 73	CPU Usage: 35%	Physical Memory: 39%							

Figure 20-1 Windows task management interface

- Select the "Performance" tab; check the status of the CPU and Memory.
- If the resource is not enough, please end some unnecessary processes.

Step 7 Check if the fault is solved by the above steps.

If it is solved, finish the process.

If not, please contact the engineer from our company to do the further process.

• When using the device to get the live view audio, there is no sound or there is too much noise, or the volume is too low.

Possible Reasons:

- Cable between the pickup and IP camera is not connected well; impedance mismatches or incompatible.
- The stream type is not set as "Video & Audio".
- The encoding standard is not supported with device.
- Step 1 Verify the cable between the pickup and IP camera is connected well; impedance matches and compatible.

Log in the IP camera directly, and turn the audio on, check if the sound is normal. If not, please contact the manufacturer of the IP camera.

Step 2 Verify the setting parameters are correct.

Go to Menu>Camera>Encoding Parameters, and set the Stream Type as "Audio & Video".

Step 3 Verify the audio encoding standard of the IP camera is supported by the device.

The device supports G722.1 and G711 standards, and if the encoding parameter of the input audio is not one of the previous two standards, you can log in the IP camera to configure it to the supported standard.

Step 4 Check if the fault is solved by the above steps.

If it is solved, finish the process.

If not, please contact the engineer from our company to do the further process.

• The image gets stuck when device is playing back by single or multi-channel.

Possible Reasons:

- Poor network between device and IP camera, and there exists packet loss during the transmission.
- The frame rate is not the real-time frame rate.
- The device supports up to 16-channel synchronize playback at the resolution of 4CIF, if you want a 16-channel synchronize playback at the resolution of 720p, the frame extracting may occur, which leads to a slight stuck.

Step 5 Verify the network between device and IP camera is connected.

- 1) When image is stuck, connect the RS-232 ports on PC and the rear panel of device with the RS-232 cable.
- 2) Open the Super Terminal, and execute the command of "**ping** *192.168.0.0* –**I 1472** –**f**" (the IP address may change according to the real condition), and check if there exists packet loss.

Simultaneously press the **Ctrl** and **C** to exit the ping command.

Step 6 Verify the frame rate is real-time frame rate.

Select "Menu > Record > Parameters > Record", and set the Frame Rate to "Full Frame".

Step 7 Verify the hardware can afford the playback.

Reduce the channel number of playback.

Go to Menu>Camera>Encoding Parameters, and set the resolution and bitrate to a lower level.

Step 8 Reduce the number of local playback channel.

Go to Menu>Playback, and uncheck the checkbox of unnecessary channels.

Step 9 Check if the fault is solved by the above steps.

If it is solved, finish the process.

If not, please contact the engineer from our company to do the further process.

• No record file found in the device local HDD, and prompt "No record file found".

Possible Reasons:

- The time setting of system is incorrect.
- The search condition is incorrect.
- The HDD is error or not detected.
- Step 1 Verify the system time setting is correct.

Go to Menu>System>General, and verify the "Device Time" is correct.

Step 2 Verify the search condition is correct.

Go to playback interface, and verify the channel and time are correct.

Step 3 Verify the HDD status is normal.

Go to Menu>Storage>Storage Device to view the HDD status, and verify the HDD is detected and can be read and written normally.

Step 4 Check if the fault is solved by the above steps.

If it is solved, finish the process.

If not, please contact the engineer from our company to do the further process.

20.3 Summary of Changes

Version 4.1.50

Added:

- Playback by video synopsis.
- Security questions configuration.
- Support event detection modes of thermal network cameras.
- Custom window-division live view layout configuration.
- System services: I-VIEW-NOW UPNP Reporting, Control4
- Stream encryption

Version 4.1.10

• Optimize the GUI information design.

Version 4.1.0

- Complete new GUI information design for more fluent and visual user experience.
- Files management and playback.
- HDD health monitoring for Seagate HDD.

Version 3.4.92

Added:

• Easy network access by PT cloud.

Deleted:

• Delete two DDNS types: IP sever and HiDDNS. Version 3.4.91

Added:

- Support long distance (max.: 250-300 m) network transmission via PoE for /P models.
- Add prompt of using enterprise-level HDD to create array on GUI.

Version 3.4.90

Added:

• Reset the admin password by exporting/importing the GUID file.

- Device support 3D positioning in live view.
- Configurable main stream and sub-stream for the live view.
- All-day continuous recording is configured by factory default.

Updated:

- Optimize the playback interface and add the configurable motion detection area for smart playback.
- Up to 2048 LRP lists supported in vehicle detection.

Version 3.4.80

Added:

- Device is accessible by the thermal network camera, and supports the advanced search for fire/ship/temperature/temperature difference detection triggered alarm and the recorded video files and pictures.
- Device supports the playback by main stream or sub stream.
- Remind user to remember the password after the device is activated.
- One-key alarm disarming for the local alarm input 1.

Updated:

- Optimize the playback by normal/smart interface.
- Admin Password changed to Password when adding the IP camera.

Deleted:

• Delete four VCA detection types: people gathering, fast movement, parking and loitering.

Version 3.4.70

Added:

• Add the POS function.

Version 3.4.6

Updated:

• Update the description of IR remote control operation.

Version 3.4.2

Added:

• Support the display of IP camera's password on the IP camera management interface.

- Add the configuration and use of unlock pattern for fast login.
- Add the fisheye expansion view for the connected fisheye camera in the live view and playback.
- Add the scaling display (30min/1h/2h/6h/24h) of time bar in the playback mode.
- Add the thumbnails view and fast view during playback.

Updated:

- Optimize the playback interface.
- Update the digital zoom operation in image.

Version 3.3.9

Updated:

- Support H.265 video encoding format.
 Deleted:
- Delete the PPPoE settings.

Version 3.3.7

Added:

- Add the new models of LTN86xx and LTN89xx.
- Add the front panel and rear panel of the new models.
- Add the specifications of the new models.

Version 3.3.6

Added:

• Add front panel and rear panel of LTN89xx-R.

Updated:

• LTN89xx-R supports RAID6, capture, picture playback, eSATA HDD and eSATA backup, two self-adaptive 10M/100M/1000M network interfaces.

Version 3.3.4

Added:

- Add the new models of LTN86xx and LTN89xx.
- Add the support of Cloud P2P.