


## PTZ – Enabling Smart Tracking

On compatible PTZ, Smart tracking is disabled by default. You need to login to the actual PTZ and enable it see below screenshot.

1. Login to the IP camera via iexplorer (not edge)
2. Navigate to Configuration.
3. PTZ
4. Smart Tracking
5. Tick “Enable Smart Tracking”
6. Save

## Enabling PTZ Smart Tracking

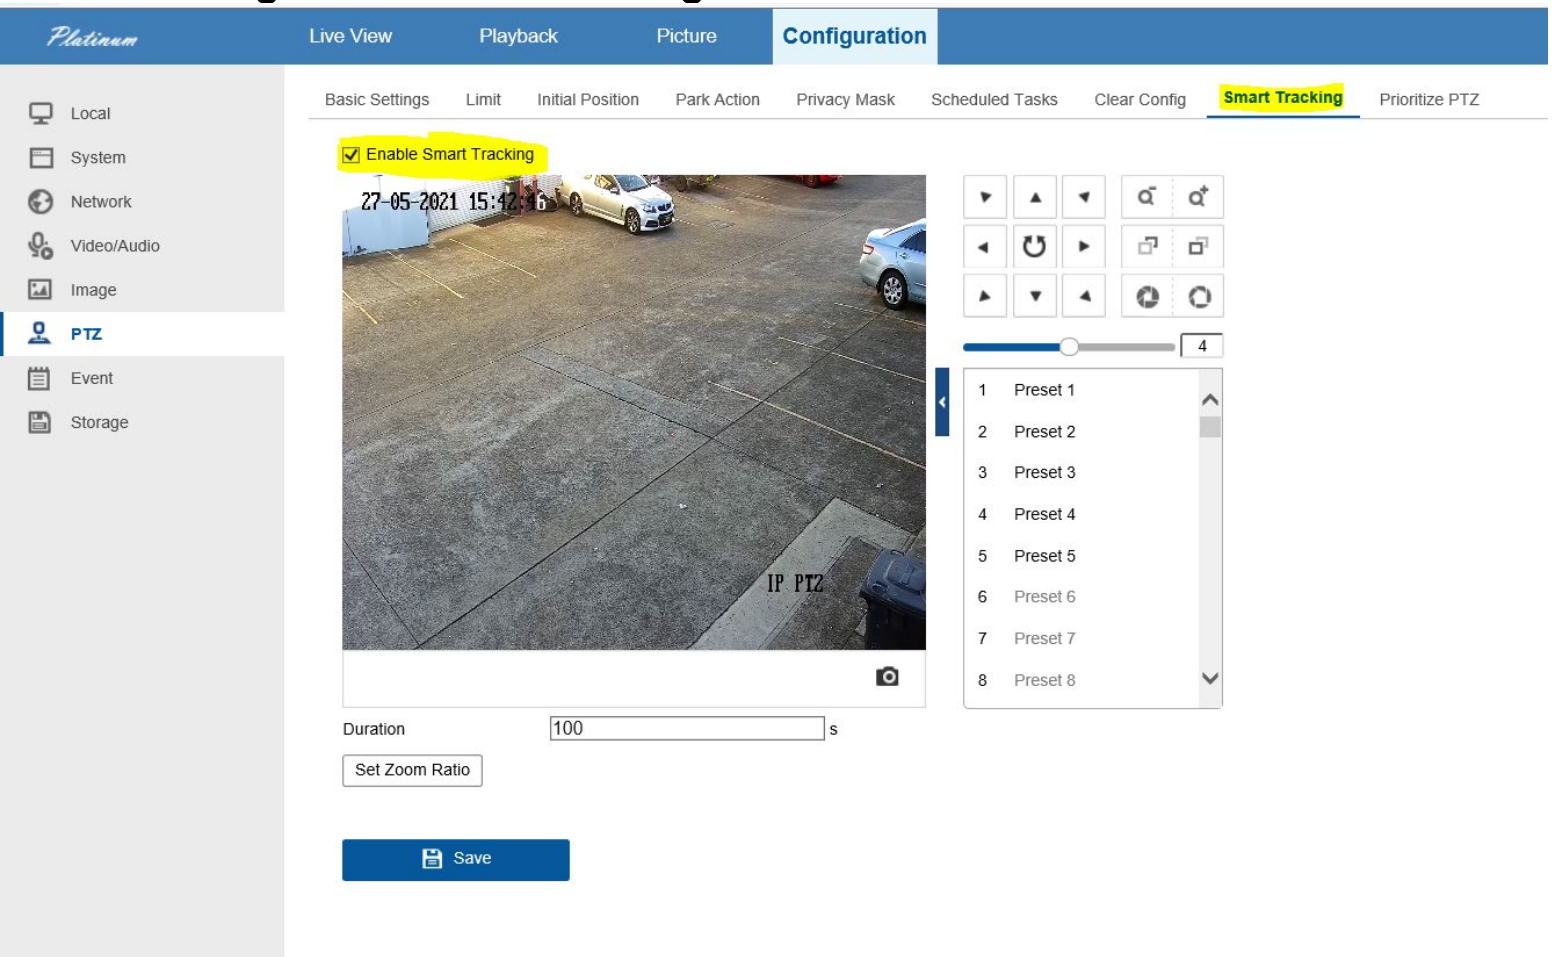

The screenshot displays the configuration interface for a PTZ camera. The top navigation bar includes 'Platinum', 'Live View', 'Playback', 'Picture', and 'Configuration'. The 'Configuration' tab is active, and the 'Smart Tracking' sub-tab is selected. A sidebar on the left lists various system settings: Local, System, Network, Video/Audio, Image, PTZ (highlighted), Event, and Storage. The main configuration area for 'Smart Tracking' includes a 'Basic Settings' sub-tab and a 'Limit' sub-tab. A checkbox labeled 'Enable Smart Tracking' is checked and highlighted in yellow. Below this is a live video feed showing a parking lot with a white car and a blue car. The video feed has a timestamp '27-05-2021 15:42' and 'IP PTZ' text. To the right of the video feed is a control panel with directional arrows, a zoom in/out icon, a refresh icon, a zoom slider set to '4', and a list of 8 presets. Below the video feed, there is a 'Duration' field set to '100' seconds and a 'Set Zoom Ratio' button. A 'Save' button is located at the bottom of the configuration area.